JVC

SERVICE MANUAL

FLAT COLOR TELEVISION

AV-25MT35/P, AV-25MT15/P, AV-25VA15/P

BASIC CHASSIS
CW2

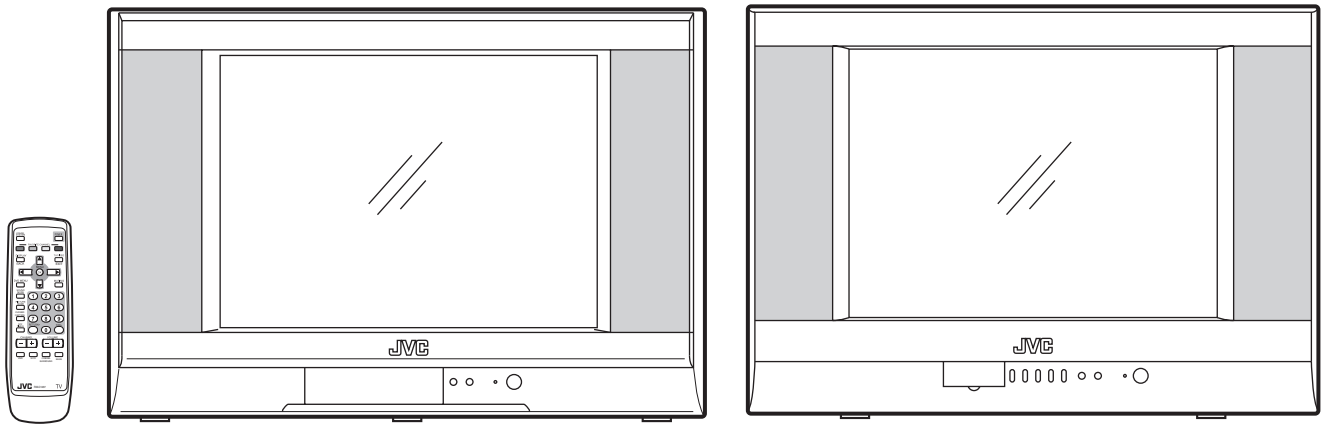

[AV-25MT35/P, AV-25MT15/P]

[AV-25VA15/P]

TABLE OF CONTENTS

1 PRECAUTION 1-3
2 SPECIFIC SERVICE INSTRUCTIONS 1-4
3 DISASSEMBLY 1-6
4 ADJUSTMENT 1-12
5 TROUBLESHOOTING 1-31

COPYRIGHT © 2005 Victor Company of Japan, Limited

No.YA275
2005/7

SPECIFICATION

Items		Contents		
		AV-25MT35/P	AV-25MT15/P	AV-25VA15/P
Dimensions (W × H × D)		72.8cm × 54.98cm × 47.65cm	72.8cm × 53.6cm × 47.65cm	72.8cm × 53.6cm × 48.15cm
Mass		34.4kg	32kg	
TV RF System		M		
Colour System	TV Mode	NTSC3.58 / NTSC4.43		
	Video Mode	PAL / SECAM / NTSC3.58 / NTSC4.43		
Stereo System		MTS		PB Stereo
Teletext system		Closed caption		
Receiving Frequency	VHF Low	55.25MHz ~ 127.25MHz (CH.2 ~ CH.B)		
	VHF High	133.25MHz ~ 361.25MHz (CH.C ~ CH.W + 11)		
	UHF	367.25MHz ~ 801.25MHz (CH.W + 12 ~ CH.69)		
Intermediate Frequency	VIF	38.0MHz		
	SIF	M: 33.5MHz (4.5MHz)		
Colour Sub Carrier Frequency		3.58MHz (NTSC)		
Aerial Input Terminal		75Ω unbalanced, coaxial		
Power Input		AC90V ~ AC260V, 50Hz / 60Hz		
Power Consumption		167W (Max.) / 109W (Avg.)	132W (Max.) / 92W (Avg.)	
Picture Tube		25-inch, aspect ratio 4:3, flat square face type, tinted		
Screen Size		Visible size : 59.6cm (Diagonal) / 47.8cm × 36.3cm (H × V)		
High Voltage		31kV±1.5kV (at zero beam current)		
Speaker		6.5cm × 13cm, Oval type × 2 13cm, round type × 1 (Bass blaster unit)	6.5cm × 13cm, Oval type × 2	
Audio Output		7W + 7W + 13W	7W + 7W	
Video / Audio Input (1/2/3)	S-Video [1]	Mini-DIN 4 pin × 1 Y: 1V(p-p), positive (negative sync provided), 75Ω C: 0.286V(p-p) (Burst signal), 75Ω		
	Video [1/2/3]	1V(p-p), negative sync, 75Ω, RCA pin jack × 3		
	Audio [1/2/3]	500mV(rms) (-4dBs), high impedance, RCA pin jack × 6		
	Component Video [2]	RCA pin jack × 3 Y:1V(p-p), positive (negative sync), 75Ω Cb/Cr:0.7V(p-p), 75Ω		
Video / Audio Output	Video	1V(p-p), 75Ω, RCA pin jack × 1		
	Audio	500mV(rms)(-4dBs), Low impedance (400Hz when modulated 100%), RCA pin jack × 2		
Headphone		3.5mm stereo mini jack × 1		
Remote Control Unit		RM-C1287-1H (AA/R06/UM-3 battery × 2)		

Design & specifications are subject to change without notice.

SECTION 1
PRECAUTION

1.1 SAFETY PRECAUTIONS

(1) The design of this product contains special hardware, many circuits and components specially for safety purposes. For continued protection, no changes should be made to the original design unless authorized in writing by the manufacturer. Replacement parts must be identical to those used in the original circuits. Service should be performed by qualified personnel only.

(2) Alterations of the design or circuitry of the products should not be made. Any design alterations or additions will void the manufacturer's warranty and will further relieve the manufacturer of responsibility for personal injury or property damage resulting therefrom.

(3) Many electrical and mechanical parts in the products have special safety-related characteristics. These characteristics are often not evident from visual inspection nor can the protection afforded by them necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in the parts list of Service manual. **Electrical components having such features are identified by shading on the schematics and by (⚠) on the parts list in Service manual**. The use of a substitute replacement which does not have the same safety characteristics as the recommended replacement part shown in the parts list of Service manual may cause shock, fire, or other hazards.

(4) **Don't short between the LIVE side ground and ISOLATED (NEUTRAL) side ground or EARTH side ground when repairing.**
Some model's power circuit is partly different in the GND. The difference of the GND is shown by the LIVE : (⊥) side GND, the ISOLATED (NEUTRAL) : (⏚) side GND and EARTH : (⏚) side GND.
Don't short between the LIVE side GND and ISOLATED (NEUTRAL) side GND or EARTH side GND and never measure the LIVE side GND and ISOLATED (NEUTRAL) side GND or EARTH side GND at the same time with a measuring apparatus (oscilloscope etc.). If above note will not be kept, a fuse or any parts will be broken.

(5) If any repair has been made to the chassis, it is recommended that the B1 setting should be checked or adjusted (See B1 POWER SUPPLY check).

(6) The high voltage applied to the picture tube must conform with that specified in Service manual. Excessive high voltage can cause an increase in X-Ray emission, arcing and possible component damage, therefore operation under excessive high voltage conditions should be kept to a minimum, or should be prevented. If severe arcing occurs, remove the AC power immediately and determine the cause by visual inspection (incorrect installation, cracked or melted high voltage harness, poor soldering, etc.). To maintain the proper minimum level of soft X-Ray emission, components in the high voltage circuitry including the picture tube must be the exact replacements or alternatives approved by the manufacturer of the complete product.

(7) Do not check high voltage by drawing an arc. Use a high voltage meter or a high voltage probe with a VTVM. Discharge the picture tube before attempting meter connection, by connecting a clip lead to the ground frame and connecting the other end of the lead through a 10kΩ 2W resistor to the anode button.

(8) When service is required, observe the original lead dress. Extra precaution should be given to assure correct lead dress in the high voltage circuit area. Where a short circuit has occurred, those components that indicate evidence of overheating should be replaced. Always use the manufacturer's replacement components.

(9) **Isolation Check (Safety for Electrical Shock Hazard)**
After re-assembling the product, always perform an isolation check on the exposed metal parts of the cabinet (antenna terminals, video/audio input and output terminals, Control knobs, metal cabinet, screw heads, earphone jack, control shafts, etc.) to be sure the product is safe to operate without danger of electrical shock.

a) **Dielectric Strength Test**
The isolation between the AC primary circuit and all metal parts exposed to the user, particularly any exposed metal part having a return path to the chassis should withstand a voltage of 3000V AC (r.m.s.) for a period of one second. (. . . Withstand a voltage of 1100V AC (r.m.s.) to an appliance rated up to 120V, and 3000V AC (r.m.s.) to an appliance rated 200V or more, for a period of one second.)
This method of test requires a test equipment not generally found in the service trade.

b) **Leakage Current Check**
Plug the AC line cord directly into the AC outlet (do not use a line isolation transformer during this check.). Using a "Leakage Current Tester", measure the leakage current from each exposed metal part of the cabinet, particularly any exposed metal part having a return path to the chassis, to a known good earth ground (water pipe, etc.). Any leakage current must not exceed 0.5mA AC (r.m.s.).
However, in tropical area, this must not exceed 0.2mA AC (r.m.s.).

Alternate Check Method
Plug the AC line cord directly into the AC outlet (do not use a line isolation transformer during this check.). Use an AC voltmeter having 1000Ω per volt or more sensitivity in the following manner. Connect a 1500Ω 10W resistor paralleled by a 0.15μF AC-type capacitor between an exposed metal part and a known good earth ground (water pipe, etc.). Measure the AC voltage across the resistor with the AC voltmeter. Move the resistor connection to each exposed metal part, particularly any exposed metal part having a return path to the chassis, and measure the AC voltage across the resistor. Now, reverse the plug in the AC outlet and repeat each measurement. Any voltage measured must not exceed 0.75V AC (r.m.s.). This corresponds to 0.5mA AC (r.m.s.).
However, in tropical area, this must not exceed 0.3V AC (r.m.s.). This corresponds to 0.2mA AC (r.m.s.).

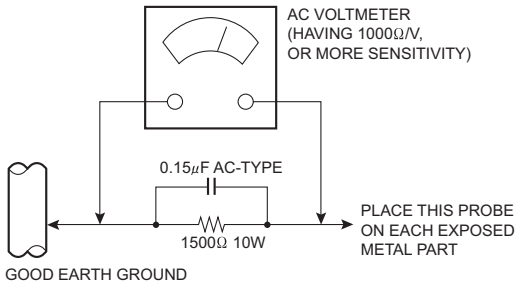

SECTION 2
SPECIFIC SERVICE INSTRUCTIONS

2.1 FEATURES

- New chassis design enables use of an interactive on-screen control.
- Pure flat CRT produces fine textured picture in every detail.
- Wide range voltage (110V ~ 240V) for AC power input.
- With AUDIO/VIDEO/S-VIDEO/COMPONENT input terminals.
- I^2C bus control utilizes single chip ICs.
- By means of AUTO PROGRAM, the TV stations can be selected automatically and the TV channels can also be rearranged automatically.
- Built-in DIGITAL ECO MODE (ECONOMY, ECOLOGY).
  In accordance with the brightness in a room, the brightness and/or contrast of the picture can be adjusted automatically to make the optimum picture which is easy on the eye.
- Built-in OFF TIMER & RETURN +.

2.2 MAIN DIFFERENCE LIST

⚠	Items	AV-25MT35/P	AV-25MT15/P	AV-25VA15/P
	STEREO SYSTEM	MTS	←	PB Stereo
	SUPER BASS	YES	NO	←

2.3 MAIN CPU [MAIN PWB : IC701] PIN FUNCTION

Pin No.	Pin name	I/O	Function
1	VssP2	-	GND
2	VssC4	-	GND
3	V1.8C4	I	1.8V (Digital)
4	V3.3A3	I	3.3V
5	VrefP_Sdac	I	3.3V (Positive)
6	VrefN_Sdac	-	GND
7	VrefP_Sdac	I	3.3V (Negative)
8	VrefN_Sdac	-	GND
9	VrefP_Sdac	I	3.3V (Positive)
10	XtalIn	I	24.576MHz for system clock
11	XtalOut	O	24.576MHz for system clock
12	VssA1	-	GND
13	NECK	I	V-guard input/ I/O switch
14	CONT	I	1.8V regulator control
15	V5P1	I	+5V
16	Ph2	-	Phase-2 filter
17	Ph1	-	Phase-1 filter
18	Gnd1	-	GND
19	SecPll	-	SECAM PLL decoupling
20	Dec8G	-	Bandgap decoupling
21	EW	O	East-West drive output
22	VDRB-	O	Vertical drive B output
23	VDRA+	O	Vertical drive A output
24	Vif1	I	Video IF input 1
25	Vif2	I	Video IF input 2
26	Vsc	-	Vertical sawtooth capacitor
27	Iref	I	Reference current input
28	GndIF	-	GND
29	Sif1	I	Sound IF input 1
30	Sif2	I	Sound IF input 2
31	AGC	O	Tuner AGC output
32	EHT	I	EHT/overvoltage protection input
33	Ssif/RefIn/Avl/RefOut	O	Automatic Volume Levelling/ sound IF input / subcarrier reference output / external reference signal input for I signalmixer for DVB operation
34	L3	I	Audio-L3 input (left signal)
35	R3	I	Audio-R3 input (right signal)
36	L-OUT	O	Audio L output
37	R-OUT	O	Audio R output
38	DecsDem	-	Decoupling sound demodulator
39	QssO/AmO/AudeEm	O	QSS intercarrier output / AM output / deemphasis / (front-end audio out)
40	Gnd2	-	GND
41	PllIf	-	IF-PLL loop filter
42	SifAgc	-	AGC sound IF
43	IfVo/FmRo/DvbO	O	Not used
44	NC	O	Not used
45	V8AudioSwitches	I	8V
46	AgcSsif	-	AGC capacitor second sound IF
47	V5P2	I	5V
48	V-OUT	O	Video output
49	L1	I	Audio-L1 input
50	R1	I	Audio-R1 input
51	V3	I	Video V3 input
52	C4	I	Not used
53	Audio2InL	I	Not used
54	Audio2InR	I	Not used
55	V2/Y	I	Video V2 input
56	L2	I	Audio L2 input (Left signal)
57	R2	I	Audio R2 input (right signal)
58	Y3/Cvbs	I	S-Video Y1 input
59	C1	I	S-Video C1 input
60	AudioLsL	O	Audio L output for audio power amplifier
61	AudioLsR	O	Audio R output for audio power amplifier
62	HP-L	O	Not used
63	HP-R	O	Not used
64	CVBSO/PIP	O	CVBS / PIP output
65	SVM	O	Not used
66	FbiSo	I	Flyback input/sandcastle output
67	Hout	O	Horizontal output
68	VssComb	-	GND
69	V5Comb	I	5V
70	Vin/R2/Pr	I	PIP R input
71	Uin/B2/Pb	I	PIP B input
72	Yin/G2/Y	I	PIP G input
73	Ysync	I	Not used
74	Yout	O	Not used
75	Uout/INSSW2	I	YUV insertion input
76	NC	O	Not used
77	INSSW3	I	YUV insertion input
78	R3/Pr	I	Component PR input (Video-2)
79	G3/Y	I	Component Y input (Video-2)
80	B3/Pb	I	Component PB input (Video-2)
81	Gnd3	-	GND
82	V5P3	I	5V
83	BCL	I	Beam current limiter input
84	BLKIN	I	Black current input
85	Rout	O	R output
86	Gout	O	G output
87	Bout	O	B output
88	V3.3A1	I	3.3V
89	RefAdN	-	GND
90	V3.3RefAdP	I	3.3V (Positive)
91	RefAd	I	3.3/2V
92	GndA	-	GND
93	V1.8A	I	1.8V
94	V3.3A2	I	3.3V
95	VssADC	-	GND
96	V1.8ADC	I	1.8V
97	REMOTE	I	Remote control
98	PW_LED	I	POWER LED control
99	PW_LED	I	POWER LED control
100	V1.8C2	I	1.8V
101	VssC2	-	GND
102	TIMER	-	Not used
103	TIMER	-	Not used
104	VER_PROTECT	O	X-ray protect
105	S_REDUCE	O	Sound control
106	P00/I2SDI1	O	Not used
107	POWER	O	SUB POWER control
108	SCL1	I	I2C bus clock
109	SDA1	I/O	I2C bus data
110	V3.3P	I	3.3V
111	ROTATION	O	Rotation
112	3.58/OTHER	O	NTSC 3.58 detection
113	A_MUTE	O	Audio muting
114	4.5/OTHER	O	NTSC 4.43 detection
115	PROT	I	Protect
116	ECO_IN	I	ECO sensor level detection
117	V1.8C1	I	1.8V (Digital)
118	DecV1V8	I	1.8V
119	KEY_IN	I	Key scan data
120	VDO-DET	I	Video DET input
121	VSSC1+P1	-	Digital GND
122	S_V_DET	I	S-Video DET input
123	P25/PWM4	O	GTVA_reset
124	V1.8C3	I	1.8V (Digital)
125	VssC3	-	GND
126	P12/Int2	I	External interrupt
127	SDA0	I/O	I2C bus data (for memory)
128	SCL0	I	I2C bus clock (for memory)

SECTION 3
DISASSEMBLY

3.1 DISASSEMBLY PROCEDURE

3.1.1 REMOVING THE TWIN PORT BASS BLASTER UNIT [AV-25MT35/P]

- Unplug the power supply cord.
  (1) Disconnect the TWIN PORT BASS BLASTER UNIT's cord from the rear of the TV set.
  (2) Remove the TWIN PORT BASS BLASTER UNIT by pulling it upwards.

NOTE:

After removing the TWIN PORT BASS BLASTER UNIT, proceed to the following procedure.

3.1.2 REMOVING THE REAR COVER

- Unplug the power cord.
  (1) Remove the 11 screws **[A]** and 4 screws **[B]** as shown in Fig.1.
  (2) Withdraw the REAR COVER toward you.

CAUTION:

When reinstalling the rear cover, carefully push it inward after inserting the MAIN PWB into the REAR COVER groove.

3.1.3 REMOVING THE MAIN PW BOARD

- Remove the REAR COVER.
  (1) Slightly raise the both sides of the MAIN PWB by hand.
  (2) Withdraw the MAIN PWB backward.
  (If necessary, take off the wire clamp and connectors, etc.)

3.1.4 REMOVING THE SPEAKER

- Remove the REAR COVER.
  (1) Remove the 2 screws **[C]** as shown in Fig.1.
  (2) Follow the same steps when removing the other hand SPEAKER.

3.1.5 CHECKING THE MAIN PW BOARD

- To check the back side of the MAIN PWB.
  (1) Pull out the MAIN PWB. (Refer to REMOVING THE MAIN PW BOARD).
  (2) Erect the MAIN PWB vertically so that you can easily check its back side.

CAUTIONS:

- Before turning on power, make sure that the CRT earth wire and other connectors are properly connected.
- When repairing, connect the DEG. COIL to the DEG. connector on the MAIN PWB.
- When repairing, connect the DEG. COIL to the DEG. connector on the MAIN PWB.

3.1.6 WIRE CLAMPING AND CABLE TYING

(1) Be sure to clamp the wire.
(2) Never remove the cable tie used for tying the wires together.
Should it be inadvertently removed, be sure to tie the wires with a new cable tie.

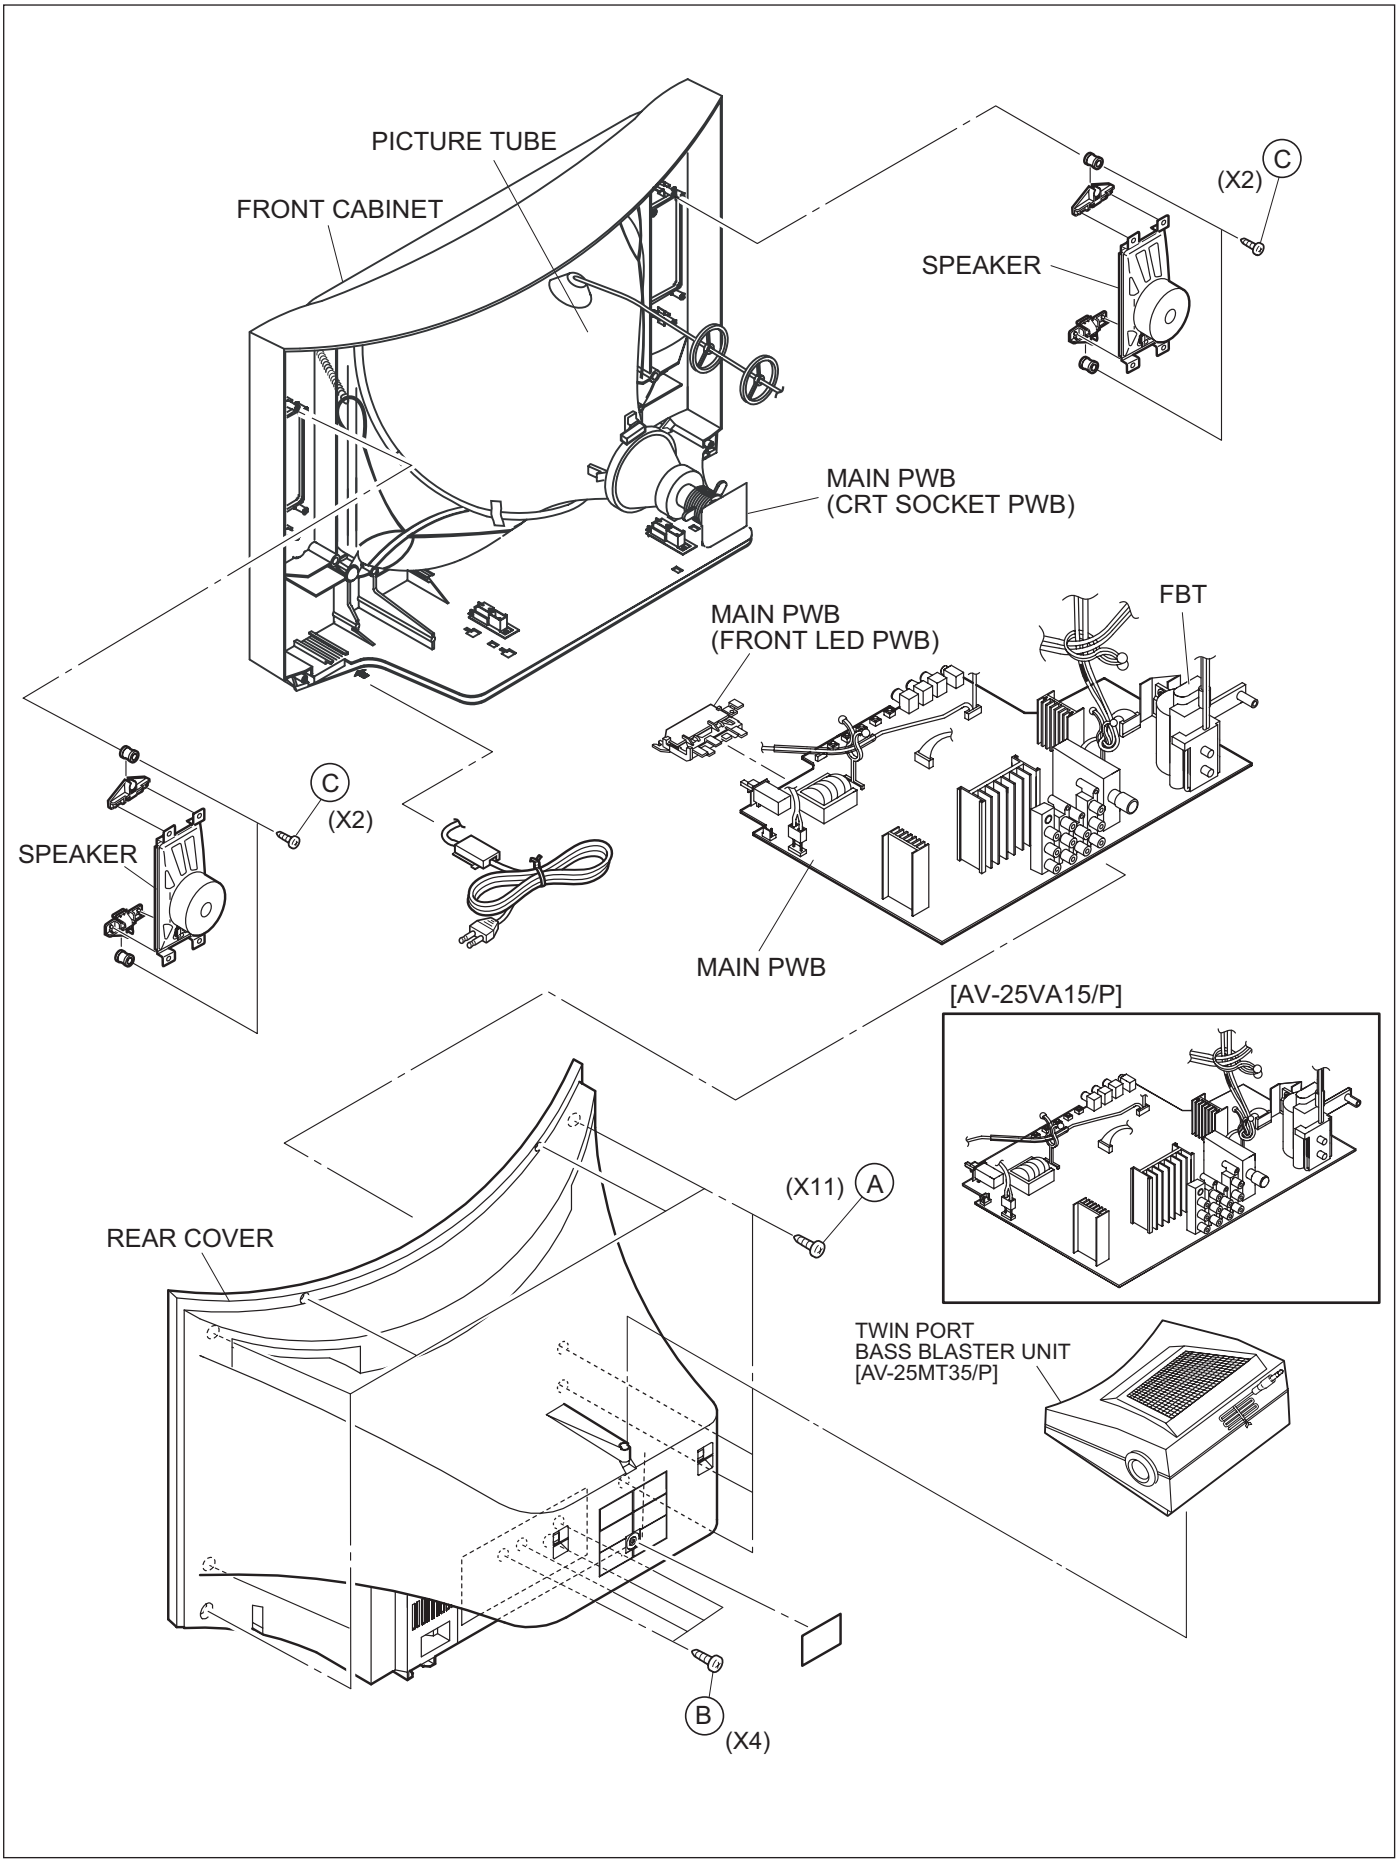
PICTURE TUBE
FRONT CABINET
(X2)
C
SPEAKER
MAIN PWB
(CRT SOCKET PWB)
MAIN PWB
(FRONT LED PWB)
FBT
C
(X2)
SPEAKER
MAIN PWB
[AV-25VA15/P]
(X11)
A
REAR COVER
TWIN PORT
BASS BLASTER UNIT
[AV-25MT35/P]
B
(X4)

Fig.1

3.2 REPLACEMENT OF MEMORY IC

3.2.1 MEMORY IC

This TV uses the following memory IC.

Memory IC: IC702 on MAIN PWB

The memory IC memorizes data for correctly operating the video and deflection circuits. When replacing the memory IC, be sure to use the same type IC written with the initial values of data. In other words, use the specific IC listed in "PRINTED WIRING BOARD PARTS LIST". For its mounting location, refer to "ADJUSTMENT LOCATIONS".

3.2.2 PROCEDURE FOR REPLACING MEMORY IC

1. Power off

Switch the power off and unplug the power cord from the wall outlet.

2. Replacing the memory IC

Replace the memory IC with new one. Be sure to use the memory IC written with the initial data values.

3. Power on

Plug the power cord into the wall outlet and switch the power on.

4. Check and setting of SYSTEM CONSTANT SET:

(1) Press the [DISPLAY] key and the [PICTURE MODE] key on the remote control unit simultaneously.
The SERVICE MENU screen will be displayed.(See Fig.1.)

(2) In the SERVICE MENU, press the [DISPLAY] key and [PICTURE MODE] key simultaneously. Then, the SYSTEM CONSTANT SET screen will be displayed.(See Fig.2.)

(3) Check whether the setting values of the SYSTEM CONSTANT SET are the same as those indicated in Table 1.
If the value is different, select the setting item with the MENU [▲] / [▼] key, and set the correct value with the MENU [◀] / [▶] key.

(4) Press the [DISPLAY] key twice to return to the normal screen.

5. Receive channel setting

Refer to the **OPERATING INSTRUCTIONS** and set the receive channels (channels preset).

6. User setting

Check the user setting values in Table 2 and Table 3. If setting value is different, set the correct value.
For setting, refer to the **OPERATING INSTRUCTIONS**.

7. Setting of SERVICE MENU

Verify the setting for each setting item in the SERVICE MENU.(See Table 4.) If readjustment is necessary, perform adjustment referring to "ADJUSTMENTS PROCEDURE".

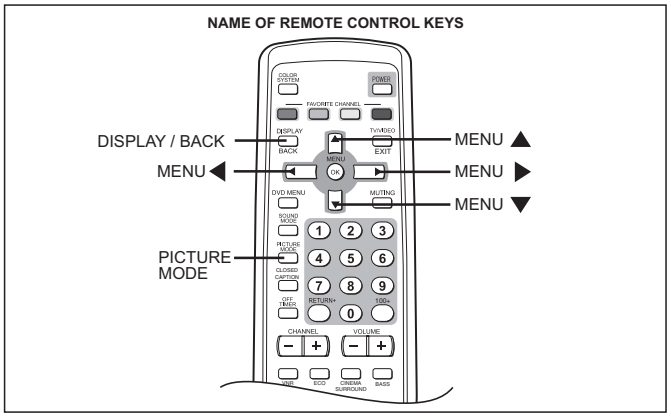

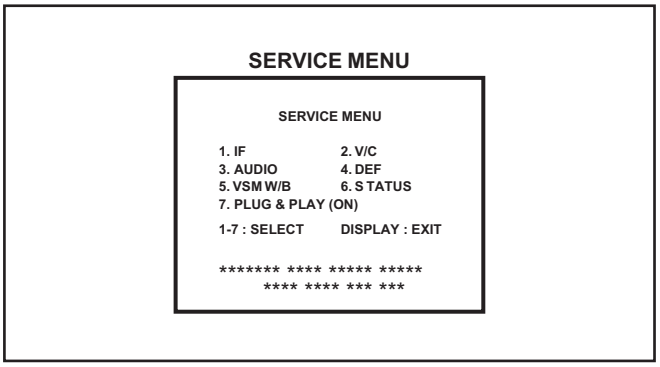

Fig.1

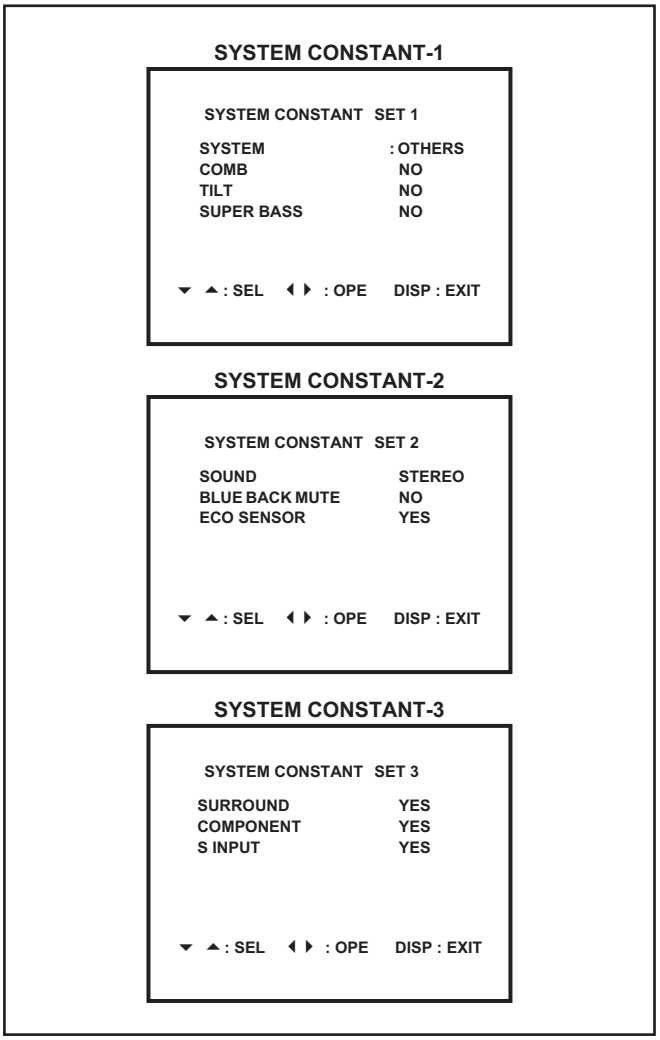
SYSTEM CONSTANT-1
SYSTEM CONSTANT SET 1
SYSTEM : OTHERS
COMB NO
TILT NO
SUPER BASS NO
▼ ▲ : SEL ◀ ▶ : OPE DISP : EXIT
SYSTEM CONSTANT-2
SYSTEM CONSTANT SET 2
SOUND STEREO
BLUE BACK MUTE NO
ECO SENSOR YES
▼ ▲ : SEL ◀ ▶ : OPE DISP : EXIT
SYSTEM CONSTANT-3
SYSTEM CONSTANT SET 3
SURROUND YES
COMPONENT YES
S INPUT YES
▼ ▲ : SEL ◀ ▶ : OPE DISP : EXIT

Fig.2

3.2.3 FACTORY SETTING VALUE

■ SETTING OF SYSTEM CONSTANT SET

Setting item	Setting content	Setting value		
		AV-25MT35/P	AV-25MT15/P	AV-25VA15/P
SYSTEM	TAIWAN ↔ OTHERS	OTHERS	←	←
COMB	YES ↔ NO	NO	←	←
TILT	YES ↔ NO	NO	←	←
SUPER BASS	YES ↔ NO	YES	NO	←
SOUND	STEREO ↔ PB ↔ MONO	STEREO	←	PB
BLUE BACK MUTE	YES ↔ NO	NO	←	←
ECO SENSOR	YES ↔ NO	YES	←	←
SURROUND	YES ↔ NO	YES	←	←
COMPONENT	YES ↔ NO	YES	←	←
S INPUT	YES ↔ NO	YES	←	←

Table 1

■ **SETTING OF BASIC FUNCTIONS**

Setting item	Setting value
POWER	Off
SUB POWER	On
VOLUME	15
INPUT	TV
COLOR SYSTEM	NTSC 3.58
SOUND SYSTEM	M
PICTURE MODE (VSM)	BRIGHT
CINEMA SURROUND (RF)	OFF
OFF TIMER	OFF
CHANNEL POSITION	CH02

Table 2

■ **SETTING OF MENU SCREEN**

Setting item	Setting value
VNR	AUTO
COMPRESS (16:9)	OFF
CHILD LOCK	OFF
BLUE BACK	ON
VIDEO-2 SET	COMPONENT
AUTO PROGRAM	Refer to OPERATING INSTRUCTIONS
EDIT / MANUAL	Refer to OPERATING INSTRUCTIONS
WHITE BALANCE (RF)	COOL
BALANCE	Center
SUPER BASS	ON [AV-25MT35/P]
SOUND MODE (RF)	MUSIC
AI VOLUME	OFF
FAVORITE CH RED	CH02
FAVORITE CH GREEN	CH03
FAVORITE CH YELLOW	CH04
FAVORITE CH BLUE	CH05
AI ECO SENSOR	OFF
AUTO SIGNAL DETECT	ON
DVD PICTURE MODE	OFF
TINT COLOR	Center
WHITE BALANCE (DVD)	COOL
SOUND MODE (DVD)	MUSIC
CINEMA SURROUND (DVD)	OFF

Table 3

■ **SERVICE MENU SETTING ITEMS**

Setting item	Setting value
1. IF	1. VCO 2. DELAY POINT
2. V/C	1. SCREEN 2. CUTOFF(B/G) 3. WDR(R/G/B) 4. BRIGHT(TV/VDO 1/2/3) 5. CONT(TV/VDO 1/2/3/TV 16:9/VDO 16:9) 6. COLOUR(TV/VDO1/2/3/DVD) 7. TINT(TV/VDO 1/2/3) 8. SHARP [Do not adjust] 9. Y DELAY [Do not adjust] 10. TINT DVD [Do not adjust] 11. AMP T. SHARP
3. AUDIO **[Do not adjust]**	1. DCXO ADJ 2. NICAM lower ERRLIM 3. NICAM upper ERRLIM 4. A2 ID THR 5. MENU EQUALIZER
4. DEF	1. V-SHIFT 2. V-SLOPE 3. V-SIZE 4. H-CENT 5. H-SIZE 6. TRAPEZ 7. EW-PIN 8. COR-UP 9. COR-LO 10. ANGLE 11. BOW 12. V-S.CR 13. V-LIN 14. V-ZOOM 15. V-SCROLL
5. VSM W/B **(BRIGHT/STANDARD/SOFT)** **(COOL/WARM/NORMAL)**	1. BRIGHT 2. CONT 3. COLOUR 4. SHARP 5. HUE 1. R DRIVE 2. G DRIVE 3. B DRIVE
6. STATUS **[Display only]**	
7. PLUG & PLAY(ON) **[Display only]**	

Table 4

3.3 REPLACEMENT OF CHIP COMPONENT

3.3.1 CAUTIONS

(1) Avoid heating for more than 3 seconds.
(2) Do not rub the electrodes and the resist parts of the pattern.
(3) When removing a chip part, melt the solder adequately.
(4) Do not reuse a chip part after removing it.

3.3.2 SOLDERING IRON

(1) Use a high insulation soldering iron with a thin pointed end of it.
(2) A 30w soldering iron is recommended for easily removing parts.

3.3.3 REPLACEMENT STEPS

1. How to remove Chip parts

[Resistors, capacitors, etc.]

(1) As shown in the figure, push the part with tweezers and alternately melt the solder at each end.

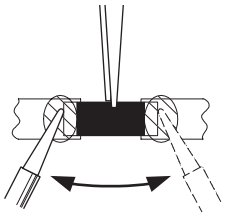

(2) Shift with the tweezers and remove the chip part.

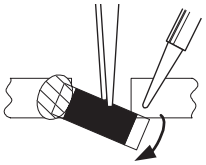

[Transistors, diodes, variable resistors, etc.]

(1) Apply extra solder to each lead.

(2) As shown in the figure, push the part with tweezers and alternately melt the solder at each lead. Shift and remove the chip part.

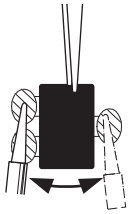

NOTE :

After removing the part, remove remaining solder from the pattern.

2. How to install Chip parts

[Resistors, capacitors, etc.]

(1) Apply solder to the pattern as indicated in the figure.

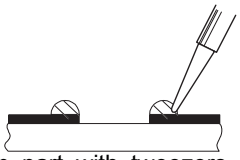

(2) Grasp the chip part with tweezers and place it on the solder. Then heat and melt the solder at both ends of the chip part.

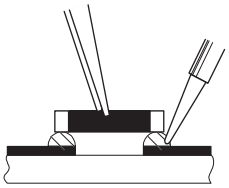

[Transistors, diodes, variable resistors, etc.]

(1) Apply solder to the pattern as indicated in the figure.
(2) Grasp the chip part with tweezers and place it on the solder.
(3) First solder lead **A** as indicated in the figure.

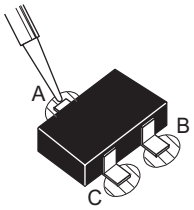

(4) Then solder leads **B** and **C**.

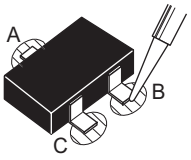

SECTION 4
ADJUSTMENT

4.1 ADJUSTMENT PREPARATION

(1) **You can make the necessary adjustments for this unit with either the remote control unit or with the adjustment equipment and parts as given below.**
(2) **Adjustment with the remote control unit is made on the basis of the initial setting values, however, the new setting values used for setting the screen to its optimum condition may differ from the initial settings.**
(3) Make sure that AC power is turned on correctly.
(4) Turn on the power for the set and test equipment before use, and start the adjustment procedures after waiting at least 30 minutes.
(5) Unless otherwise specified, prepare the most suitable reception or input signal for adjustment.
(6) Never touch any adjustment parts, which are not specified in the list for this variable resistors, transformers, trimmer capacitors, etc.

4.2 PRESETTING BEFORE ADJUSTMENT

Unless otherwise specified in the adjustment instructions, preset the following functions with the remote control unit.

■ **User mode setting position**

Setting item	Setting value
PICTURE MODE (VSM)	BRIGHT
VNR	OFF
AI ECO SENSOR	OFF
BALANCE	Center
CINEMA SURROUND (RF)	OFF
COMPRESS (16:9)	OFF

4.3 MEASURING INSTRUMENT AND FIXTURES

(1) DC voltmeter (or Digital voltmeter)
(2) Oscilloscope
(3) Signal generator (Pattern generator) [PAL/SECAM/NTSC]
(4) Remote control unit

4.4 ADJUSTMENT ITEMS

■ B1 VOLTAGE
■ FOCUS ADJUSTMENT
■ IF CIRCUIT ADJUSTMENTS
• IF VCO adjustment
• DELAY POINT (AGC TAKE-OVER) adjustment
■ VIDEO CIRCUIT ADJUSTMENTS
• WHITE BALANCE (Low light) adjustment
• WHITE BALANCE (High light) adjustment
• SUB BRIGHT adjustment
• SUB CONTRAST adjustment
• SUB COLOUR 1 adjustment
• SUB COLOUR 2 adjustment
• SUB TINT 1 adjustment
• SUB TINT 2 adjustment
■ AUDIO SETTING
■ DEFLECTION CIRCUIT ADJUSTMENTS
• V.SLOPE adjustment
• V.POSITION adjustment
• V.HEIGHT adjustment
• H.POSITION adjustment
• H.WIDTH adjustment
• SIDE PIN adjustment
• TRAPEZIUM adjustment
• V. LINEARITY adjustment
• V.S-CURVE adjustment
• CORNER adjustment
• H. PARALLEL adjustment
• H.BOW adjustment
■ VSM PRESET SETTING
■ PURITY AND CONVERGENCE ADJUSTMENTS
• PURITY adjustment
• STATIC CONVERGENCE adjustment
• DYNAMIC CONVERGENCE adjustment

4.5 ADJUSTMENT LOCATIONS

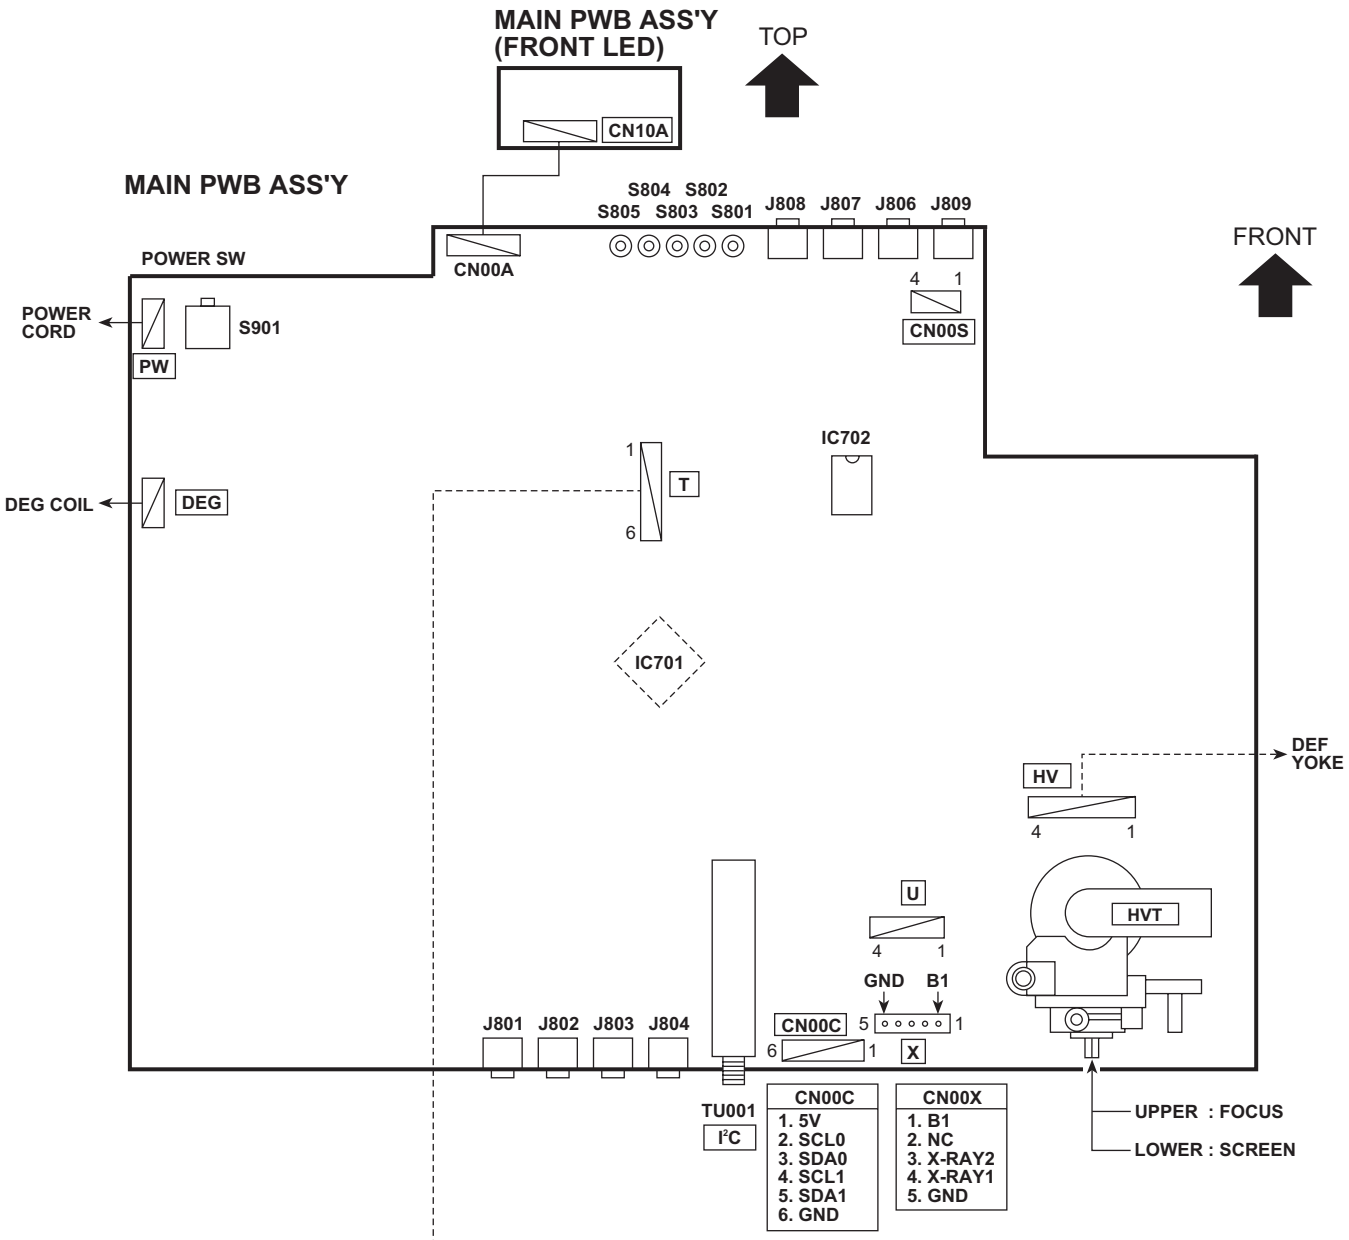

4.6 BASIC OPERATION IN SERVICE MENU

Operate the SERVICE MENU with the remote control unit.

4.6.1 SERVICE MENU ITEMS

With the SERVICE MENU, various settings (adjustments) can be made, and they are broadly classified in the following items of settings:

1. IF	For entering/adjusting the setting values (adjustment values) of the IF circuit.
2. V/C	For entering/adjusting the setting values (adjustment values) of the VIDEO circuit.
3. AUDIO	For entering/adjusting the setting values (adjustment values) of the AUDIO circuit.
4. DEF	For entering/adjusting the setting values (adjustment values) of the DEFLECTION circuit.
5. VSM W/B	For setting the values of STANDARD, SOFT, BRIGHT and COOL, NORMAL, WARM.
6. STATUS	This is not used for service.
7. PLUG & PLAY (ON)	This is not used for service.

4.6.2 BASIC OPERATION IN SERVICE MENU

1. HOW TO ENTER SERVICE MENU

Press the [DISPLAY] key and the [PICTURE MODE] key on the remote control unit simultaneously.
The SERVICE MENU screen will be displayed. (See Fig. 1 on the next page.)

2. SELECTION OF SUB MENU SCREEN

Press one of the keys 1 to 6 on the remote control unit, and select the SUB MENU SCREEN from the SERVICE MENU. (See Fig.1 on the next page.)
SERVICE MENU → SUB MENU

1. IF
2. V/C
3. AUDIO
4. DEF
5. VSM W/B
6. STATUS
7. PLUG & PLAY (ON)

3. METHOD OF SETTING

NOTES:

- Once the setting values are set, they are memorized automatically.
- It must not be adjusted without inputting a signal.

(1) 1. IF

[1.VCO] : Under normal conditions, no adjustment is required.

(a) [1] key	Select **1. IF**.
(b) [1] key	Select **1. VCO**.
(c) [DISPLAY] key	When this is pressed twice, you will return to the SERVICE MENU.

[2.DELAY POINT]

(a) [1] key	Select **1. IF**.
(b) [2] key	Select **2. DELAY POINT**.
(c) MENU [◂] / [▸] key	Adjust the setting value.
(d) [DISPLAY] key	When this is pressed twice, you will return to the SERVICE MENU.

(2) 2. V/C, 3. AUDIO and 4. DEF

(a) [2] ~[4] keys	Select one from **2. V/C**, **3. AUDIO** and **4. DEF**
(b) MENU [▴] / [▾] key	Select setting items.
(c) MENU [◂] / [▸] key	Adjust the setting values of the setting items. Use the number keys on the remote control unit for setting the WHITE BALANCE. For the setting, refer to each item concerned.
(d) [DISPLAY] key	When this is pressed, you will return to the SERVICE MENU.

(3) 5. VSM W/B

(a) [5] keys	Select **5. VSM W/B**.
(b) MENU [OK] key	Select preset items.
(c) MENU [▴] / [▾] key	Adjust setting items.
(d) MENU [◂] / [▸] key	Adjust the setting values of the setting items.
(e) [DISPLAY] key	When this is pressed, you will return to the SERVICE MENU.

(4) 6. STATUS

This is for display only.

(5) 7. PLUG & PLAY (ON)

This is not used for service.

4. Release of SERVICE MENU

After completing the setting, return to the SERVICE MENU by pressing the [DISPLAY] key, then again press the [DISPLAY] key to return to the normal screen.

4.6.3 SERVICE MENU FLOW CHART

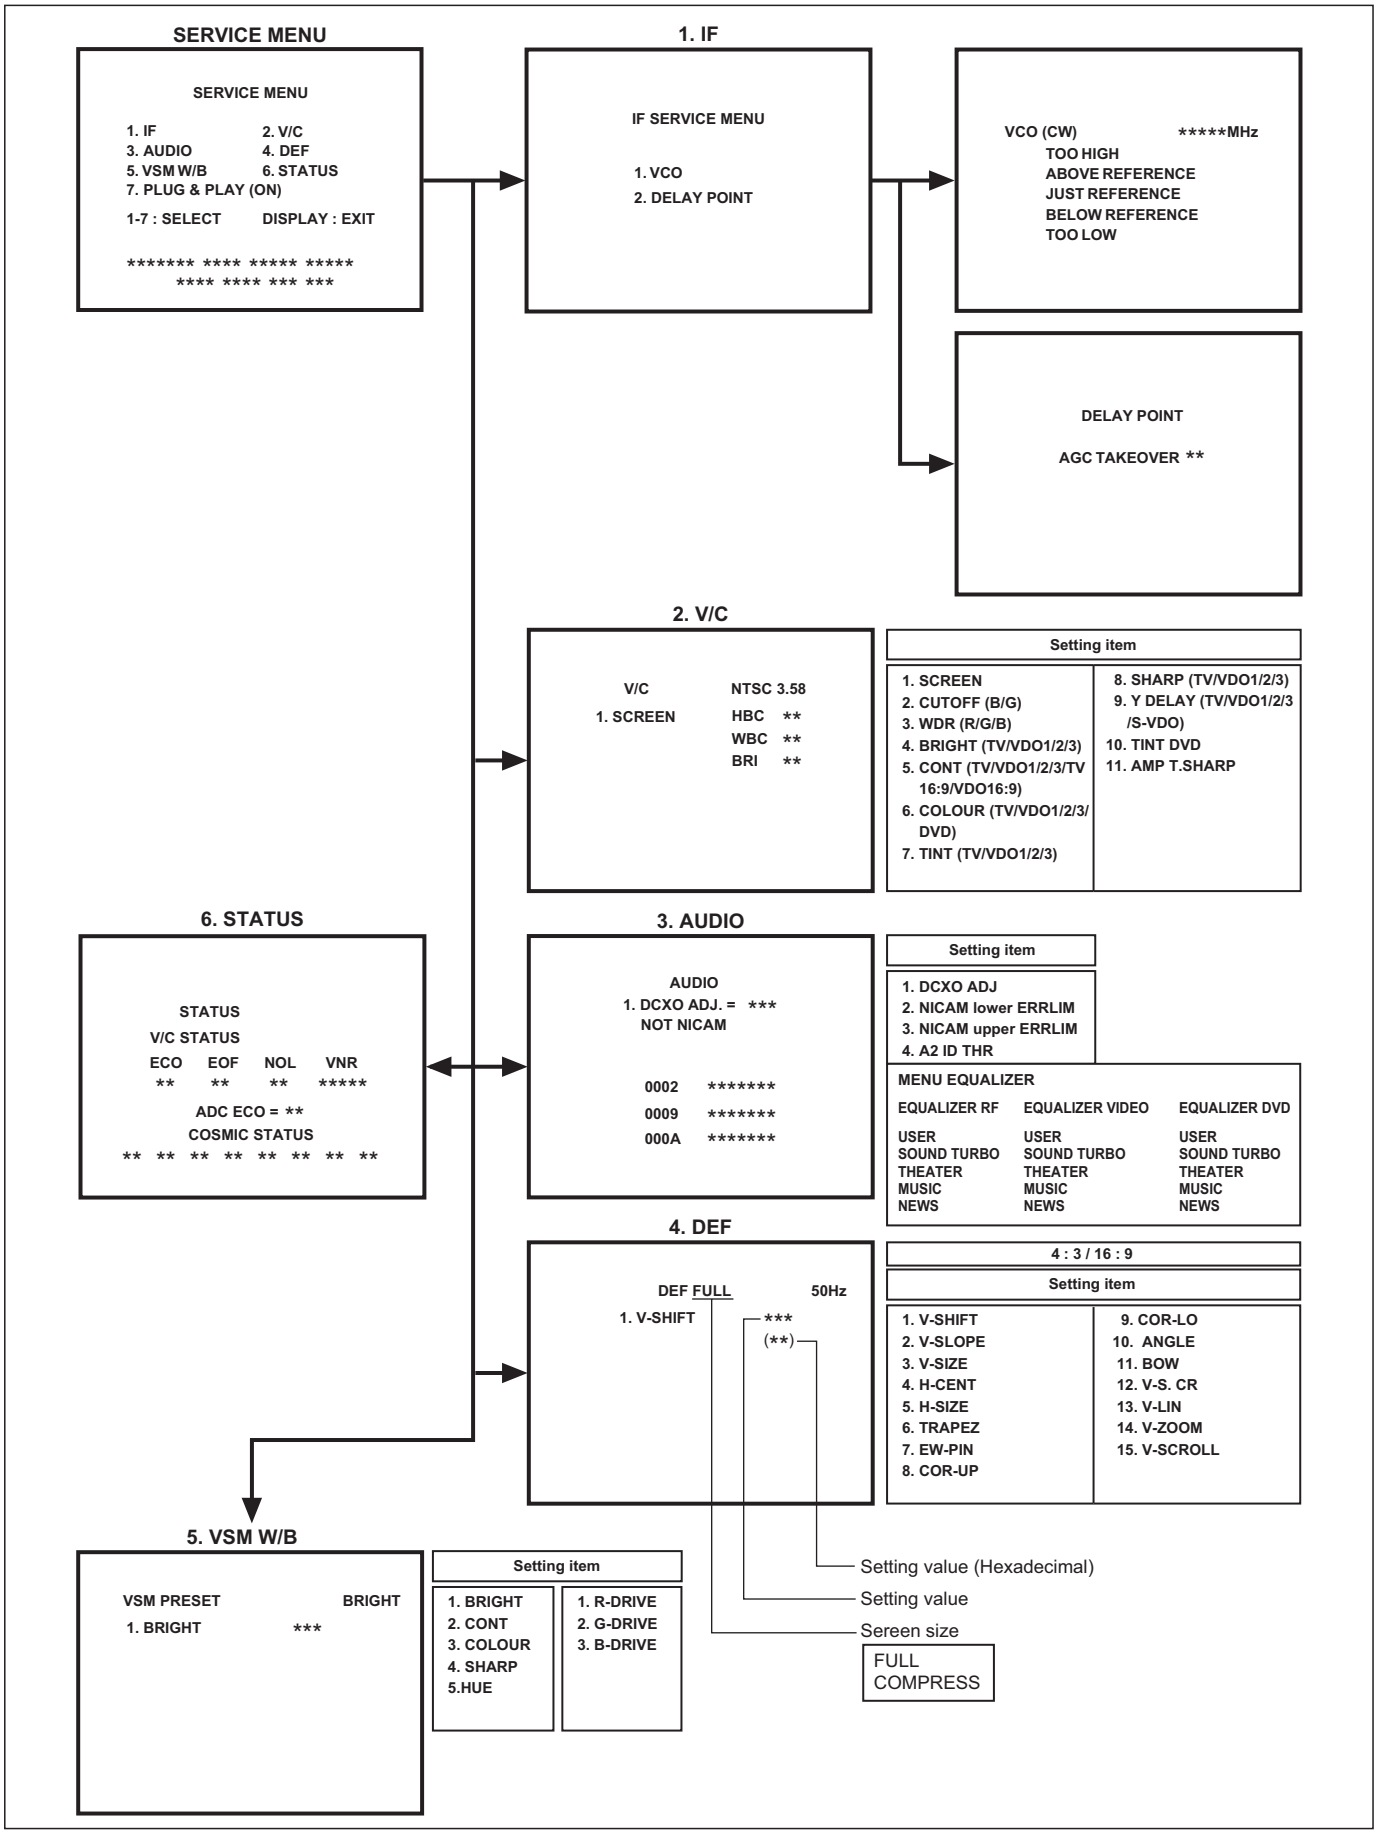

Fig.1

4.7 ADJUSTMENT PROCEDURE

4.7.1 B1 VOLTAGE

Item	Measuring instrument	Test point	Adjustment part	Description
B1 VOLTAGE check	Signal generator DC voltmeter	B1 (pin 1) GND (pin 5) [CN00X connector in MAIN PWB]		(1) Receive a PAL black and white signal. (2) Connect a DC voltmeter between B1 and GND (between pins 1 and 5 of the connector CN00X). (3) Make sure that the voltage is **DC134.5V ± 2V**.

4.7.2 FOCUS ADJUSTMENT

Item	Measuring instrument	Test point	Adjustment part	Description
FOCUS adjustment	Signal generator		FOCUS VR [In HVT]	**Notes:** • Set PICTURE MODE (VSM) to "BRIGHT". • The final adjustment of CONVERGENCE must be done after the FOCUS adjustment. (CONVERGENCE is affected by the FOCUS adjustment.) If any aeviation in CONVERGENCE is found, PURITY must be adjusted to restore the convergence. (1) Receive a PAL crosshatch signal. (2) Adjust the **FOCUS VR** so that the vertical and horizontal lines will be clear and in fine detail on the screen. (3) Make sure that the picture is in focus even when the screen gets darkened.

4.7.3 IF CIRCUIT ADJUSTMENTS

Item	Measuring instrument	Test point	Adjustment part	Description
IF VCO check	Remote control unit		[1. IF] 1. VCO (CW)	**Note:** • Under normal conditions, no adjustment is required. (1) Receive a PAL broadcast signal. (2) Select **1. IF** from the SERVICE MENU. (3) Select **1. VCO**. (4) Check the characters colour of the **JUST REFERENCE** displayed to **yellow**. (5) Press the [DISPLAY] key three times to return to normal screen.

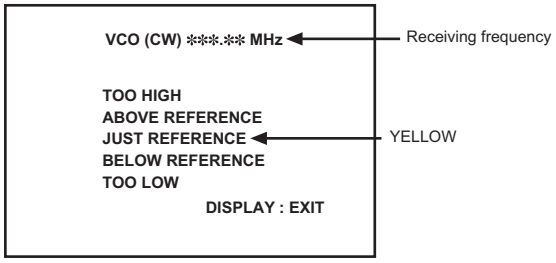

Item	Measuring instrument	Test point	Adjustment part	Description
DELAY POINT (AGC TAKE-OVER) adjustment	Remote control unit		[1. IF] 2. DELAY POINT	(1) Receive a PAL black and white broadcast signal (colour off). (2) Select **1. IF** from the SERVICE MENU. (3) Select **2. DELAY POINT**. (4) Adjust in order to eliminate any noise or beat from the image. Any increase above the initial value produces the noise and any decrease below it produces the beat. (5) Press the [DISPLAY] key three times to return to the normal screen. (6) Turn to other channels and make sure that there are no irregularities.

Adjustment item	Initial setting value			
	NTSC 3.58		OTHERS	
	VHF	UHF	VHF	UHF
2. DELAY POINT (AGC TAKE-OVER)	28*	28*	28*	28*

4.7.4 VIDEO CIRCUIT ADJUSTMENTS

- The setting (adjustment) using the remote control unit is made on the basis of the initial setting values.
- The setting values which adjust the screen to the optimum condition can be different from the initial setting values.
- Do not change the initial setting values of the setting (adjustment) items not listed in "ADJUSTMENT PROCEDURE".
- The initial setting values in parenthesis ( ) are fixed offset values, needing no further adjustment.

Adjustment item		Variable range	Initial setting value					
			PAL	SECAM	NTSC3.58	NTSC4.43	COMPONENT (V-2)	
							525i	625i
1. SCREEN	BRI	0 ~ 63	32	32	32	32	32	32
2. CUTOFF	B	0 ~ 63(-32 ~ +31)	11	11	11	11	(+3)	(+3)
	G	0 ~ 63(-32 ~ +31)	7	7	7	7	(-5)	(-5)
3. WDR	R	0 ~ 63(-32 ~ +31)	32	32	32	32	(0)	(0)
	G	0 ~ 63(-32 ~ +31)	32	32	32	32	(0)	(0)
	B	0 ~ 63(-32 ~ +31)	45	45	45	45	(0)	(0)
4. BRIGHT	RF	0 ~ 63	39	39	39	39	---	---
	VIDEO 1(COMPOSITE/S)	(-32 ~ +31)	(+2)	(+2)	(+2)	(+2)	---	---
	VIDEO 2(COMPONENT)	(-32 ~ +31)	(+2)	(+2)	(+2)	(+2)	(+3)	(+3)
	VIDEO 3(COMPOSITE)	(-32 ~ +31)	(+2)	(+2)	(+2)	(+2)	---	---
5. CONT.	RF	0 ~ 63	32	32	32	32	---	---
	VIDEO	(-32 ~ +31)	(0)	(0)	(0)	(0)	(-4)	(-4)
6. COLOUR	RF	0 ~ 63(-32 ~ +31)	---	---	37	---	---	---
	VIDEO	0 ~ 63(-32 ~ +31)	(+6)	(-3)	(-4)	(0)	(+5)	(+6)
7. TINT	RF	0 ~ 63(-32 ~ +31)	---	---	27	---	---	---
	VIDEO	0 ~ 63	---	---	(0)	(+2)	---	---
8. SHARP	RF	0 ~ 63	50	50	50	50	---	---
	VIDEO	0 ~ 63	54	54	54	54	40	40
9. Y DELAY	RF	0 ~ 15	---	---	5	---	---	---
	VIDEO	0 ~ 15	6	9	7	7	---	---
	S-VIDEO	0 ~ 15	7	9	9	9	---	---
10. TINT DVD	RF	0 ~ 63(-32 ~ +31)	---	---	(+0)	---	---	---
	VIDEO	(-32 ~ +31)	(+1)	(-4)	(+0)	(+0)	(+6)	(-1)
11. AMP T.SHARP	RF, VIDEO	0 ~ 63	0	0	0	0	0	0

<table>
<tr><th>Item</th><th>Measuring instrument</th><th>Test point</th><th>Adjustment part</th><th>Description</th></tr>
<tr><td>WHITE BALANCE (Low light) adjustment</td><td>Signal generator

Remote control unit</td><td></td><td>[2. V/C]
2. CUTOFF (B)
2. CUTOFF (G)

SCREEN VR
[In HVT]</td><td rowspan="2">Note:
• Set PICTURE MODE (VSM) to "BRIGHT".
- COMPOSITE WHITE BALANCE -
(1) Receive a PAL black and white signal (colour off).
(2) Select 2. V/C from the SERVICE MENU.
(3) Select 2. CUTOFF (B) and (G).
(4) Set each value to initial setting value with the [4] / [7] keys and [5] / [8] keys.
(5) Turn the SCREEN VR fully counterclockwise, then slowly turn it clockwise to where a red, blue or green colour is faintly visible.
(6) Use the [4] / [7] and [5] / [8] keys to adjust so that the other 2 colours appear white.
(7) Turn the SCREEN VR to where the single horizontal line glows faintly.
(8) Press the [DISPLAY] key twice to return to the normal screen.
- COMPONENT WHITE BALANCE -
(1) Receive a PAL component black and white signal (colour off).
(2) Select VIDEO-2 SET from the MENU and set VIDEO-2 SET to COMPONENT.
(3) Adjust COMPONENT WHITE BALANCE in the same way as "COMPOSITE WHITE BALANCE".
<table><tr><th rowspan="2">Adjustment Item</th><th rowspan="2">Variable range</th><th colspan="2">Initial setting value</th></tr><tr><th>COMPOSITE</th><th>COMPONENT</th></tr><tr><td rowspan="2">2. CUT OFF</td><td>B</td><td>0 ~ 63 (-32~+31)</td><td>11</td><td>(+3)</td></tr><tr><td>G</td><td>0 ~ 63 (-32~+31)</td><td>7</td><td>(-5)</td></tr></table></td></tr>
<tr><td colspan="4"> 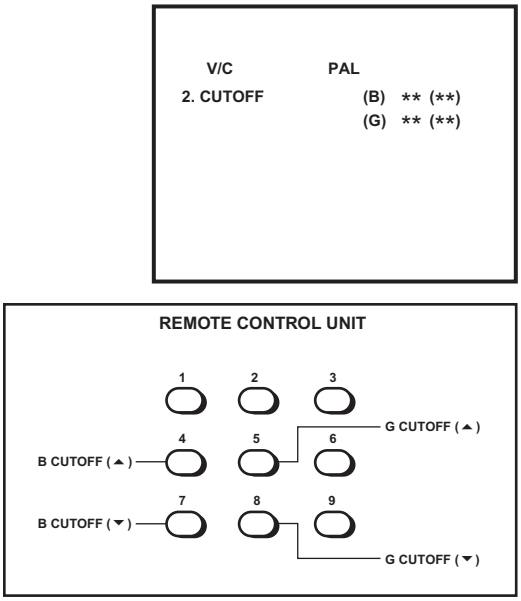
</td></tr>
<tr><td>WHITE BALANCE (High light) adjustment</td><td>Signal generator

Remote control unit</td><td></td><td>[2. V/C]
3. WDR (R)
3. WDR (G)
3. WDR (B)</td><td rowspan="2">Notes:
• Proceed to the following adjustment after having completed the WHITE BALANCE (Low light) adjustment.
• Set PICTURE MODE (VSM) to "BRIGHT".
(1) Receive a PAL black and white signal (colour off).
(2) Select 2. V/C from the SERVICE MENU.
(3) Select 3. WDR (R), (G) and (B).
(4) Set each value to initial setting value with the [4] to [9] keys.
(5) Use the [4] to [9] keys to produce a white screen.
(6) Press the [DISPLAY] key twice to return to the normal screen.
<table><tr><th>Adjustment Item</th><th></th><th>Variable range</th><th>Initial setting value</th></tr><tr><td rowspan="3">3. WDR</td><td>R</td><td>0 ~ 63</td><td>32*</td></tr><tr><td>G</td><td>0 ~ 63</td><td>32</td></tr><tr><td>B</td><td>0 ~ 63</td><td>45*</td></tr></table></td></tr>
<tr><td colspan="4"> 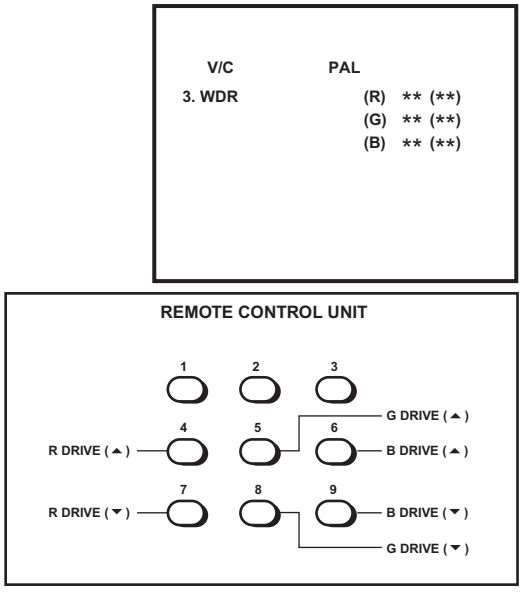
</td></tr>
</table>

Item	Measuring instrument	Test point	Adjustment part	Description
SUB BRIGHT adjustment	Remote control unit		[2. V/C] 4. BRIGHT	**Notes:** • Proceed to the following adjustment after having completed the WHITE BALANCE (Low light) and WHITE BALANCE (High light) adjustment. • Set PICTURE MODE (VSM) to "BRIGHT". (1) Receive a NTSC broadcast. (2) Select **2. V/C** from the SERVICE MENU. (3) Select **4. BRIGHT**. (4) Set the initial setting value. (5) If the brightness is not best with the initial setting value, make fine adjustment until you get the best brightness. (6) Press the [DISPLAY] key twice to return to the normal screen.
SUB CONTRAST adjustment	Remote control unit		[2. V/C] 5. CONT	**Notes:** • Proceed to the following adjustment after having completed the SUB BRIGHT adjustment. • Set PICTURE MODE (VSM) to "BRIGHT". (1) Receive a NTSC broadcast. (2) Select **2. V/C** from the SERVICE MENU. (3) Select **5. CONT**. (4) Set the initial setting value. (5) If the contrast is not best with the initial setting value, make fine adjustment until you get the best contrast. (6) Press the [DISPLAY] key twice to return to the normal screen.
SUB COLOUR 1 adjustment	Signal generator Remote control unit		[2. V/C] 6. COLOUR	**[Method of adjustment without measuring instrument]** **Notes:** • Proceed to the following adjustment after having completed the SUB CONTRAST adjustment. • Set PICTURE MODE (VSM) to "BRIGHT". **- PAL COLOUR -** (1) Receive a PAL colour bar signal (full field colour bar 75% white). (2) Select **2. V/C** from the SERVICE MENU. (3) Select **6. COLOUR**. (4) Set the initial setting value for PAL COLOUR. (5) If the colour is not best with the initial setting value, adjust until you get the best colour. (6) Press the [DISPLAY] key twice to return to the normal screen. **- SECAM COLOUR -** (1) Receive a SECAM colour bar signal (full field colour bar 75% white). (2) Press the [COLOUR SYSTEM] key to select the SECAM colour system. (3) Adjust SECAM COLOUR in the same way as for "PAL COLOUR". **- NTSC 3.58 COLOUR -** (1) Receive a NTSC 3.58MHz broadcast. (2) Press the [COLOUR SYSTEM] key to select the NTSC 3.58 colour system. (3) Adjust NTSC 3.58 COLOUR in the same way as for "PAL COLOUR". **- NTSC 4.43 COLOUR -** When adjustment is done for NTSC 3.58 COLOUR, appropriate values are automatically set for NTSC 4.43 COLOUR.

<table>
<tr><th>Item</th><th>Measuring instrument</th><th>Test point</th><th>Adjustment part</th><th>Description</th></tr>
<tr><td>SUB COLOUR 2 adjustment</td><td>Signal generator

Oscilloscope

Remote control unit</td><td>TP-47B
TP-E
[CRT SOCKET PWB]</td><td>[2. V/C]
6. COLOUR</td><td rowspan="2">[Method of adjustment using measuring instrument]
Notes:
• Proceed to the following adjustment after having completed the SUB CONTRAST adjustment.
• Set PICTURE MODE (VSM) to "BRIGHT".
- PAL COLOUR -
(1) Receive a PAL colour bar signal (full field colour bar 75% white).
(2) Select 2. V/C from the SERVICE MENU.
(3) Select 6. COLOUR.
(4) Set the initial setting value of PAL COLOUR.
(5) Connect the oscilloscope between TP-47B and TP-E.
(6) Adjust PAL COLOUR to set the value (A) in the figure to +29V.
- SECAM COLOUR -
(1) Receive a SECAM colour bar signal (colour bar 75% white).
(2) Press the [COLOUR SYSTEM] key to select the SECAM colour system.
(3) Set the initial setting value of SECAM COLOUR.
(4) Adjust SECAM COLOUR to set the value (A) in the figure to ---.
- NTSC 3.58 COLOUR -
(1) Receive a NTSC 3.58 colour bar signal (full field colour bar 75% white).
(2) Press the [COLOUR SYSTEM] key to select the NTSC 3.58 colour system.
(3) Set the initial setting value of NTSC 3.58 COLOUR.
(4) Adjust NTSC 3.58 COLOUR to set the value (A) in the figure to +30V.
- NTSC 4.43 COLOUR -
When adjustment is done for NTSC 3.58 COLOUR, appropriate values are automatically set for NTSC 4.43 COLOUR.</td></tr>
<tr><td colspan="4"> 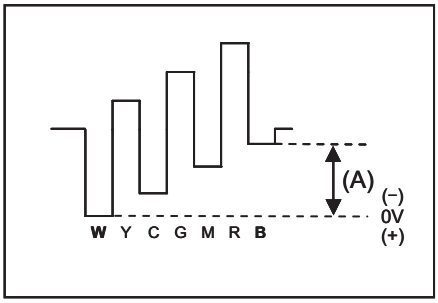
</td></tr>
<tr><td>SUB TINT 1 adjustment</td><td>Signal generator

Remote control unit</td><td></td><td>[2. V/C]
7. TINT</td><td>[Method of adjustment without measuring instrument]
Notes:
• Proceed to the following adjustment after having completed the SUB CONTRAST adjustment.
• Set PICTURE MODE (VSM) to "BRIGHT".
- NTSC 3.58 TINT -
(1) Receive a NTSC 3.58 colour bar signal (full field colour bar 75% white).
(2) Press the [COLOUR SYSTEM] key to select the NTSC 3.58 colour system.
(3) Select 2. V/C from the SERVICE MENU.
(4) Select 7. TINT.
(5) Set the initial setting value of NTSC 3.58.
(6) If you cannot get the best tint with the initial setting value, make fine adjustment until you get the best tint.
(7) Press the [DISPLAY] key twice to return to the normal screen.
- NTSC 4.43 TINT -
When adjustment is done for NTSC 3.58 TINT, appropriate values are automatically set for NTSC 4.43 TINT.</td></tr>
</table>

Item	Measuring instrument	Test point	Adjustment part	Description
SUB TINT 2 adjustment	Signal generator Oscilloscope Remote control unit	TP-47B TP-E [CRT SOCKET PWB]	[2. V/C] 7. TINT	**[Method of adjustment using measuring instrument]** **Notes:** • Proceed to the following adjustment after having completed the SUB CONTRAST adjustment. • Set PICTURE MODE (VSM) to "BRIGHT". **- NTSC 3.58 TINT -** (1) Receive a NTSC 3.58 colour bar signal (full field colour bar 75% white). (2) Press the [COLOUR SYSTEM] key to select the NTSC 3.58 colour system. (3) Select **2. V/C** from the SERVICE MENU. (4) Select **7. TINT**. (5) Set the initial setting value of NTSC 3.58. (6) Connect the oscilloscope between TP-47B and TP-E. (7) Adjust NTSC 3.58 TINT to set the value **(B)** in the figure to **+17V**. (8) Press the [DISPLAY] key twice to return to the normal screen. **- NTSC 4.43 TINT -** When adjustment is done for NTSC 3.58 TINT, appropriate values are automatically set for NTSC 4.43 TINT.

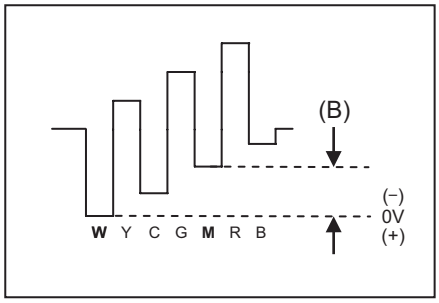

4.7.5 AUDIO SETTING

This submenu is for display only, no adjustment is required.

Function	Item	Setting value
AUDIO	1. DC XO ADJ	FFH
	2. NICAM LOWER ERR LIM	6FH
	3. NICAM UPPER ERR LIM	B0H
	4. A2 ID THR	00H

[AV-25MT35/P]

Function	MODE	Item	100Hz	300Hz	1kHz	3kHz	8kHz
MENU EQUALIZER	RF	SOUND TURBO	+12	+6	+4	+8	+9
		THEATER	+5	+4	-8	+8	+9
		MUSIC	+3	-5	+0	+5	+9
		NEWS	-1	+3	+6	+1	-4
		USER	0	0	0	0	0
	VIDEO	SOUND TURBO	+12	+6	+4	+8	+12
		THEATER	+5	+4	-8	+8	+10
		MUSIC	+3	-5	+0	+5	+10
		NEWS	-1	+3	+6	+1	-4
		USER	0	0	0	0	0
	DVD	SOUND TURBO	+12	+6	+4	+8	+12
		THEATER	+5	+4	-8	+8	+10
		MUSIC	+3	-5	+0	+5	+10
		NEWS	-1	+3	+6	+1	-4
		USER	0	0	0	0	0

[AV-25MT15/P, AV-25VA15/P]

Function	MODE	Item	100Hz	300Hz	1kHz	3kHz	8kHz
MENU EQUALIZER	RF	SOUND TURBO	+12	+6	+4	+8	+9
		THEATER	+3	+2	-9	+2	+5
		MUSIC	+6	+3	-2	+3	+8
		NEWS	-1	+3	+6	+1	-4
		USER	0	0	0	0	0
	VIDEO	SOUND TURBO	+12	+6	+4	+8	+12
		THEATER	+3	+2	-9	+2	+5
		MUSIC	+6	+3	-2	+5	+9
		NEWS	-1	+3	+6	+1	-4
		USER	0	0	0	0	0
	DVD	SOUND TURBO	+12	+6	+4	+8	+12
		THEATER	+3	+2	-9	+2	+5
		MUSIC	+6	+3	-2	+5	+9
		NEWS	-1	+3	+6	+1	-4
		USER	0	0	0	0	0

4.7.6 DEFLECTION CIRCUIT ADJUSTMENTS

- The setting (adjustment) using the remote control unit is made on the basis of the initial setting values.
- The setting values which adjust the screen to the optimum condition can be different from the initial setting values.
- When performing deflection circuit adjustment, adjusts PAL signal (fv: 50 Hz) in 4:3 mode and 16:9 mode respectively, and adjust the NTSC signal (fv: 60 Hz) similarly.

Note:

Proceed to the following adjustment after having completed the adjustments of SUB BRIGHT and SUB PICTURE.

■ **DEF**

Adjustment item	Variable range		Initial setting value			
			4:3		COMPRESS (16:9)	
	4:3 50Hz	Others	50Hz	60Hz	50Hz	60Hz
1. V-SHIFT	0 ~ 63	-32 ~ +31	36*	0*	0*	0*
2. V-SLOPE	0 ~ 63	-32 ~ +31	35*	0*	0*	0*
3. V-SIZE	0 ~ 63	-32 ~ +31	27*	0*	17*	-1*
4. H-CENT	0 ~ 63	-32 ~ +31	43*	0*	0*	0*
5. H-SIZE	0 ~ 63	-32 ~ +31	+32*	0	0	0
6. TRAPEZ	0 ~ 63	-32 ~ +31	+32*	0	0	0
7. EW-PIN	0 ~ 63	-32 ~ +31	+32*	0	0	0
8. COR-UP	0 ~ 63	-32 ~ +31	+32*	0	0	0
9. COR-LO	0 ~ 63	-32 ~ +31	+32*	0	0	0
10. ANGLE	0 ~ 63	-32 ~ +31	+32*	0*	0*	0*
11. BOW	0 ~ 63	-32 ~ +31	+32*	0*	0*	0*
12. V-S.CR	0 ~ 63	-32 ~ +31	+32*	0*	0*	0*
13. V-LIN	0 ~ 63	-32 ~ +31	+32*	0*	0*	0*
14. V-ZOOM	0 ~ 63	-32 ~ +31	(+25 ~ +32)	(0)	-32*	0*
15. V-SCROLL	0 ~ 63	-32 ~ +31	(+32)	(0)	(0)	(0)

NOTE: The value with an asterisk * is variable for adjustment. The values in parenthesis ( ) are fixed values.
V-ZOOM DATA can adjust follow data range in case measurement line power on is appeared.

■ **COMPRESS: OFF (4:3)**

Item	Measuring instrument	Test point	Adjustment part	Description
V. SLOPE adjustment	Signal generator Remote control unit		[4. DEF] 2. V-SLOPE	**- PAL V. SLOPE -** (1) Receive a PAL circle pattern signal of vertical frequency 50Hz. (2) Select **4. DEF** from the SERVICE MENU. (3) Select **2. V-SLOPE**. (4) Set the initial setting value of **2. V-SLOPE**. (5) Adjust **2. V-SLOPE** to make "**A = B**". (6) Press the [DISPLAY] key twice to return to SERVICE MENU screen. **- NTSC V. SLOPE -** (1) Receive a NTSC circle pattern signal of vertical frequency 60Hz. (2) Make similar adjustment of NTSC V-SLOPE in the same way as for "PAL V-SLOPE".
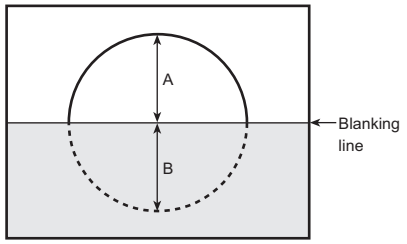				
V. POSITION adjustment	Signal generator Remote control unit		[4. DEF] 1. V-SHIFT	**- PAL V. POSITION -** (1) Receive a PAL circle pattern signal of vertical frequency 50Hz. (2) Select **1. V-SHIFT**. (3) Set the initial setting value of **1. V-SHIFT**. (4) Adjust **1. V-SHIFT** to make "**A = B**". **- NTSC V. POSITION -** (1) Receive a NTSC circle pattern signal of vertical frequency 60Hz. (2) Make similar adjustment of NTSC V. POSITION in the same way as for "PAL V. POSITION".
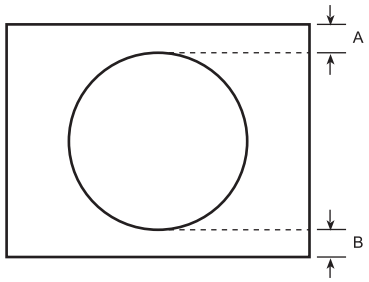				
V. HEIGHT adjustment	Signal generator Remote control unit		[4. DEF] 3. V-SIZE	**- PAL V. HEIGHT -** (1) Receive a PAL crosshatch signal. (2) Select **3. V-SIZE**. (3) Set the initial setting value of **3. V-SIZE**. (4) Adjust **3. V-SIZE** to make the vertical screen size to 92% of the picture size. **- NTSC V. HEIGHT -** (1) Receive a NTSC crosshatch signal. (2) Make similar adjustment of NTSC V. HEIGHT in the same way as for "PAL V. HEIGHT".
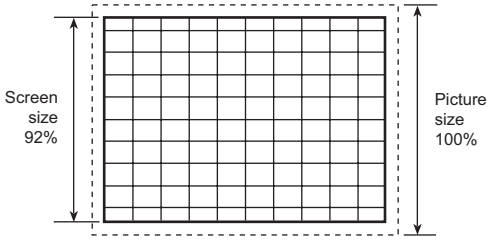				
H. POSITION adjustment	Signal generator Remote control unit		[4. DEF] 4. H-CENT	**- PAL H. POSITION -** (1) Receive a PAL circle pattern signal. (2) Select **4. H-CENT**. (3) Set the initial setting value of **4. H-CENT**. (4) Adjust **4. H-CENT** to make "**C = D**". **- NTSC H. POSITION -** (1) Receive a NTSC circle pattern signal. (2) Make similar adjustment of NTSC H. POSITION in the same way as for "PAL H. POSITION".
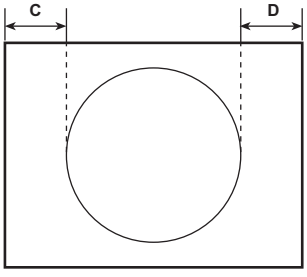				

Item	Measuring instrument	Test point	Adjustment part	Description
H. WIDTH adjustment	Signal generator Remote control unit		[4.DEF] 5. H-SIZE	**- PAL H. WIDTH -** (1) Receive a PAL crosshatch signal. (2) Select **5. H-SIZE**. (3) Set the initial setting value of **5. H-SIZE**. (4) Adjust **5. H-SIZE** to make the horizontal screen size to 91% of the picture size. **- NTSC H. WIDTH -** (1) Receive a NTSC crosshatch signal. (2) Make similar adjustment of NTSC H. WIDTH in the same way as for "PAL H. WIDTH".
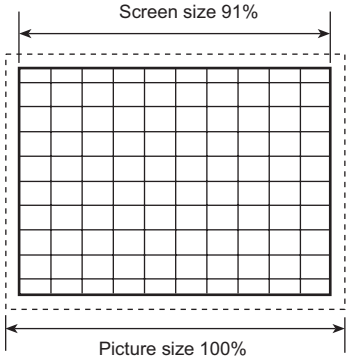				
SIDE PIN adjustment	Signal generator Remote control unit		[4. DEF] 7. EW-PIN	**- PAL SIDE PIN -** (1) Receive a PAL crosshatch signal. (2) Select **7. EW-PIN**. (3) Set the initial setting value of **7. EW-PIN**. (4) Adjust **7. EW-PIN** so that the first vertical lines at the left and right edges on the screen are straight. **- NTSC SIDE PIN -** (1) Receive a NTSC crosshatch signal. (2) Make similar adjustment of NTSC SIDE PIN in the same way as for "PAL SIDE PIN".
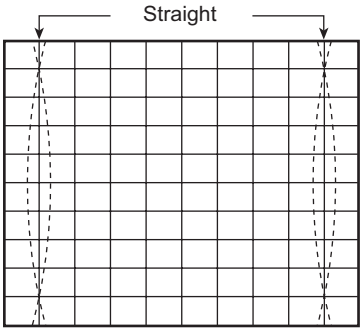				
TRAPEZIUM adjustment	Signal generator Remote control unit		[4.DEF] 6. TRAPEZ	**- PAL TRAPEZIUM -** (1) Receive a PAL crosshatch signal. (2) Select **6. TRAPEZ**. (3) Set the initial setting value of **6. TRAPEZ**. (4) Adjust **6. TRAPEZ** so that the vertical lines at the left and right edges on the screen are in parallel. **- NTSC TRAPEZIUM -** (1) Receive a NTSC crosshatch signal. (2) Make similar adjustment of NTSC TRAPEZIUM in the same way as for "PAL TRAPEZIUM".
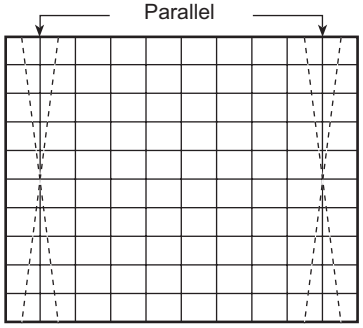				

Item	Measuring instrument	Test point	Adjustment part	Description
V.LINEARITY adjustment	Signal generator Remote control unit		[4. DEF] 12. V-S. CR 13. V-LIN	**- PAL V. LINEARITY -** (1) Receive a PAL crosshatch signal. (2) Select **12. V-S.CR**. (3) Set the initial setting value of **12. V-S. CR**. (4) Select **13. V-LIN**. (5) Set the initial setting value of **13. V-LIN**. (6) Adjust **12. V-S. CR** and **13. V-LIN** so that the spaces of each line on TOP, CENTRE and BOTTOM become uniform. **- NTSC V. LINEARITY -** (1) Receive a NTSC crosshatch signal. (2) Make similar adjustment of NTSC V-S. CR in the same way as for "PAL V-S. CR".
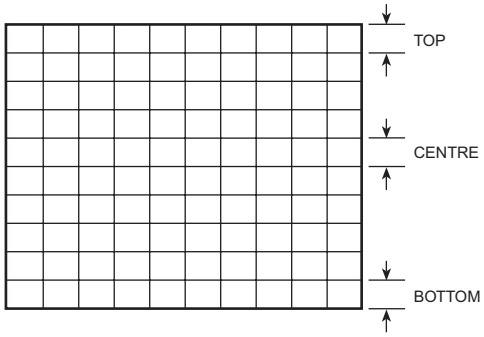				
CORNER PIN adjustment	Signal generator Remote control unit		[4. DEF] 8. COR-UP 9. COR-LO	**- PAL CORNER PIN -** (1) Receive a PAL crosshatch signal. (2) Select **8. COR-UP**. (3) Set the initial setting value of **8. COR-UP**. (4) Select **9. COR-LO**. (5) Set the initial setting value of **9. COR-LO**. (6) Adjust **8. COR-UP** and **9. COR-LO** so that the vertical lines at the four corners on the screen are straight. **- NTSC CORNER PIN -** (1) Receive a NTSC crosshatch signal. (2) Make similar adjustment of NTSC CORNER in the same way as for "PAL CORNER".
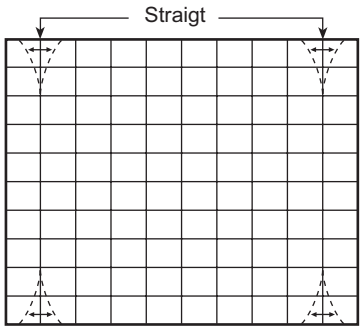				
H. PARALLEL adjustment	Signal generator Remote control unit		[4.DEF] 10. ANGLE	**- PAL H. PARALLEL -** (1) Receive a PAL crosshatch signal. (2) Select **10. ANGLE**. (3) Set the initial setting value of **10. ANGLE**. (4) Adjust **10. ANGLE** to optimize the trapezium distortion at the centre of the screen. **- NTSC H. PARALLEL -** (1) Receive a NTSC crosshatch signal. (2) Make similar adjustment of NTSC H. PARALLEL in the same way as for "PAL H. PARALLEL".
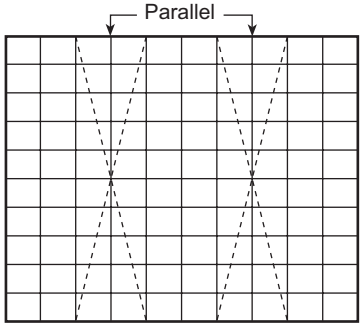				

Item	Measuring instrument	Test point	Adjustment part	Description
H. BOW adjustment	Signal generator Remote control unit		[4.DEF] 11. BOW	**- PAL H. BOW -** (1) Receive a PAL crosshatch signal. (2) Select **11. BOW**. (3) Set the initial setting value of **11. BOW**. (4) Adjust **11. BOW** to optimize the horizontal arc distortion. **- NTSC H. BOW -** (1) Receive a NTSC crosshatch signal. (2) Make similar adjustment of NTSC H. BOW in the same way as for "PAL H. BOW". (3) Press the [DISPLAY] key twice to return to the normal screen.
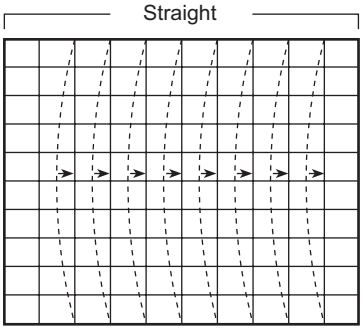				

■ **COMPRESS : ON (16:9)**

Item	Measuring instrument	Test point	Adjustment part	Description
V. HEIGHT adjustment	Signal generator Remote control unit		[4.DEF] 14. V. ZOOM 3. V-SIZE	**- PAL V. HEIGHT -** (1) Receive a PAL crosshatch signal of vertical frequency 50Hz. (2) Press the [MENU] key and select **PICTURE**. (3) Select **PICTURE FEATURES**. (4) Select **COMPRESS (16 : 9)** and set COMPRESS to ON. (5) Select **4. DEF** from the SERVICE MENU. (6) Set the initial setting value of **14. V. ZOOM**. (7) Select **3. V-SIZE**. (8) Set the initial setting value of **3. V-SIZE**. (9) Adjust **3. V-SIZE** to set the vertical amplitude of the image to 280mm. **- NTSC V. HEIGHT -** (1) Receive a NTSC crosshatch signal of vertical frequency 60Hz. (2) Make similar adjustment of NTSC V. HEIGHT in the same way as for "PAL V. HEIGHT".
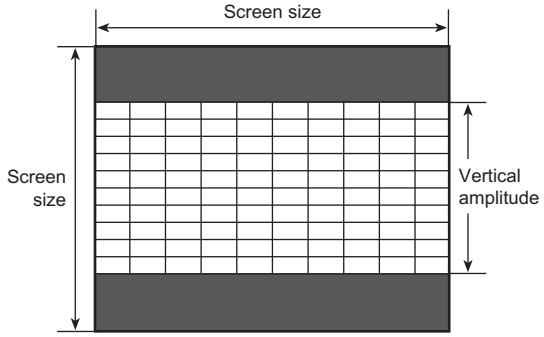				
V. SLOPE adjustment	Signal generator Remote control unit		[4.DEF] 2. V-SLOPE	**- PAL V. SLOPE -** (1) Receive a PAL circle pattern signal of vertical frequency 50Hz. (2) Select **4. DEF** from the SERVICE MENU. (3) Select **2. V-SLOPE**. (4) Set the initial setting value of **2. V-SLOPE**. (5) Adjust **2. V-SLOPE** to make "**A = B**". (6) Press the [DISPLAY] key to return to SERVICE MENU screen. **- NTSC V. SLOPE -** (1) Receive a NTSC circle pattern signal of vertical frequency 60Hz. (2) Make similar adjustment of NTSC V-SLOPE in the same way as for "PAL V-SLOPE".
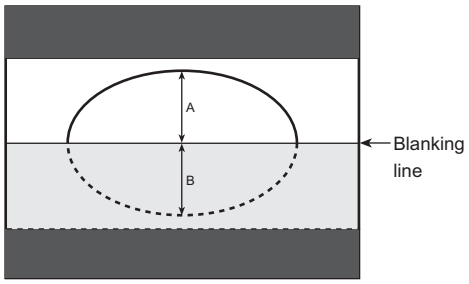				

Item	Measuring instrument	Test point	Adjustment part	Description
SIDE PIN adjustment	Signal generator Remote control unit		[4. DEF] 7. EW-PIN	**- PAL SIDE PIN -** (1) Receive a PAL crosshatch signal. (2) Select **7. EW-PIN**. (3) Set the initial setting value of **7. EW-PIN**. (4) Adjust **7. EW-PIN** so that the first vertical lines at the left and right edges on the screen are straight. **- NTSC SIDE PIN -** (1) Receive a NTSC crosshatch signal. (2) Make similar adjustment of NTSC SIDE PIN in the same way as for "PAL SIDE PIN".
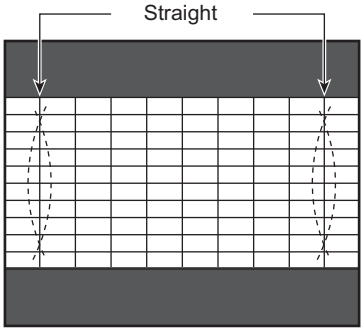				
TRAPEZIUM adjustment	Signal generator Remote control unit		[4. DEF] 6. TRAPEZ	**- PAL TRAPEZIUM PIN -** (1) Receive a PAL crosshatch signal. (2) Select **6. TRAPEZ**. (3) Set the initial setting value of **6. TRAPEZ**. (4) Adjust **6. TRAPEZ** so that the vertical lines at the left and right edges on the screen are in parallel. **- NTSC TRAPEZIUM PIN -** (1) Receive a NTSC crosshatch signal. (2) Make similar adjustment of NTSC TRAPEZIUM in the same way as for "PAL TRAPEZIUM".
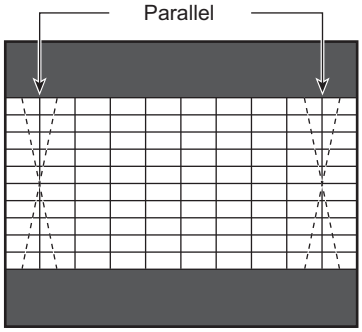				
CORNER PIN adjustment	Signal generator Remote control unit		[4. DEF] 8. COR-UP 9. COR-LO	**- PAL CORNER PIN -** (1) Receive a PAL crosshatch signal. (2) Select **8. COR-UP**. (3) Set the initial setting value of **8. COR-UP**. (4) Select **9. COR-LO**. (5) Set the initial setting value of **9. COR-LO**. (6) Adjust **8. COR-UP** and **9. COR-LO** so that the vertical lines at the four corners on the screen are straight. **- NTSC CORNER PIN -** (1) Receive a NTSC crosshatch signal. (2) Make similar adjustment of NTSC CORNER in the same way as for "PAL CORNER". (3) Press the [DISPLAY] key twice to return to the normal screen.
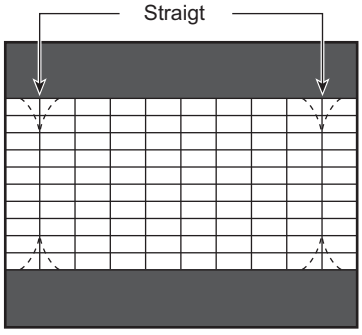				

■ **VIDEO - 2 SET: COMPONENT**

Item	Measuring instrument	Test point	Adjustment part	Description
H. POSITION adjustment	Signal generator Remote control unit		[4. DEF] 4. H-CENT	(1) Receive a PAL circle pattern signal to VIDEO-2 component terminal. (2) Select VIDEO-2 SET from the MENU and set VIDEO-2 SET to COMPONENT. (3) Select **4. DEF** from the SERVICE MENU. (4) Select **4. H-CENT**. (5) Set the initial setting value of **4. H-CENT**. (6) Adjust **4. H-CENT** to make "**C=D**". (7) Press the [DISPLAY] key twice to return to the normal screen.

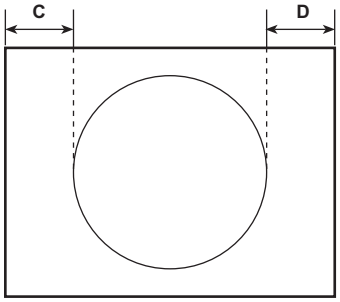

4.7.7 VSM PRESET SETTING

Item	Measuring instrument	Test point	Adjustment part	Description
VSM PRESET setting	Remote control unit		[5. VSM W/B] 1. BRIGHT 2. CONT 3.COLOUR 4. SHARP 5. HUE 1. R-DRIVE 2. G-DRIVE 3. B-DRIVE	(1) Select **5. VSM W/B** from the SERVICE MENU. (2) Select BRIGHT with the MENU [OK] key. (3) Set the value of **1. BRIGHT** ~ **5. HUE** to the values shown in the table. (4) Respectively select the VSM PRESET mode for SOFT and STANDARD. (5) Select COOL with the MENU [OK] key. (6) Set the values of **1. R-DRIVE** ~ **3. B-DRIVE** to the value shown in the table. (7) Select the W/B preset for WARM and NORMAL, respectively. (8) Press the [DISPLAY] key twice to return to the normal screen.

SUB MENU 5. VSM W/B

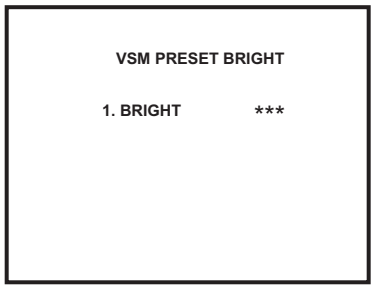

[Setting Values for SUB 5. VSM W/B]

Setting item \ VSM preset	BRIGHT	STANDARD	SOFT
1. BRIGHT	0	0	0
2. CONT	+15	+10	+5
3. COLOUR	0	-4	0
4. SHARP	0	-5	-10
5. HUE	0	0	0

Setting item \ W/B preset	COOL	NORMAL	WARM
1. R-DRIVE	0	+2	+10
2. G-DRIVE	0	0	-4
3. B-DRIVE	0	-10	-12

4.7.8 PURITY AND CONVERGENCE

■ **PURITY ADJUSTMENT**

Note:

The final adjustment of CONVERGENCE must be done after the FOCUS adjustment. (CONVERGENCE is changed by FOCUS adjustment.)
When makes difference by FOCUS adjustment, should be reconfirming PURITY adjustment.

(1) Demagnetize CRT with the demagnetizer.

(2) Loosen the retainer screw of the deflection yoke.

(3) Remove the wedges.

(4) Input a green raster signal from the signal generator, and turn the screen to green raster.

(5) Move the deflection yoke backward.

(6) Bring the long lug of the purity magnets on the short lug and position them horizontally. (Fig.2)

(7) Adjust the gap between two lugs so that the GREEN RASTER will come into the centre of the screen. (Fig.3)

(8) Move the deflection yoke forward, and fix the position of the deflection yoke so that the whole screen will become green.

(9) Insert the wedge to the top side of the deflection yoke so that it will not move.

(10) Input a crosshatch signal.

(11) Verify that the screen is horizontal.

(12) Input red and blue raster signals, and make sure that purity is properly adjusted.

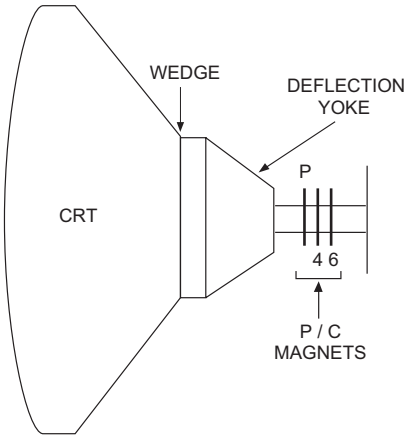

• P/C MAGNETS

P : PURITY MAGNET
4 : 4 POLES (convergence magnets)
6 : 6 POLES (convergence magnets)

Fig.1

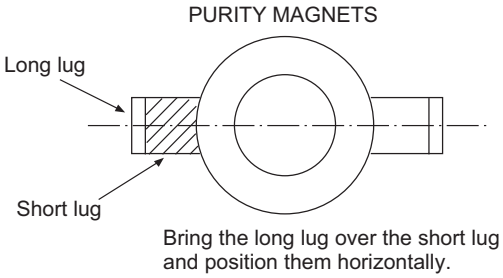

Fig.2

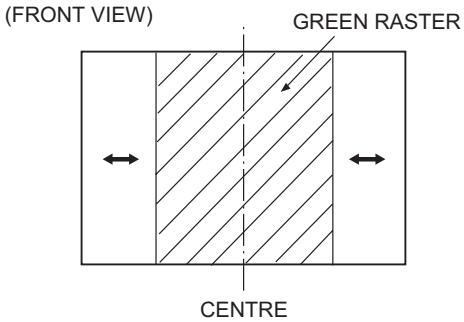

Fig.3

■ STATIC CONVERGENCE ADJUSTMENT

(1) Input a crosshatch signal.

(2) Using 4-pole convergence magnets, overlap the red and blue lines in the centre of the screen (Fig.1) and turn them to magenta (red/blue).

(3) Using 6-pole convergence magnets, overlap the magenta (red/blue) and green lines in the centre of the screen and turn them to white.

(4) Repeat 2 and 3 above, and make best convergence.

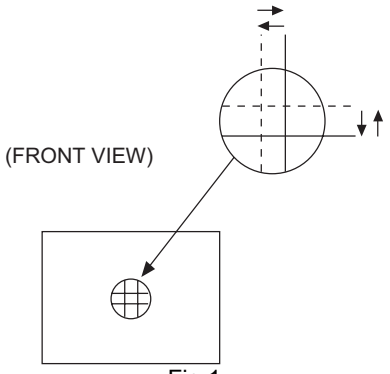

Fig.1

■ DYNAMIC CONVERGENCE ADJUSTMENT

(1) Move the deflection yoke up and down and overlap the lines in the periphery. (Fig. 2)

(2) Move the deflection yoke left to right and overlap the lines in the periphery. (Fig. 3)

(3) Repeat 1 and 2 above, and make best convergence.

(4) Adjust XV by XV coil. (Fig.4)

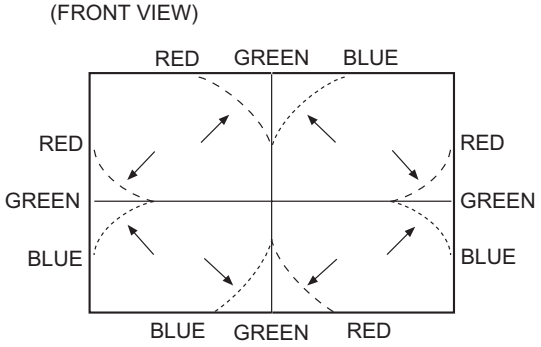

Fig.2

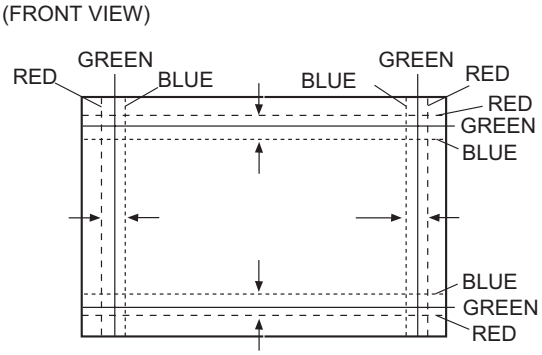

Fig.3

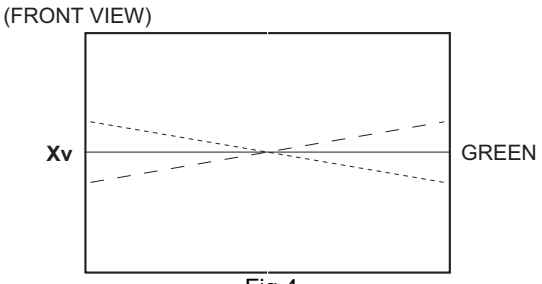

Fig.4

- After adjustment, fix the wedge at the original position. Fasten the retainer screw of the deflection yoke. Fix the P/C magnets with glue.

SECTION 5
TROUBLESHOOTING

5.1 SELF CHECK FUNCTIONS

5.1.1 OUTLINE

This model has self check functions given below. When an abnormality has been detected, the SUB POWER is turned off and POWER LED flashes to inform of the failure. An abnormality is detected by the signal input state of the control line connected to the microcomputer.

5.1.2 SELF CHECK ITEMS

Check item	Details of detection	Method of detection	State of abnormality
B1 over-current protection	An over-current on the low B1 line is detected.	The main microcomputer detects the possible abnormality at 24-msec. intervals and judges the results in every 16 time. Of the 16 times, if NG is detected more than 9 times, it is judged that there is an abnormality.	When an abnormality has been detected, the SUB-POWER is turned off. While the SUB-POWER is being turned off, the POWER key on the remote control unit is not operational until the power cord is disconnected and connected again.
CRT neck broken protection	Operation of CRT neck protection circuit.		

5.1.3 SELF CHECK INDICATING FUNCTION

When an abnormality has been detected at about 5 seconds after the power was turned on, the SUB POWER is turned off immediately and the POWER LED flashes.

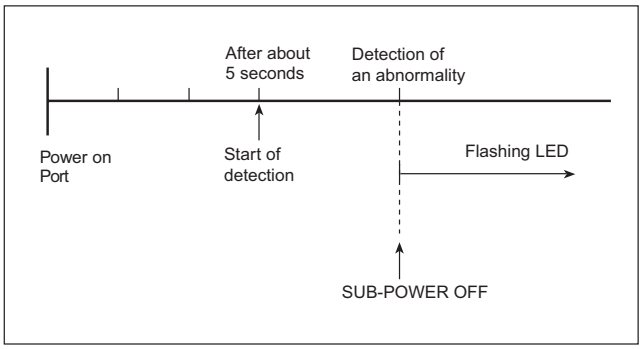

[INDICATION BY THE POWER LED]

Item	LED flashing intervals
B1 over-current protection / CRT neck broken protection	0.3 seconds

JVC
Victor Company of Japan, Limited
AV & MULTIMEDIA COMPANY DISPLAY CATEGORY 12, 3-chome, Moriya-cho, Kanagawa-ku, Yokohama-city, Kanagawa-prefecture, 221-8528, Japan

(No.YA275)

Printed in Japan
VPT

JVC

SCHEMATIC DIAGRAMS

FLAT COLOR TELEVISION

AV-25MT35/P, AV-25MT15/P, AV-25VA15/P

CD-ROM No.SML200507

BASIC CHASSIS
CW2

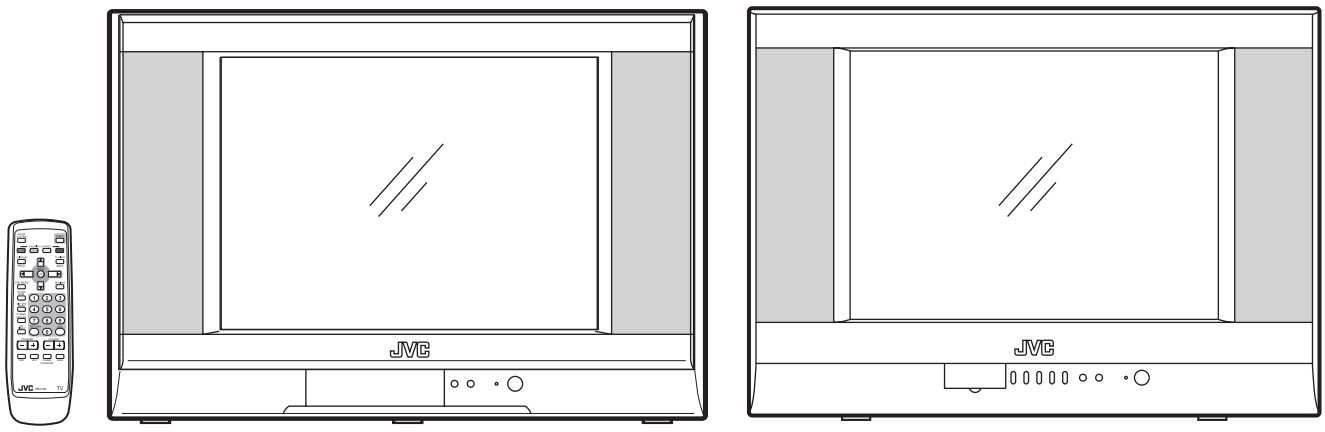

[AV-25MT35/P, AV-25MT15/P] **[AV-25VA15/P]**

COPYRIGHT © 2005 Victor Company of Japan, Limited

No.YA275
2005/7

AV-25MT35/P, AV-25MT15/P, AV-25VA15/P
STANDARD CIRCUIT DIAGRAM

■ NOTE ON USING CIRCUIT DIAGRAMS

1.SAFETY

The components identified by the ⚠ symbol and shading are critical for safety. For continued safety replace safety ciritical components only with manufactures recommended parts.

2.SPECIFIED VOLTAGE AND WAVEFORM VALUES

The voltage and waveform values have been measured under the following conditions.

(1)Input signal	: Colour bar signal
(2)Setting positions of each knob/button and variable resistor	: Original setting position when shipped
(3)Internal resistance of tester	: DC 20kΩ/V
(4)Oscilloscope sweeping time	: H ⇒ 20μs / div
	: V ⇒ 5ms / div
	: Othters ⇒ Sweeping time is specified
(5)Voltage values	: All DC voltage values

∗ Since the voltage values of signal circuit vary to some extent according to adjustments, use them as reference values.

3.INDICATION OF PARTS SYMBOL [EXAMPLE]

● In the PW board : R209 → R209

4.INDICATIONS ON THE CIRCUIT DIAGRAM

(1)Resistors

● Resistance value

No unit	: [Ω]
K	: [kΩ]
M	: [MΩ]

● Rated allowable power

No indication	: 1/16 [W]
Others	: As specified

● Type

No indication	: Carbon resistor
OMR	: Oxide metal film resistor
MFR	: Metal film resistor
MPR	: Metal plate resistor
UNFR	: Uninflammable resistor
FR	: Fusible resistor

∗ Composition resistor 1/2 [W] is specified as 1/2S or Comp.

(2)Capacitors

● Capacitance value

1 or higher	: [pF]
less than 1	: [μF]

● Withstand voltage

No indication	: DC50[V]
Others	: DC withstand voltage [V]
AC indicated	: AC withstand voltage [V]

∗ Electrolytic Capacitors

47/50[Example]: Capacitance value [μF]/withstand voltage[V]

● Type

No indication	: Ceramic capacitor
MM	: Metalized mylar capacitor
PP	: Polypropylene capacitor
MPP	: Metalized polypropylene capacitor
MF	: Metalized film capacitor
TF	: Thin film capacitor
BP	: Bipolar electrolytic capacitor
TAN	: Tantalum capacitor

(3)Coils

No unit	: [μH]
Others	: As specified

(4)Power Supply

∗ Respective voltage values are indicated

(5)Test point

(6)Connecting method



(7)Ground symbol

⊥ : LIVE side ground

⏚ : ISOLATED(NEUTRAL) side ground

⏚ : EARTH ground

▽ : DIGITAL ground

5.NOTE FOR REPAIRING SERVICE

This model's power circuit is partly different in the GND. The difference of the GND is shown by the LIVE : (⊥) side GND and the ISOLATED(NEUTRAL) : (⏚) side GND. Therefore, care must be taken for the following points.

(1)Do not touch the LIVE side GND or the LIVE side GND and the ISOLATED(NEUTRAL) side GND simultaneously. if the above caution is not respected, an electric shock may be caused. Therefore, make sure that the power cord is surely removed from the receptacle when, for example, the chassis is pulled out.

(2)Do not short between the LIVE side GND and ISOLATED(NEUTRAL) side GND or never measure with a measuring apparatus measure with a measuring apparatus (oscilloscope, etc.) the LIVE side GND and ISOLATED(NEUTRAL) side GND at the same time. If the above precaution is not respected, a fuse or any parts will be broken.

◆ **Since the circuit diagram is a standard one, the circuit and circuit constants may be subject to change for improvement without any notice.**

NOTE

◆ **Due improvement in performance, some part numbers show in the circuit diagram may not agree with those indicated in the part list.**
When ordering parts, please use the numbers that appear in the Parts List.

CONTENTS

SEMICONDUCTOR SHAPES 2-2

USING P.W.BOARD 2-2

BLOCK DIAGRAM 2-3

CIRCUIT DIAGRAMS

- **MAIN PWB CIRCUIT DIAGRAM [AV-25MT35/P] (1/4), (2/4)** 2-5
- **MAIN PWB CIRCUIT DIAGRAM [AV-25MT35/P] (3/4), (4/4)** 2-7
- **MAIN PWB CIRCUIT DIAGRAM [AV-25MT15/P] (1/4), (2/4)** 2-9
- **MAIN PWB CIRCUIT DIAGRAM [AV-25MT15/P] (3/4), (4/4)** 2-11
- **MAIN PWB CIRCUIT DIAGRAM [AV-25VA15/P] (1/3)** 2-13
- **MAIN PWB CIRCUIT DIAGRAM [AV-25VA15/P] (2/3), (3/3)** 2-15

PATTERN DIAGRAMS

- **MAIN PWB PATTERN [AV-25MT35/P, AV-25MT15/P]** 2-17
- **MAIN PWB PATTERN [AV-25VA15/P]** 2-19

VOLTAGE CHARTS 2-21

WAVEFORMS 2-22

SEMICONDUCTOR SHAPES

TRANSISTOR

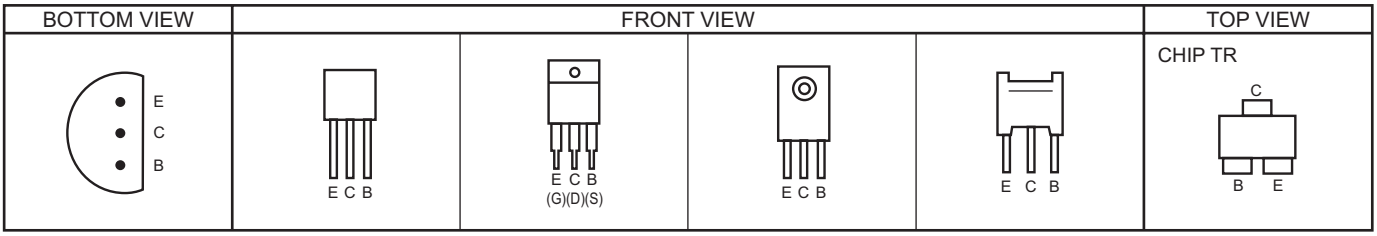

IC

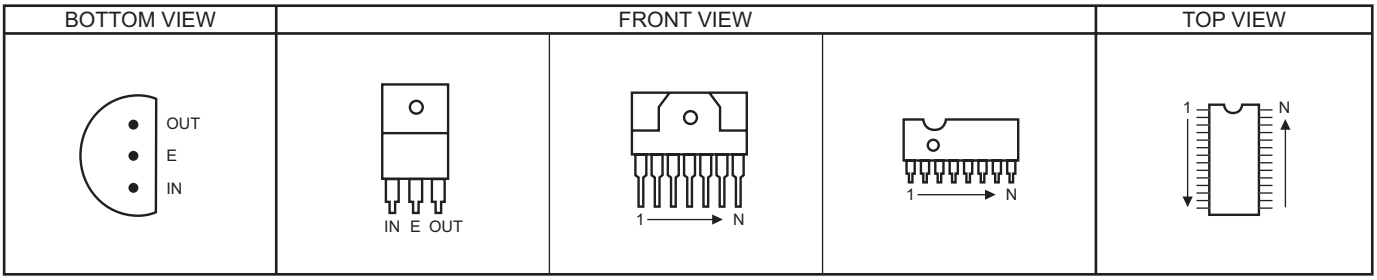

CHIP IC

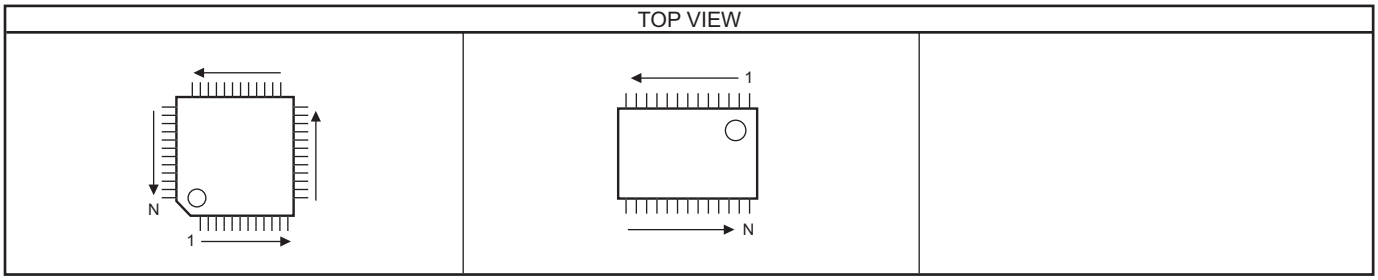

USING P.W.BOARD

P.W. BOARD ASS'Y NAME	AV-25MT35/P	AV-25MT15/P	AV-25VA15/P
MAIN P.W. BOARD	SCW-1750A-H2	SCW-1721A-H2	SCW-1731A-H2

BLOCK DIAGRAM

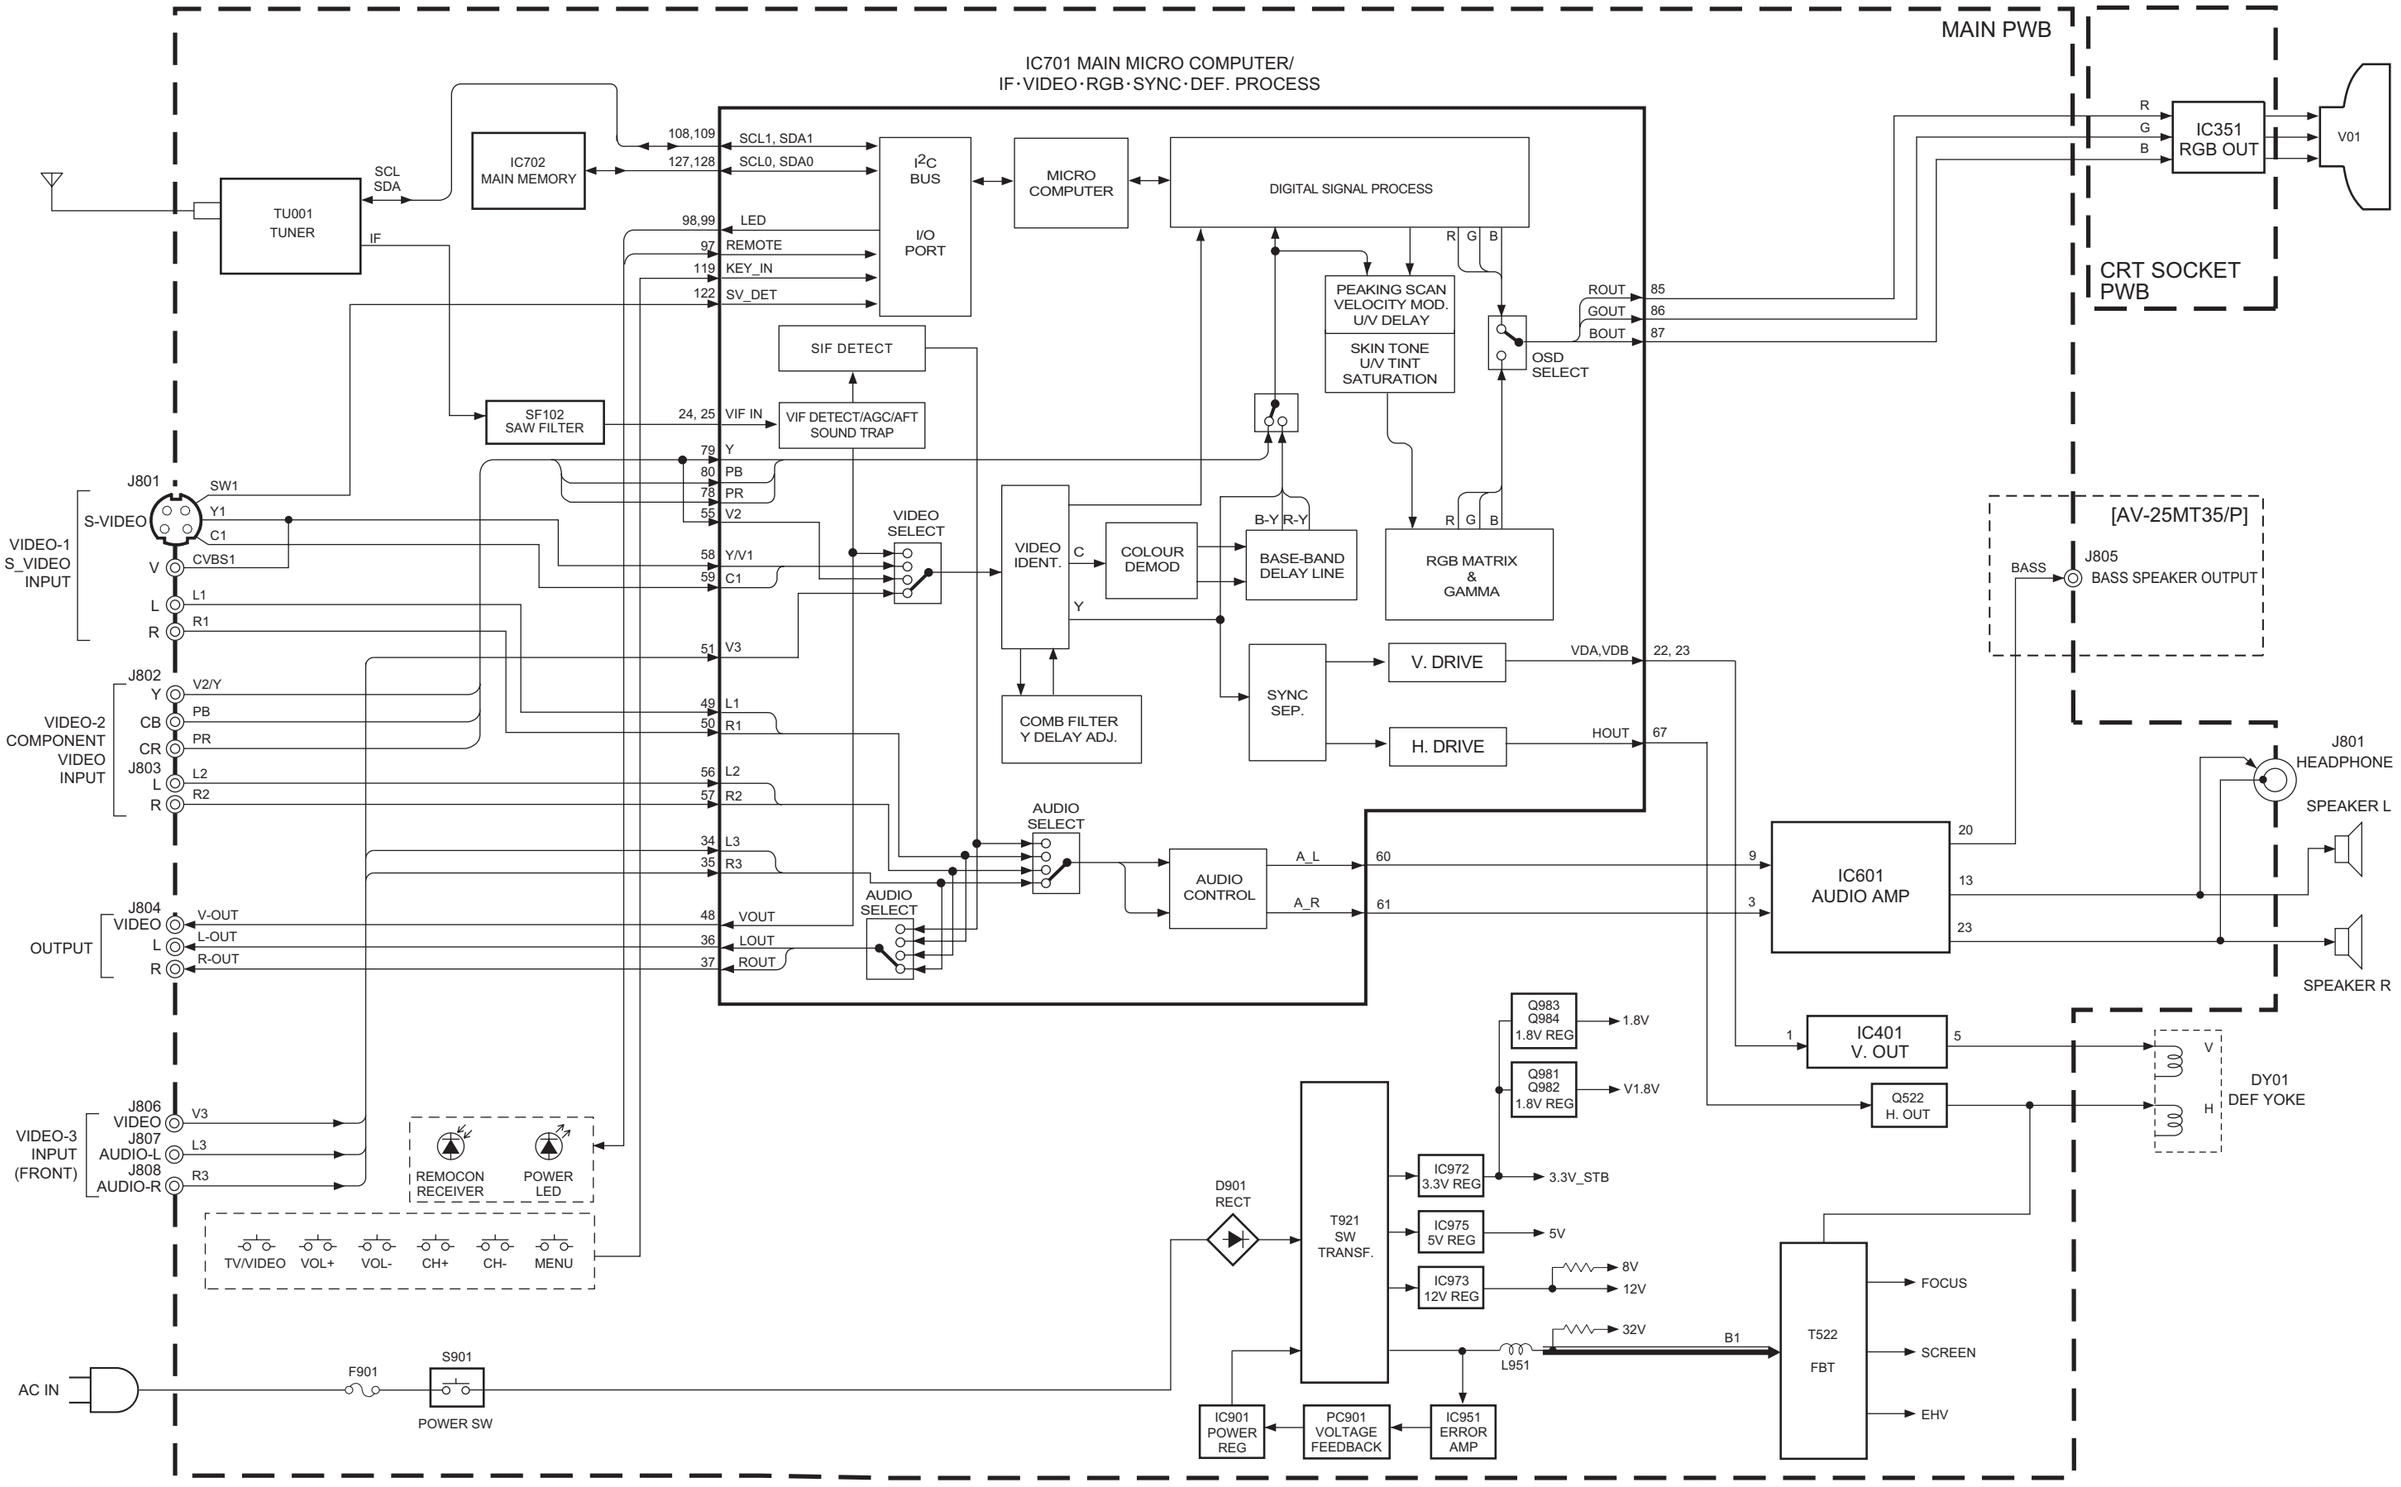

CIRCUIT DIAGRAMS

MAIN PWB CIRCUIT DIAGRAM [AV-25MT35/P] (1/4), (2/4)

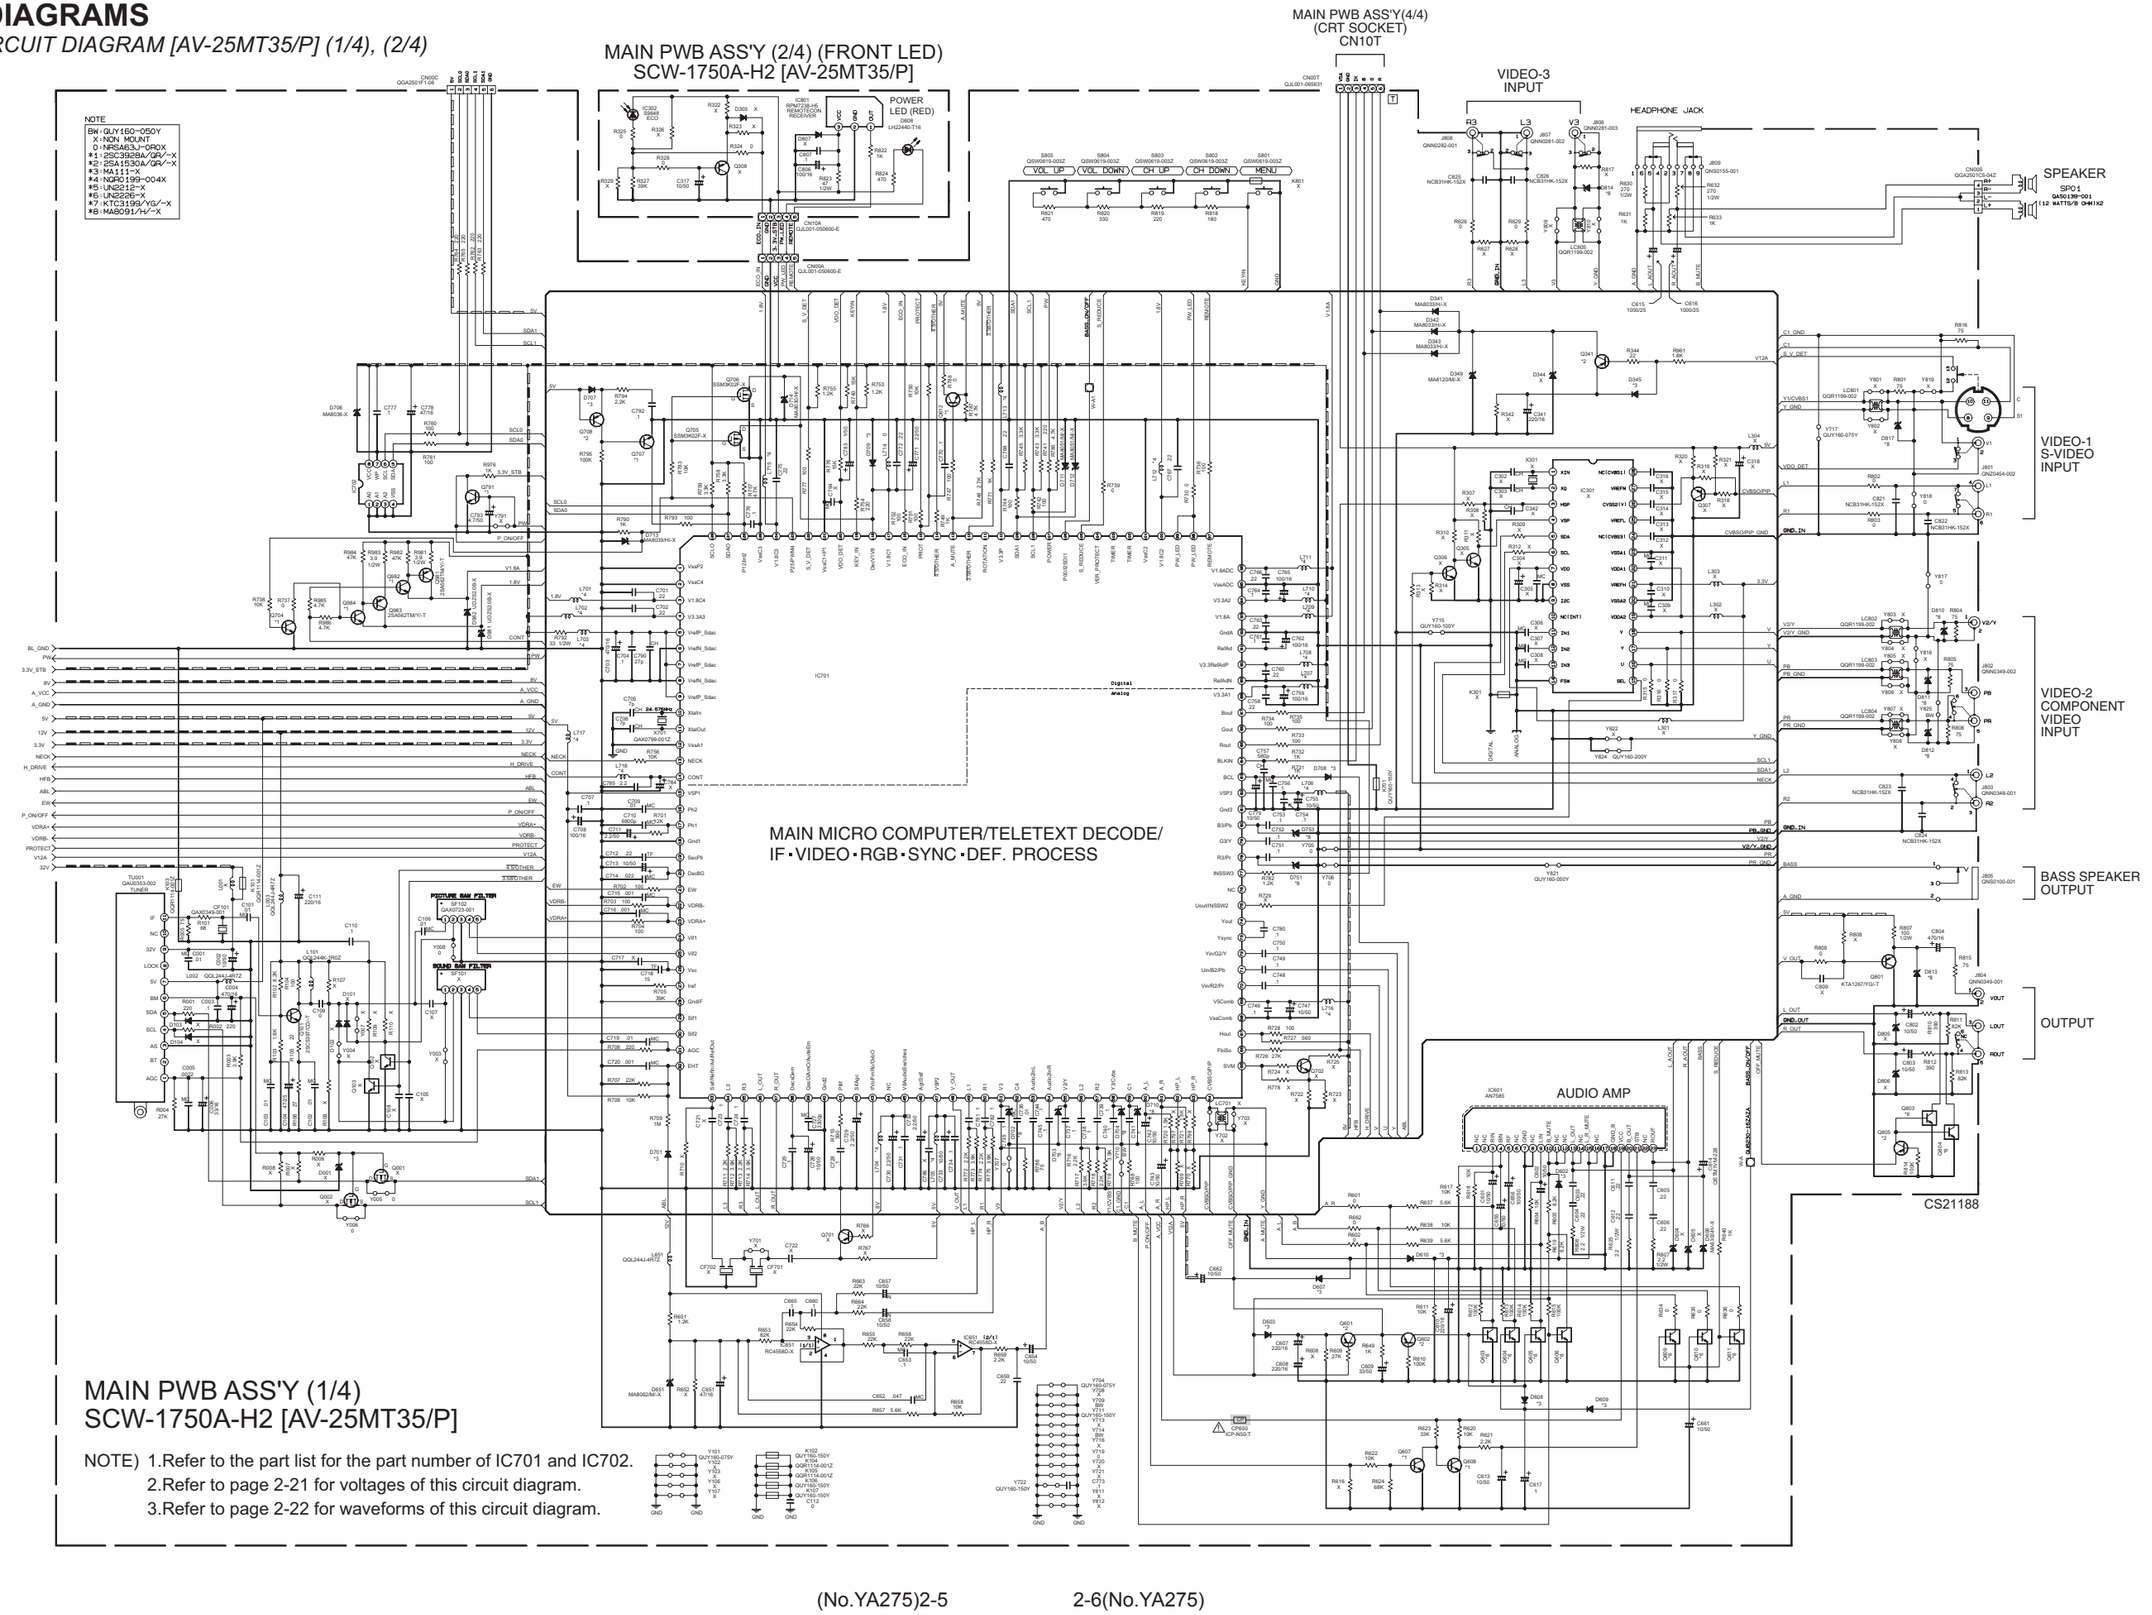

NOTE) 1.Refer to the part list for the part number of IC701 and IC702.
2.Refer to page 2-21 for voltages of this circuit diagram.
3.Refer to page 2-22 for waveforms of this circuit diagram.

MAIN PWB CIRCUIT DIAGRAM [AV-25MT35/P] (3/4), (4/4)

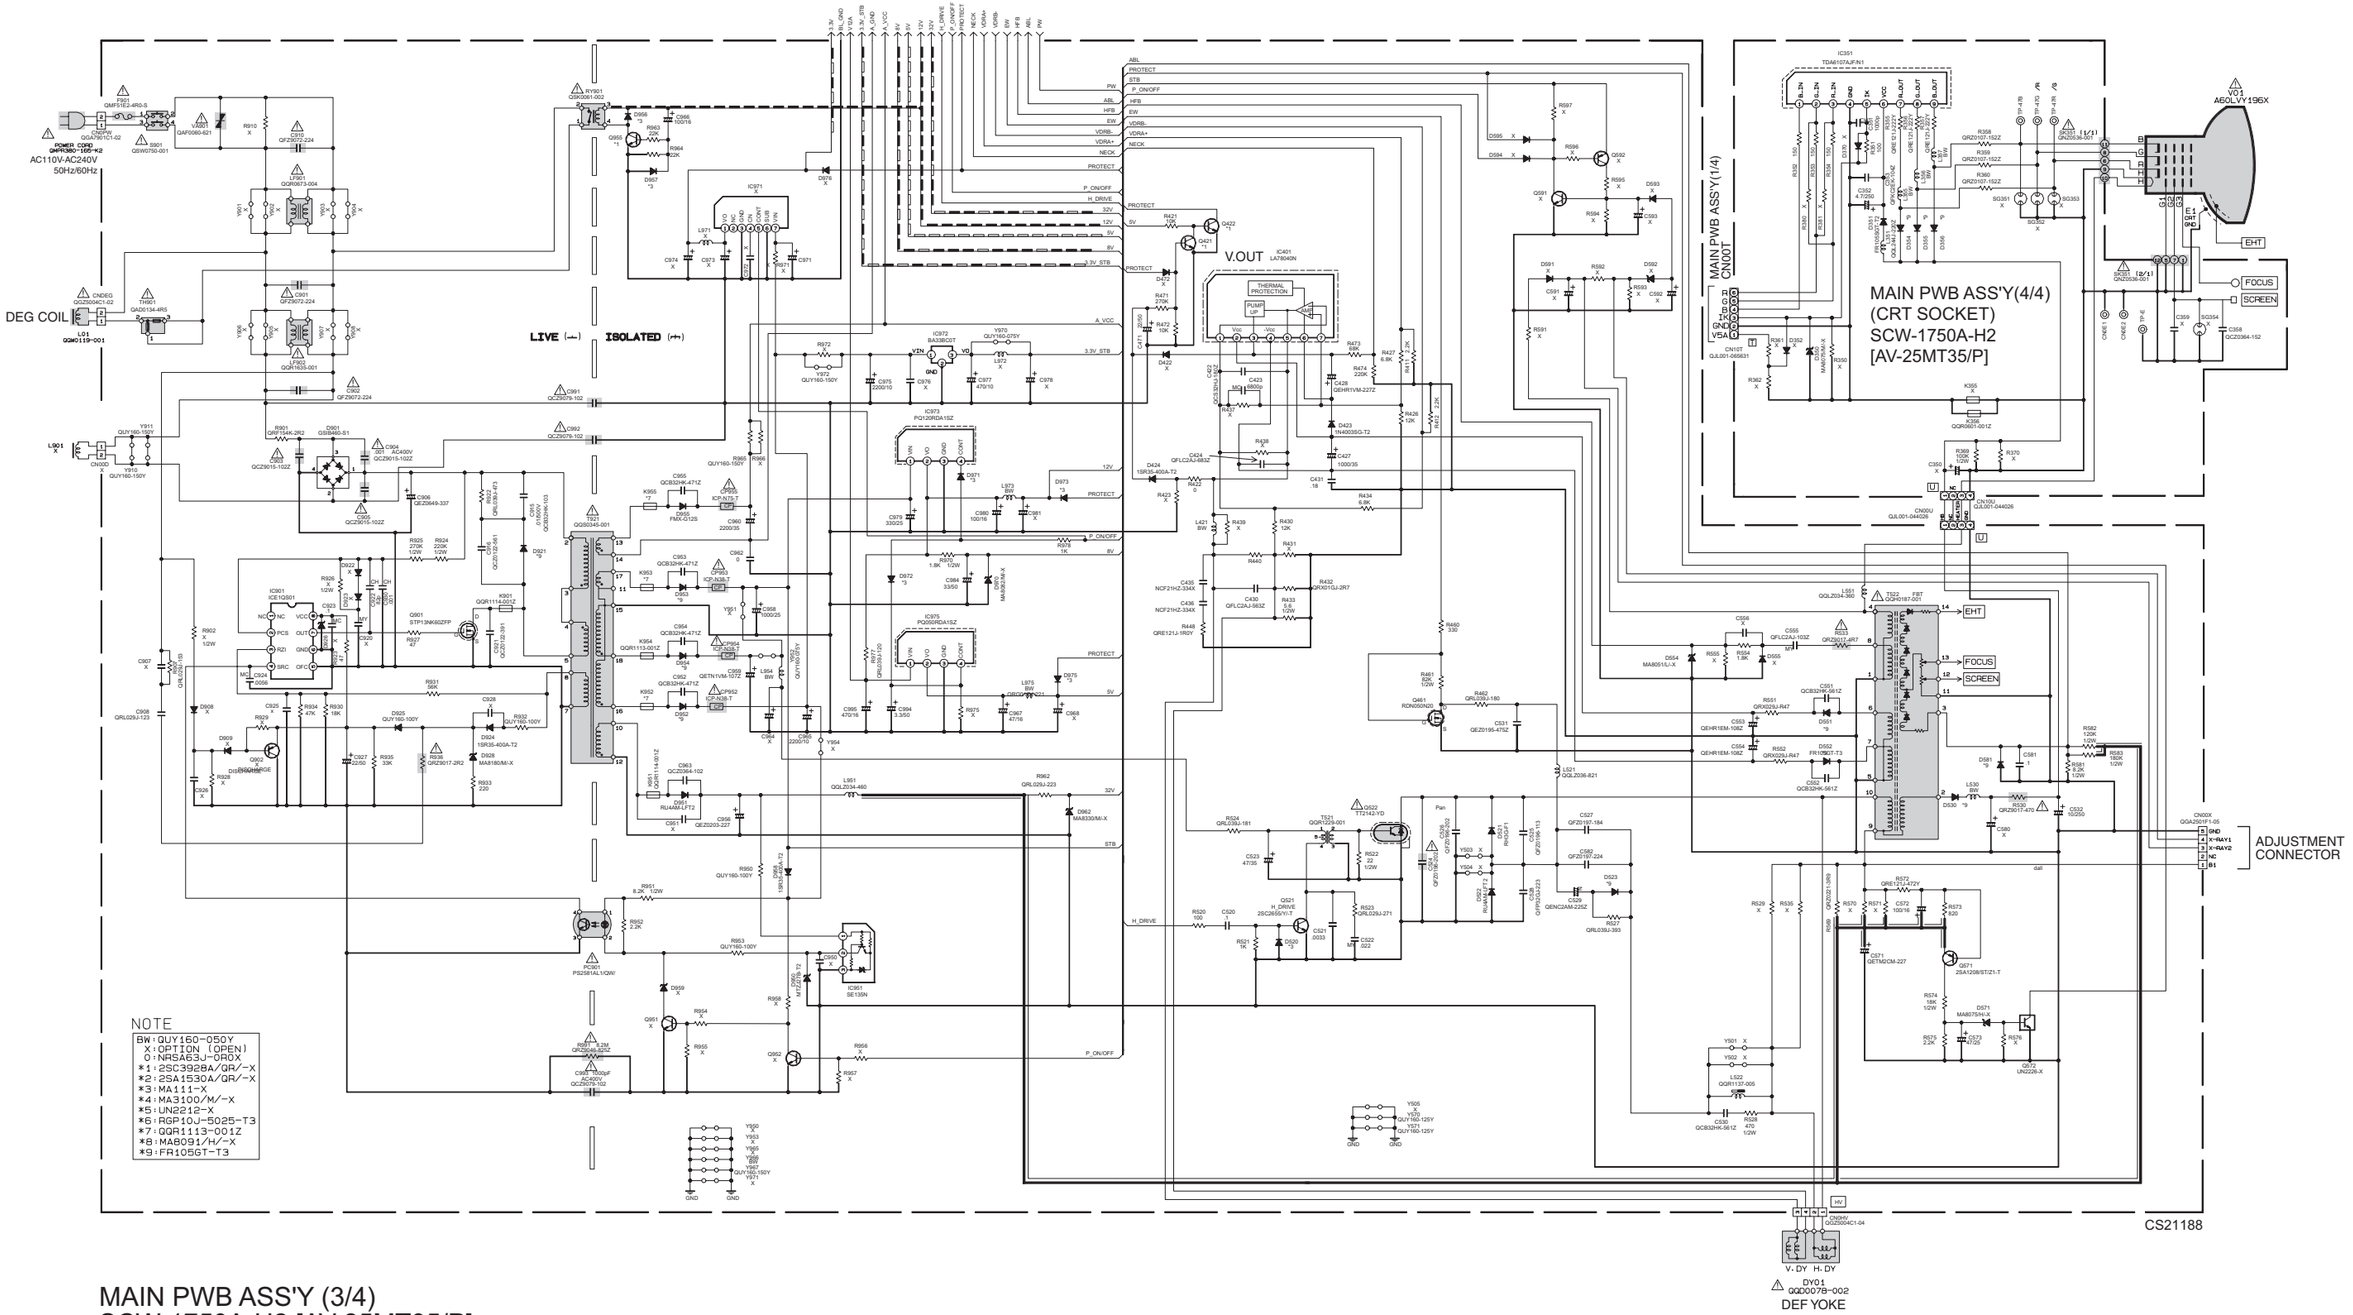

MAIN PWB ASS'Y (3/4)
SCW-1750A-H2 [AV-25MT35/P]

NOTE) 1.Refer to page 2-21 for voltages of this circuit diagram.
2.Refer to page 2-22 for waveforms of this circuit diagram.

MAIN PWB CIRCUIT DIAGRAM [AV-25MT15/P] (1/4), (2/4)

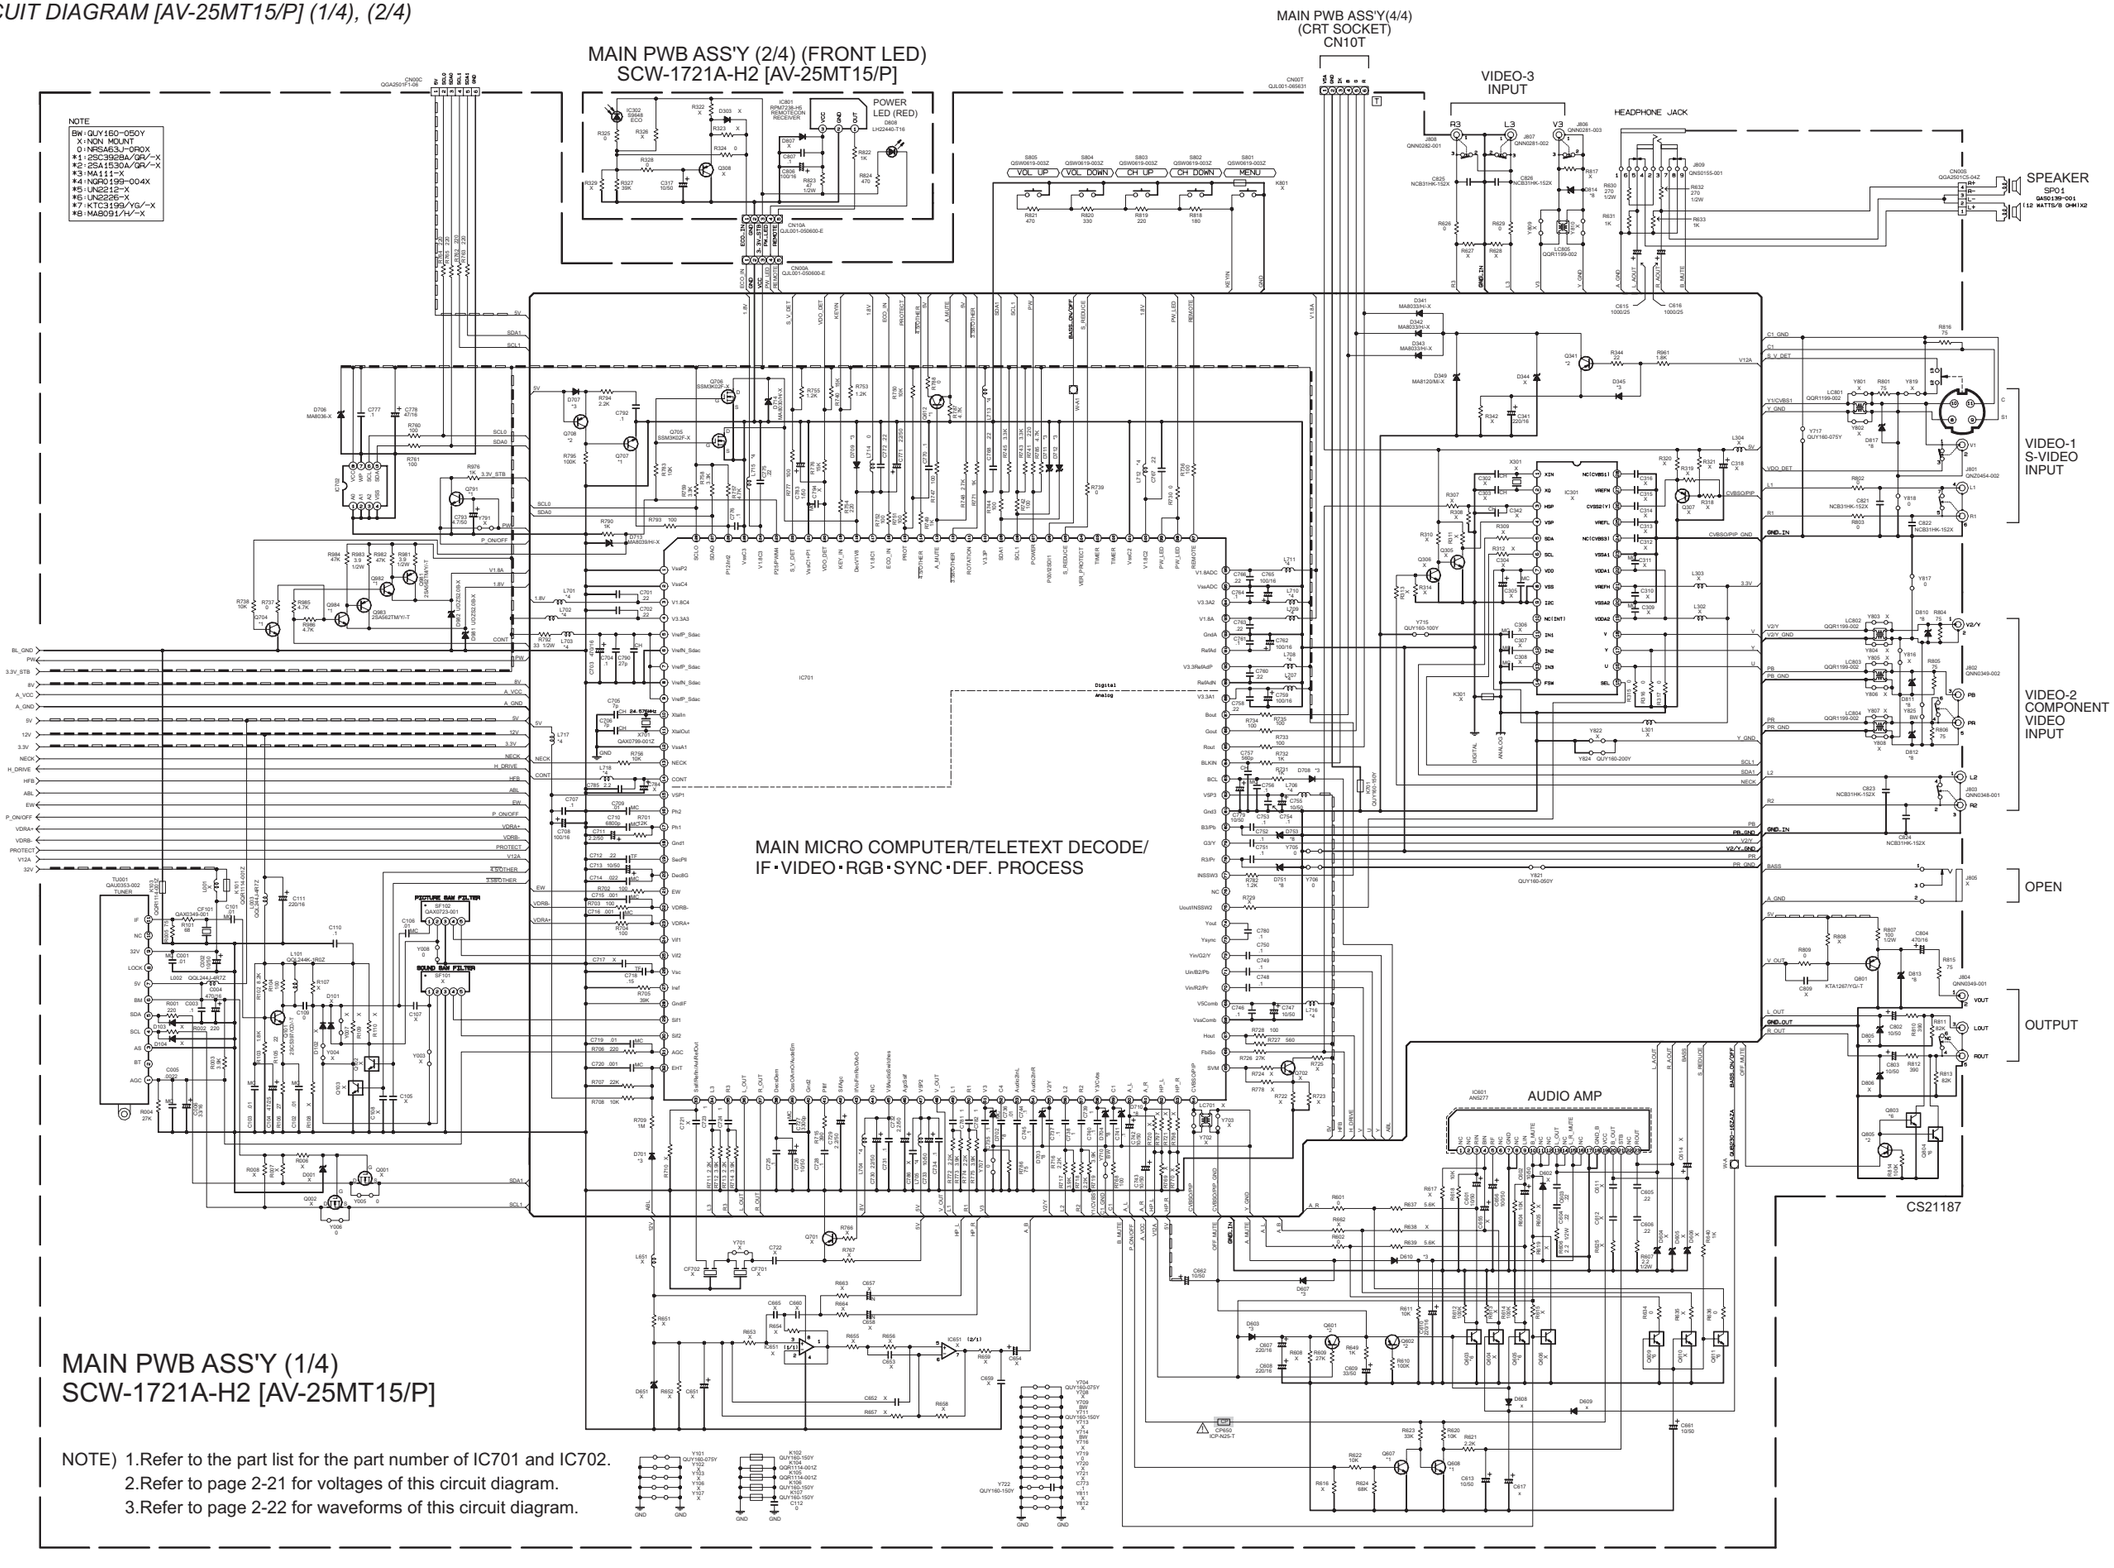

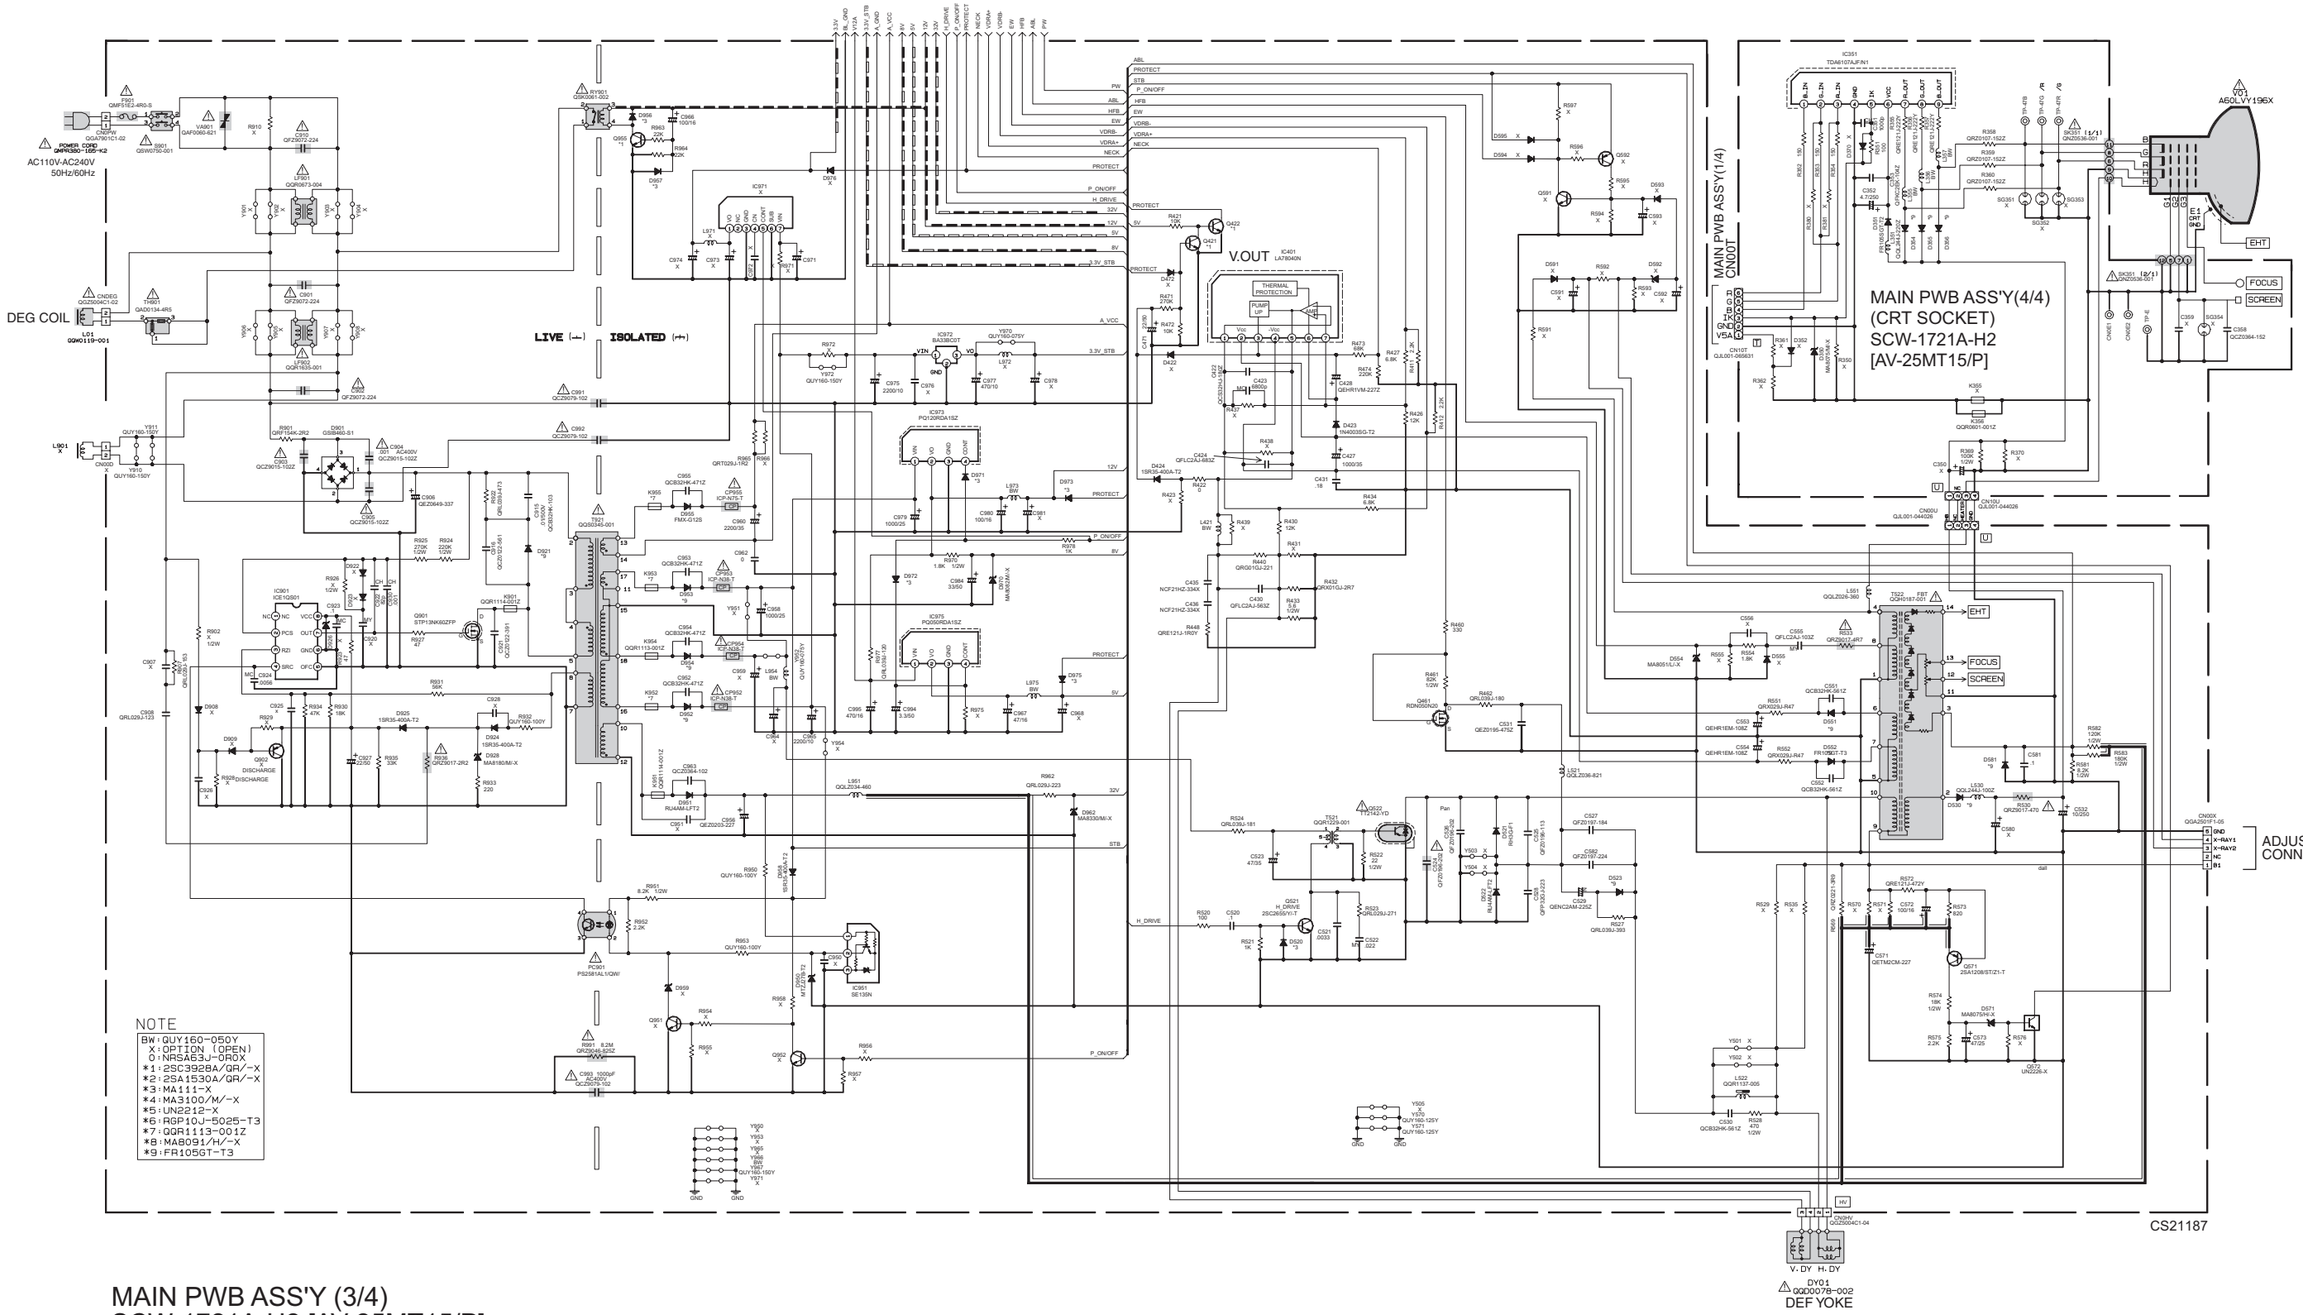

MAIN PWB ASS'Y (3/4)
SCW-1721A-H2 [AV-25MT15/P]

NOTE) 1.Refer to page 2-21 for voltages of this circuit diagram.
2.Refer to page 2-22 for waveforms of this circuit diagram.

MAIN PWB CIRCUIT DIAGRAM [AV-25VA15/P] (1/3)

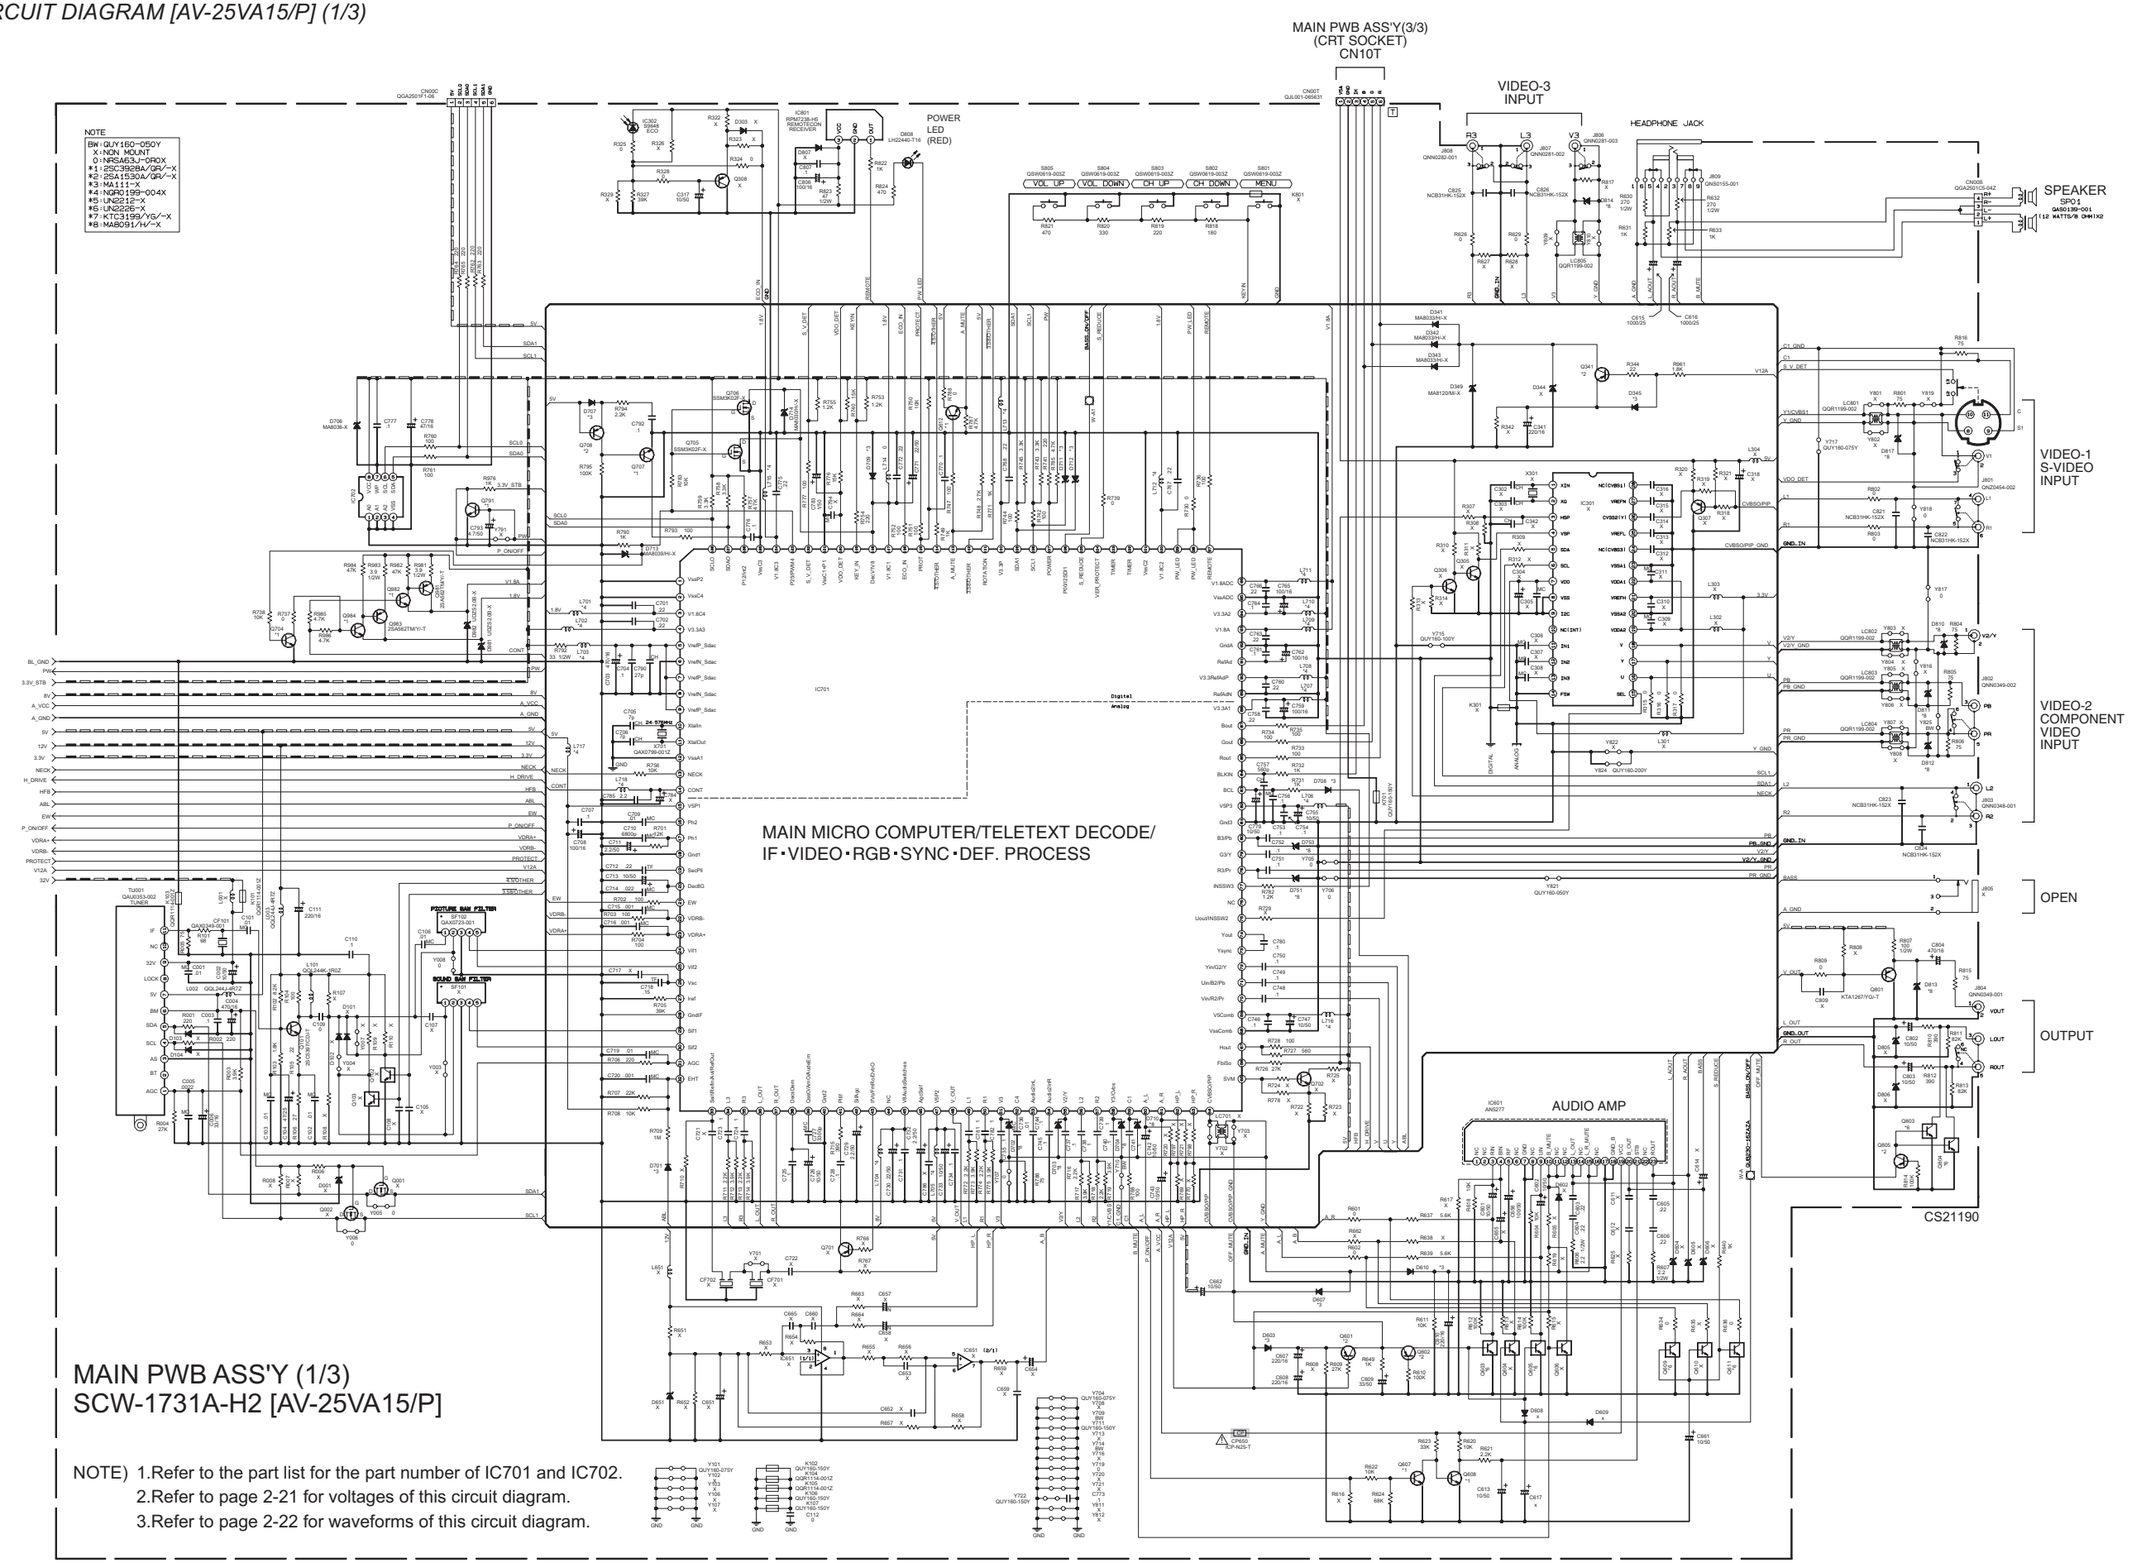

NOTE

BW : QUY160-050Y
X : NON MOUNT
0 : NRSA63J-0R0X
*1 : 2SC3928A/GR/-X
*2 : 2SA1530A/GR/-X
*3 : MA111-X
*4 : NQR019B-004X
*5 : UN2212-X
*6 : UN2226-X
*7 : KTC3198/YG/-X
*8 : MA8091/H/-X

NOTE) 1.Refer to the part list for the part number of IC701 and IC702.
2.Refer to page 2-21 for voltages of this circuit diagram.
3.Refer to page 2-22 for waveforms of this circuit diagram.

MAIN PWB CIRCUIT DIAGRAM [AV-25VA15/P] (2/3), (3/3)

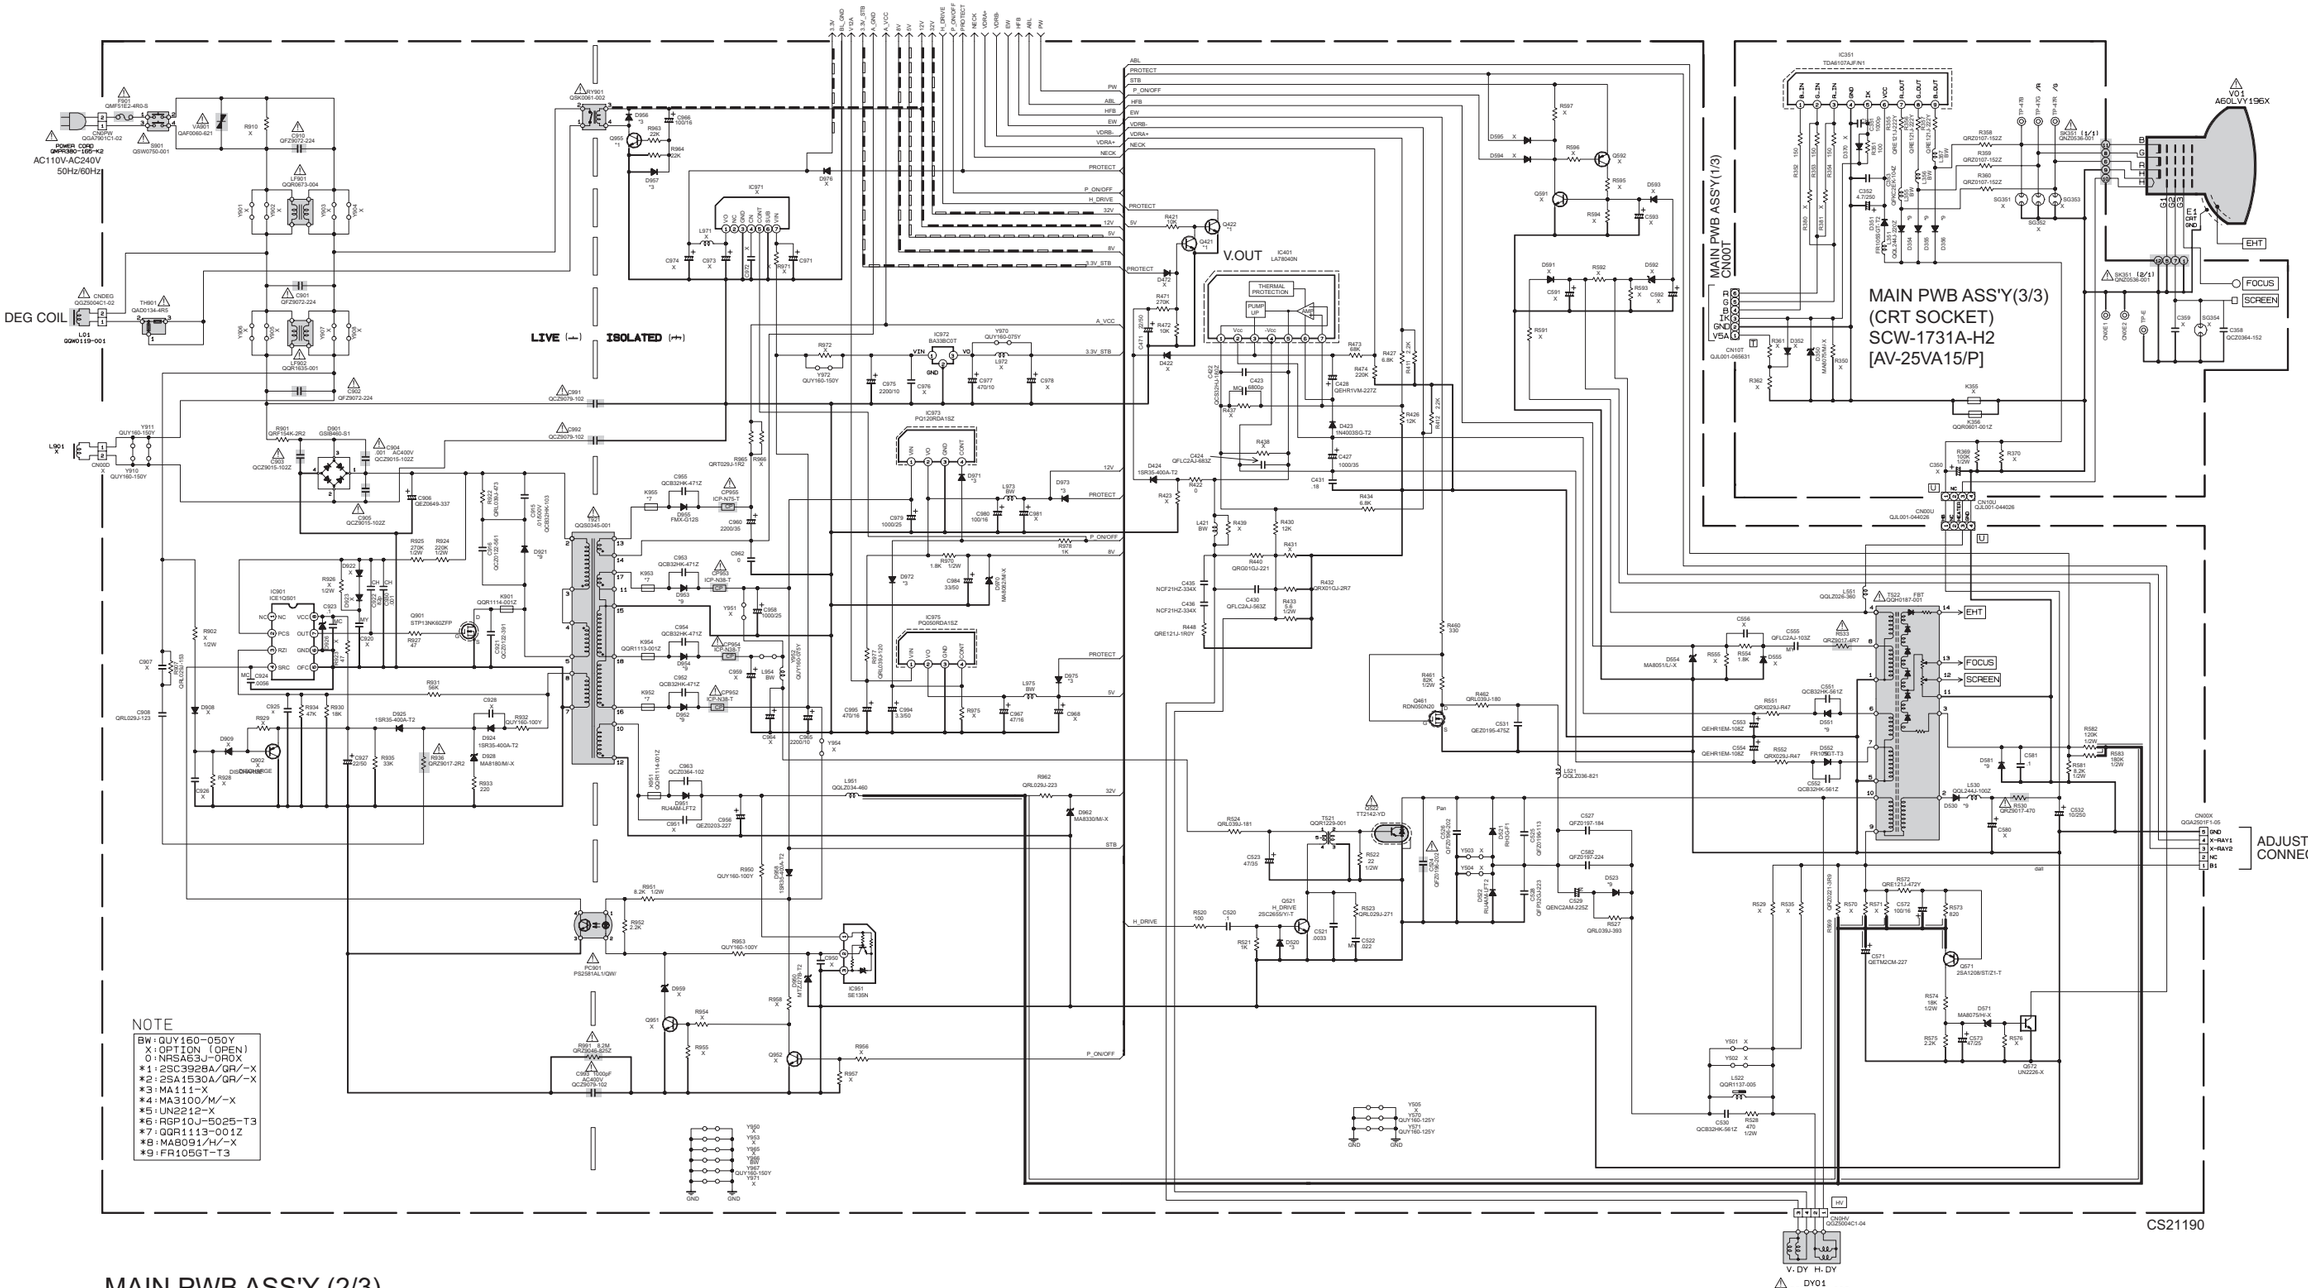

CS21190

MAIN PWB ASS'Y (2/3)
SCW-1731A-H2 [AV-25VA15/P]

NOTE) 1.Refer to page 2-21 for voltages of this circuit diagram.
2.Refer to page 2-22 for waveforms of this circuit diagram.

PATTERN DIAGRAMS

MAIN PWB PATTERN [AV-25MT35/P, AV-25MT15/P]

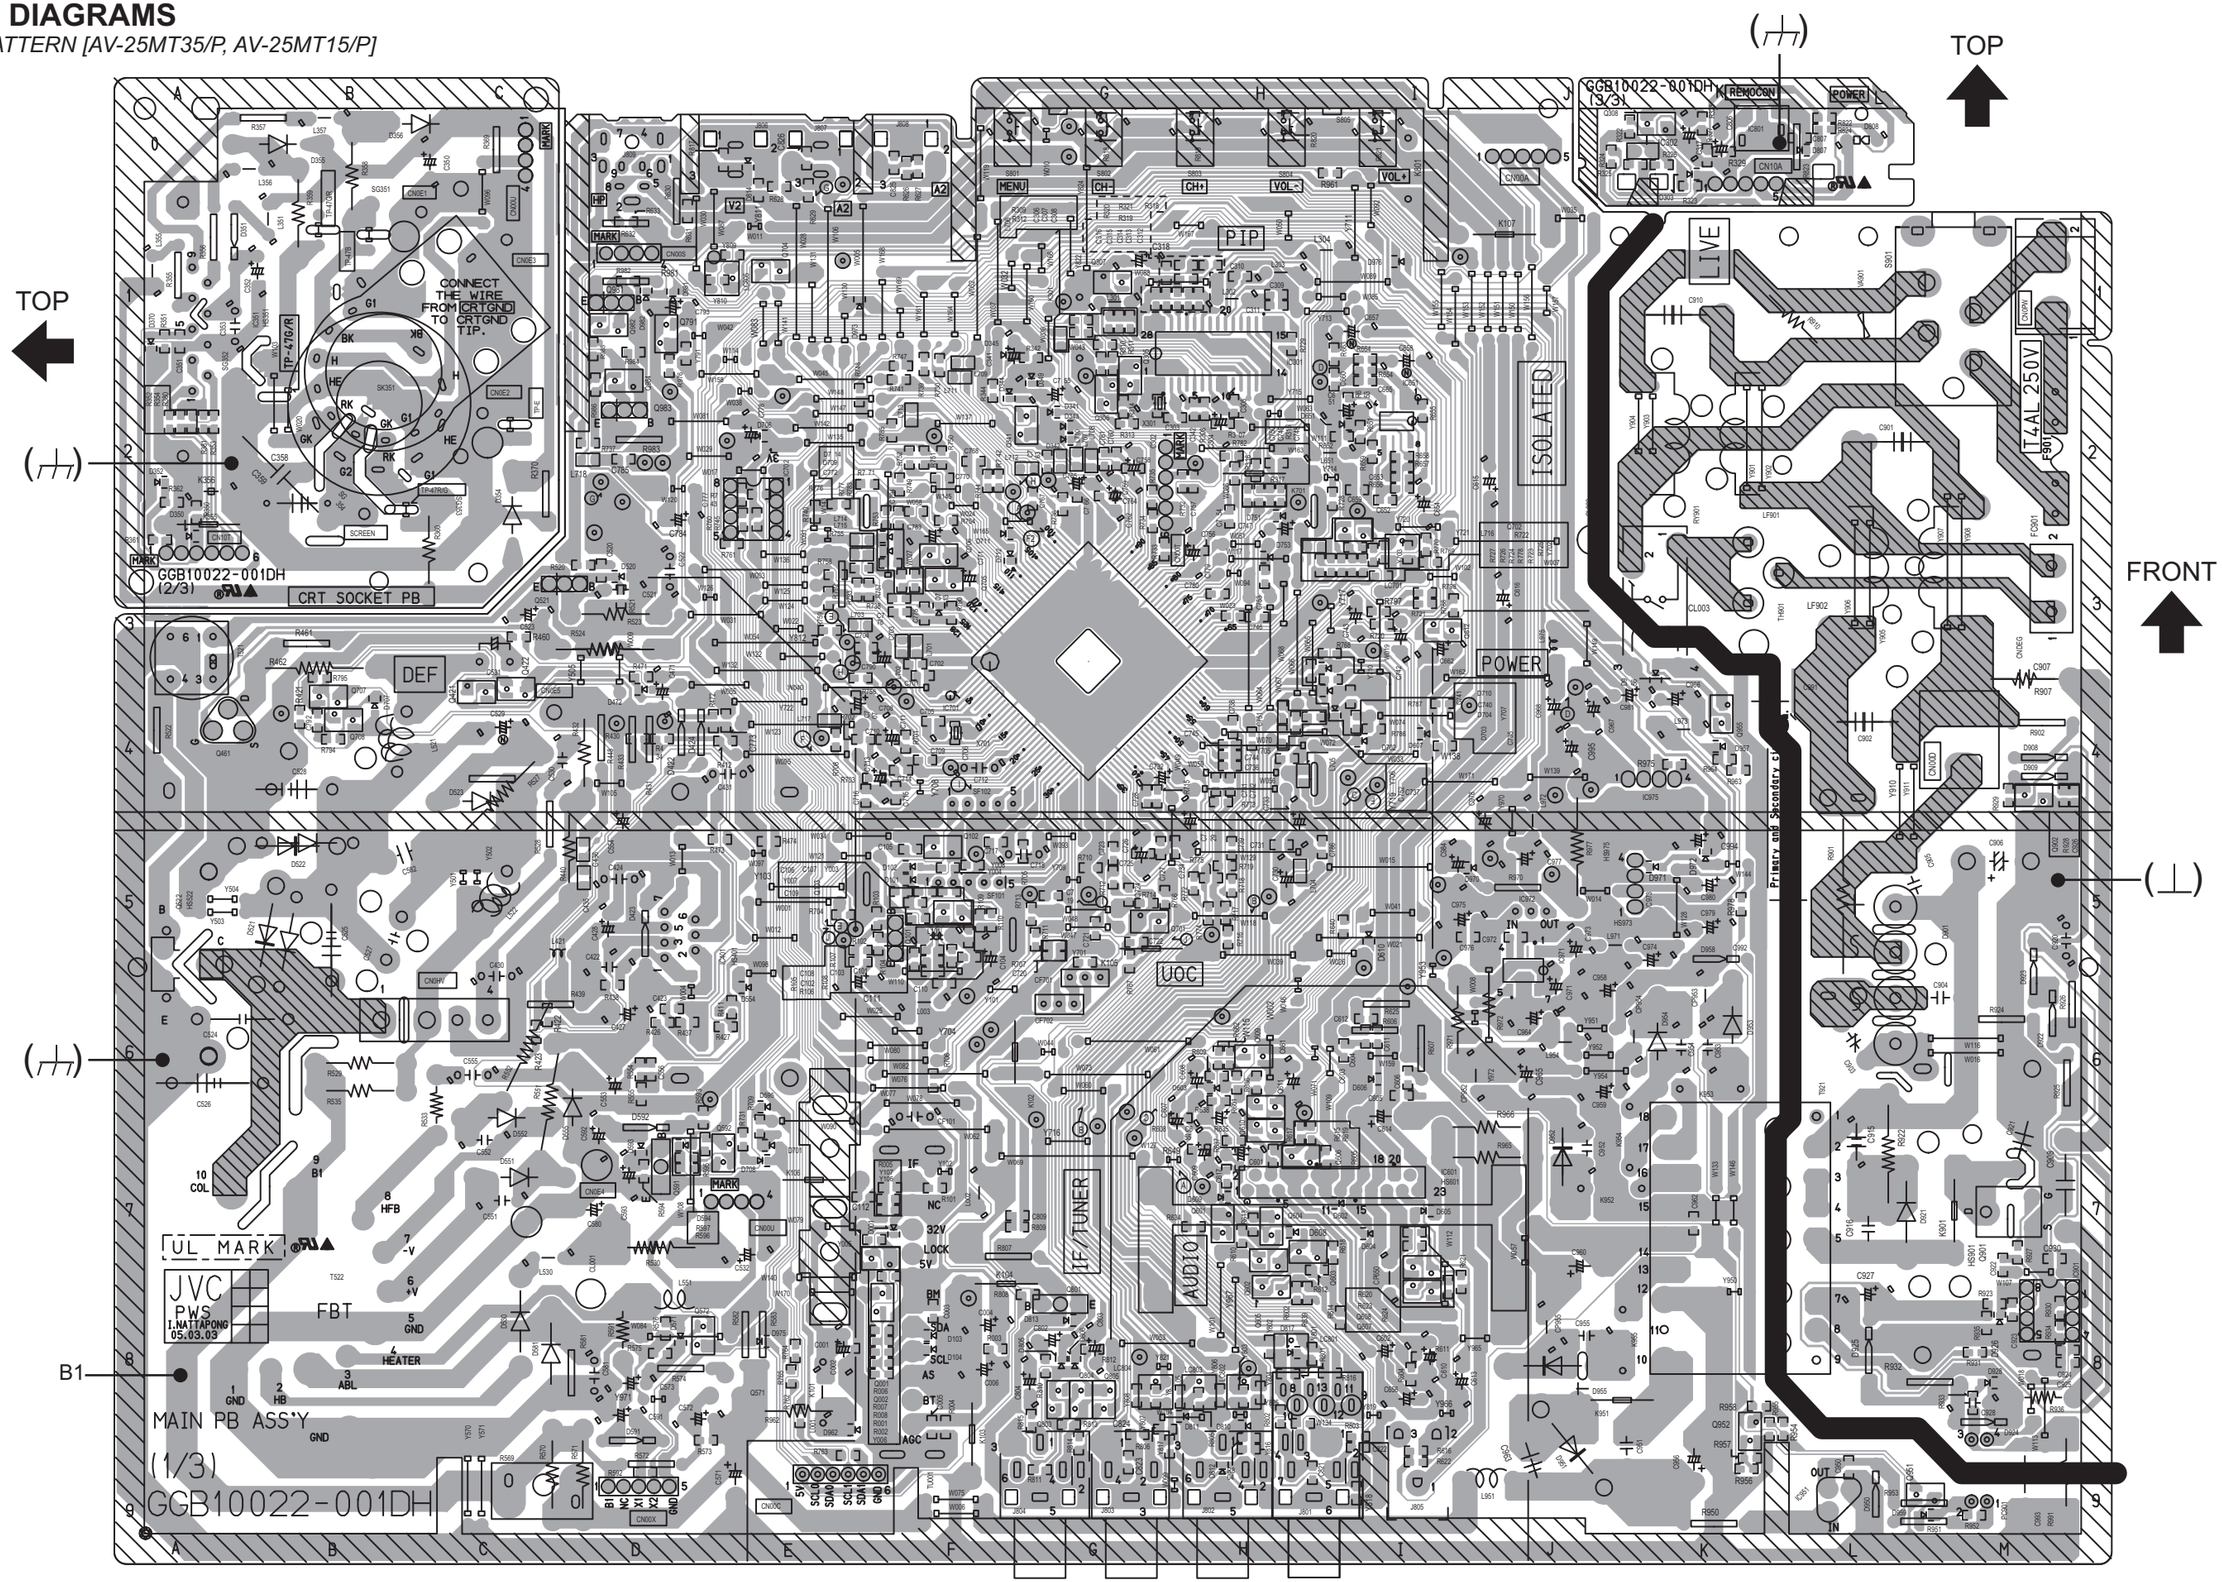

MAIN PWB PATTERN [AV-25VA15/P]

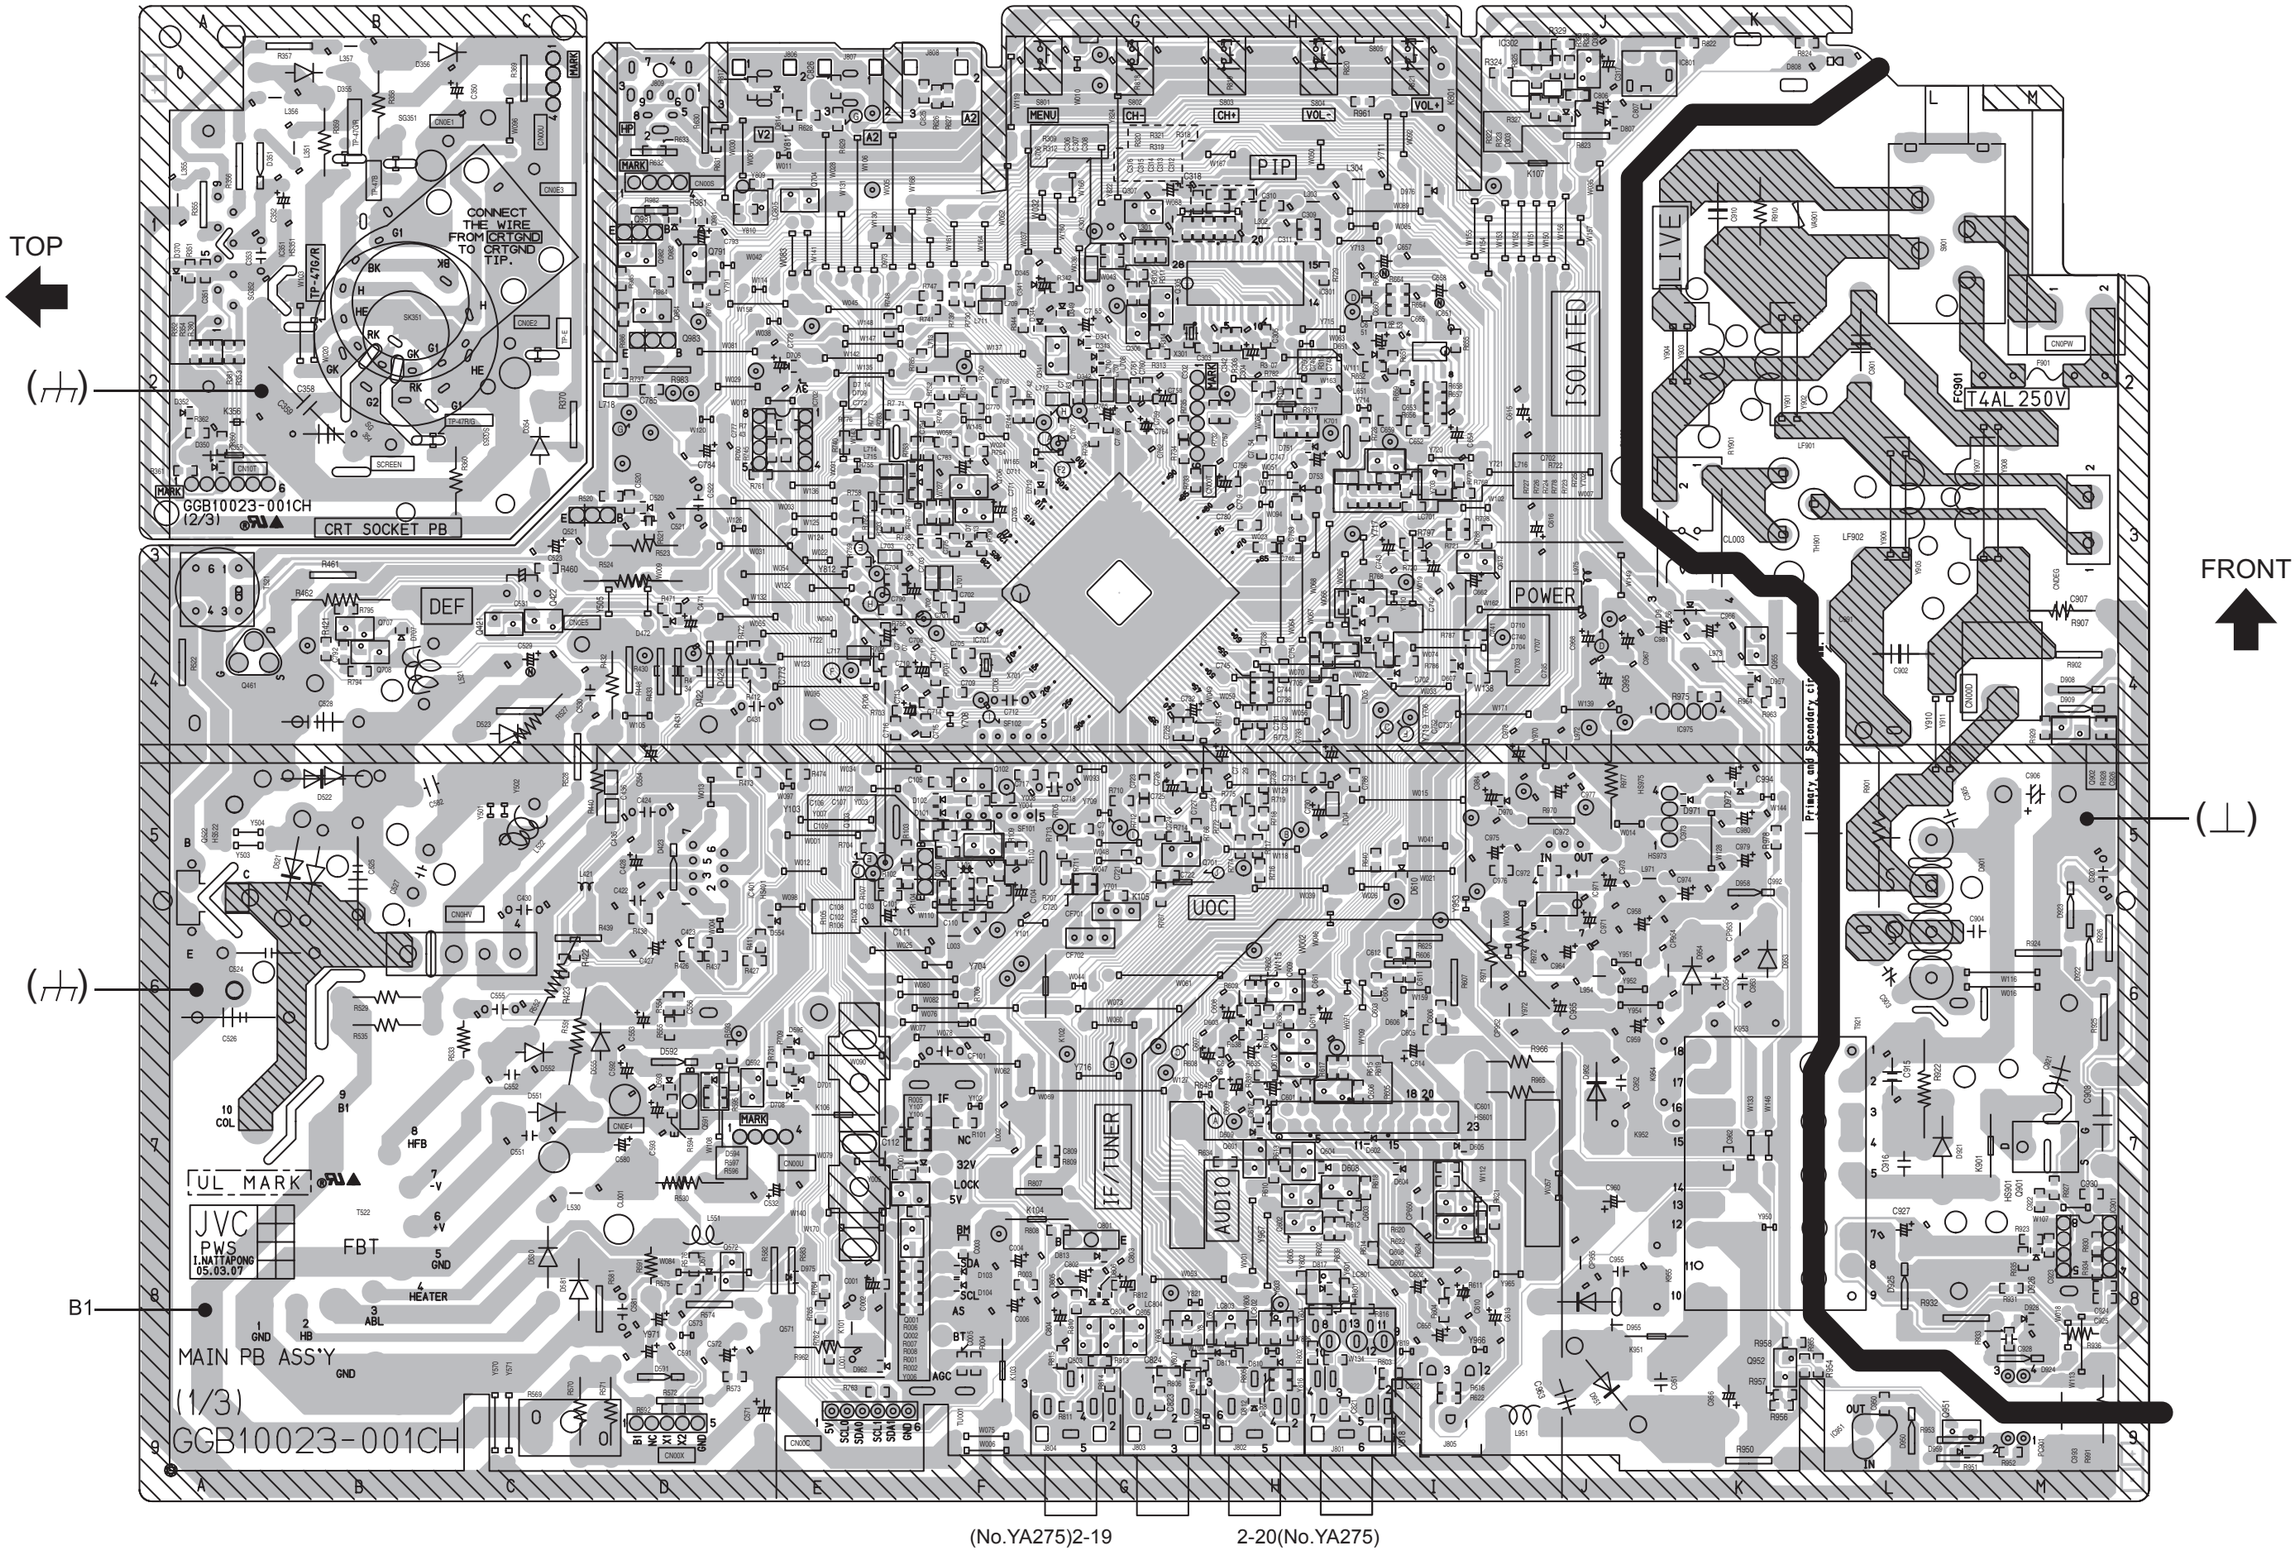

VOLTAGE CHARTS

<MAIN PWB>

MODE PIN NO.	DC (V)
IC401	
1	0.5
2	13.6
3	0
4	-14.1
5	0
6	13.9
7	0.5
IC601	
1	0.2
2	0.1
3	29.4
4	0
5	0.1
6	0.1
7	14.6
8	0.8
9	0
10	30.7
11	18.2
12	14.6
IC701	
1	0
2	0
3	0
4	0
5	3.1
6	0
7	3.1
8	0
9	0
10	0
11	1.3
12	0
13	0
14	2.8
15	4.9
16	1.8
17	0
18	0
19	2.3
20	0
21	0
22	0
23	0.9
24	1.9
25	1.9
26	2.4
27	1.9
28	0
29	0
30	1.9
31	1.7
32	3.4
33	1.9
34	2.2
35	2.2
36	3.6
37	0
38	0
39	2.5
40	0
41	2.0
42	1.7
43	2.2
44	3.5
45	8.4
46	1.8
47	0
48	0
49	2.2
50	2.2
51	1.4
52	1.5
53	2.2
54	0.1
55	1.4
56	2.2
57	2.2
58	1.4
59	1.6
60	3.6
61	3.6
62	3.5
63	3.5
64	0.5
65	2.0
66	0.4
67	1.5
68	0.1
69	4.9
70	1.3
71	1.2
72	1.2
73	1.9
74	1.6
75	0.5

MODE PIN NO.	DC (V)
76	0.1
77	3.2
78	1.2
79	1.2
80	1.3
81	0
82	4.9
83	2.6
84	0
85	2.1
86	2.1
87	2.1
88	3.2
89	0
90	3.2
91	1.6
92	0
93	1.9
94	0
95	0
96	1.8
97	3.0
98	0.1
99	0
100	2.0
101	0
102	2.2
103	0
104	0.1
105	0
106	3.2
107	0
108	2.0
109	1.8
110	3.2
111	0
112	3.2
113	0
114	3.2
115	3.1
116	2.6
117	1.9
118	2.0
119	3.2
120	0
121	0
122	3.1
123	0
124	1.9
125	0
126	3.2
127	2.9
128	3.2
IC702	
1	0
2	0
3	0.1
4	0
5	3.2
6	3.2
7	0
8	3.2
IC901	
1	0.1
2	1.9
3	2.0
4	3.5
5	0.1
6	0.1
7	1.9
8	19.3
IC951	
1	134.1
2	11.7
3	0
IC972	
1	7.1
2	0.1
3	3.2
IC973	
1	15.2
2	11.9
3	0
4	2.7
IC975	
1	0.1
2	4.9
3	0.1
4	2.4
Q101	
E	2.2
C	11.8
B	2.9
Q341	
E	7.9
C	1.9
B	8.1

MODE PIN NO.	DC (V)
Q461	
S	0
D	13.7
G	3.7
Q521	
E	0
C	17.1
B	0
Q522	
E	0
C	125.0
B	-0.1
Q571	
E	134.0
C	0
B	133.7
Q572	
E	0
C	3.1
B	-1.0
Q601	
E	8.1
C	0.1
B	0.1
Q602	
E	0.4
C	0.2
B	0
Q603	
E	0
C	0.1
B	-1.6
Q605	
E	0
C	0
B	-1.5
Q607	
E	0
C	0.1
B	0.2
Q608	
E	0.1
C	20.5
B	0
Q609	
E	0.1
C	0.1
B	2.4
Q611	
E	0
C	0
B	2.4
Q612	
E	0.1
C	4.9
B	0
Q704	
E	0
C	0
B	0
Q705	
S	0
G	2.0
D	0
Q706	
S	0
G	2.0
D	0
Q707	
E	0
C	0
B	0
Q708	
E	4.7
C	0
B	4.9
Q791	
E	0
C	2.9
B	0
Q801	
E	2.1
C	0
B	1.4
Q803	
E	0
C	0
B	-1.0
Q804	
E	0
C	0.1
B	-1.1
Q805	
E	0.1
C	-1.0
B	0

MODE PIN NO.	DC (V)
Q901	
S	0
D	294.6
G	1.5
Q955	
E	0
C	0.3
B	0.3
Q981	
E	2.7
C	1.9
B	1.9
Q982	
E	1.9
C	2.0
B	2.5
Q983	
E	2.8
C	2.0
B	2.0
Q984	
E	2.0
C	2.0
B	2.6
TU001	
1	1.8
2	2.6
3	-0.1
4	1.9
5	1.9
6	4.9
7	4.9
8	0
9	35.1
11	0

<MAIN PWB (FRONT LED)>

MODE PIN NO.	DC (V)
IC302	
1	2.5
2	0.2
IC801	
1	3.0
2	0.1
3	3.2

<MAIN PWB (CRT SOCKET)>

MODE PIN NO.	DC (V)
IC351	
1	2.2
2	2.1
3	2.1
4	0
5	4.8
6	188.3
7	116.4
8	117.6
9	115.4

WAVEFORMS

-MAIN PWB-

IC401-1

1.2Vp-p

IC401-3



29Vp-p

IC401-5



55Vp-p

IC401-6



31Vp-p

IC401-7



0.7Vp-p

IC701-10



2.6Vp-p

IC701-11



3.6Vp-p

IC701-22

1.0Vp-p

IC701-23



1.3Vp-p

IC701-48



1.8Vp-p

IC701-66



5.4Vp-p

IC701-67



3.0Vp-p

IC701-74



1.2Vp-p

IC701-85



1.9Vp-p

IC701-86



1.4Vp-p

IC701-87



2.2Vp-p

T522-2



220Vp-p

T522-4

25Vp-p

T522-6



120Vp-p

T522-7

130Vp-p

T522-8

60Vp-p

T522-9



15Vp-p

Q521-B

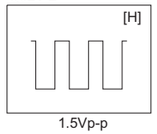

1.5Vp-p

Q521-C

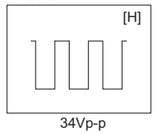

34Vp-p

Q522-B

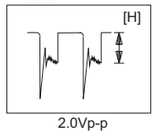

2.0Vp-p

Q522-C

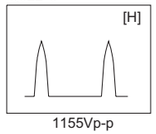

1155Vp-p

-CRT SOCKET PWB-

IC351-7

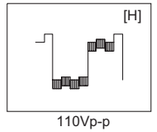

110Vp-p

IC351-8

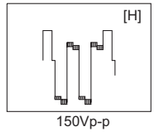

150Vp-p

IC351-9

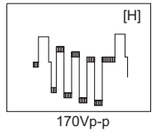

170Vp-p

JVC

Victor Company of Japan, Limited
AV & MULTIMEDIA COMPANY DISPLAY CATEGORY 12, 3-chome, Moriya-cho, Kanagawa-ku, Yokohama-city, Kanagawa-prefecture, 221-8528, Japan

(No.YA275)

Printed in Japan
VPT

PARTS LIST

CAUTION

- The parts identified by the ⚠ symbol are important for the safety . Whenever replacing these parts, be sure to use specified ones to secure the safety.
- The parts not indicated in this Parts List and those which are filled with lines --- in the Parts No. columns will not be supplied.
- P.W. BOARD Ass'y will not be supplied, but those which are filled with the Parts No. in the Parts No. columns will be supplied.

ABBREVIATIONS OF RESISTORS, CAPACITORS AND TOLERANCES

RESISTORS	
CR	Carbon Resistor
FR	Fusible Resistor
PR	Plate Resistor
VR	Variable Resistor
HV R	High Voltage Resistor
MF R	Metal Film Resistor
MG R	Metal Glazed Resistor
MP R	Metal Plate Resistor
OM R	Metal Oxide Film Resistor
CMF R	Coating Metal Film Resistor
UNF R	Non-Flammable Resistor
CH V R	Chip Variable Resistor
CH MG R	Chip Metal Glazed Resistor
COMP. R	Composition Resistor
LPTC R	Linear Positive Temperature Coefficient Resistor

CAPACITORS	
C CAP.	Ceramic Capacitor
E CAP.	Electrolytic Capacitor
M CAP.	Mylar Capacitor
CH CAP.	Chip Capacitor
HV CAP.	High Voltage Capacitor
MF CAP.	Metalized Film Capacitor
MM CAP.	Metalized Mylar Capacitor
MP CAP.	Metalized Polystyrol Capacitor
PP CAP.	Polypropylene Capacitor
PS CAP.	Polystyrol Capacitor
TF CAP.	Thin Film Capacitor
MPP CAP.	Metalized Polypropylene Capacitor
TAN. CAP.	Tantalum Capacitor
CH C CAP.	Chip Ceramic Capacitor
BP E CAP.	Bi-Polar Electrolytic Capacitor
CH AL E CAP.	Chip Aluminum Electrolytic Capacitor
CH AL BP CAP.	Chip Aluminum Bi-Polar Capacitor
CH TAN. E CAP.	Chip Tantalum Electrolytic Capacitor
CH AL BP E CAP.	Chip Tantalum Bi-Polar Electrolytic Capacitor

RESISTORS									
F	G	J	K	M	N	R	H	Z	P
±1%	±2%	±5%	±10%	±20%	±30%	+30% -10%	+50% -10%	+80% -20%	+100% -0%

CONTENTS

USING P.W. BOARD & REMOTE CONTROL UNIT 3-3
EXPLODED VIEW PARTS LIST -1 [AV-25MT35/P, AV-25MT15/P] 3-3
EXPLODED VIEW -1 3-3
EXPLODED VIEW PARTS LIST -2 [AV-25VA15/P] 3-4
EXPLODED VIEW -2 3-4
EXPLODED VIEW PARTS LIST -3 3-5
EXPLODED VIEW -3 3-6
EXPLODED VIEW PARTS LIST -4 [AV-25MT35/P] 3-7
EXPLODED VIEW -4 3-7

PRINTED WIRING BOARD PARTS LIST [AV-25MT35/P] 3-8
MAIN P.W. BOARD ASS'Y (SCW-1750A-H2) 3-8

PRINTED WIRING BOARD PARTS LIST [AV-25MT15/P] 3-12
MAIN P.W. BOARD ASS'Y (SCW-1721A-H2) 3-12

PRINTED WIRING BOARD PARTS LIST [AV-25VA15/P] 3-16
MAIN P.W. BOARD ASS'Y (SCW-1731A-H2) 3-16

PREMOTE CONTROL UNIT PARTS LIST (RM-C1287-1H) 3-20
PACKING 3-20
PACKING PARTS LIST 3-20

USING P.W. BOARD & REMOTE CONTROL UNIT

P.W.B ASS'Y	AV-25MT35/P	AV-25MT15/P	AV-25VA15/P
MAIN P.W.B	SCW-1750A-H2	SXW-1721A-H2	SCW-1731A-H2
REMOTE CONTROL UNIT	RM-C1287-1H	←	←

EXPLODED VIEW PARTS LIST -1 [AV-25MT35/P, AV-25MT15/P]

⚠	Ref.No.	Part No.	Part Name	Description	Local
	1	GG10346-001B-H	SP PANEL LEFT		
	2	GG10346-002B-H	SP PANEL RIGHT		
	3	GG10345-001B-H	FRONT FRAME TOP		
	4	GG10345-002B-H	FRONT FRAME BOT		
	5	GG30120-001A-H	OPERATION SHEET		
	6	GG30115-001B-H	LED LENS		
⚠	100	GG10343-001B-H	FRONT CABINET ASS'Y	Inc.101,102,103	
	101	GG20082-001B-H	DOOR		
	102	GG30114-001B-H	POWER KNOB		
	103	CM35235-003-H	SPRING		

EXPLODED VIEW -1

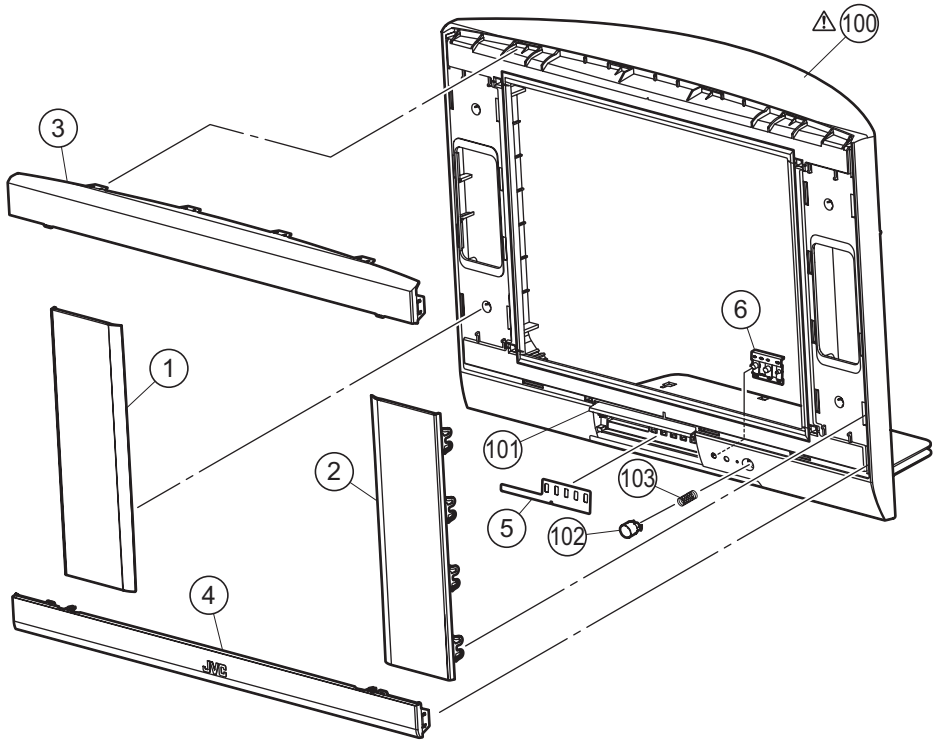

EXPLODED VIEW PARTS LIST -2 [AV-25VA15/P]

⚠	Ref.No.	Part No.	Part Name	Description	Local
	1	GG30068-001A-H	AV SHEET		
	2	GG40023-003A-H	JVC MARK		
	3	GG30044-001B-H	REMOCON LENS		
	4	GG30042-001B-H	LED LENS		
	5	CM35235-003-H	SPRING		
⚠	100	GG10253-017A-H	FRONT CABINET ASS'Y	Inc.101,102,103	
	101	GG20044-001C-H	DOOR		
	102	GG30043-002A-H	POWER KNOB		
	103	GG20022-002B-H	CONTROL KNOB		

EXPLODED VIEW -2

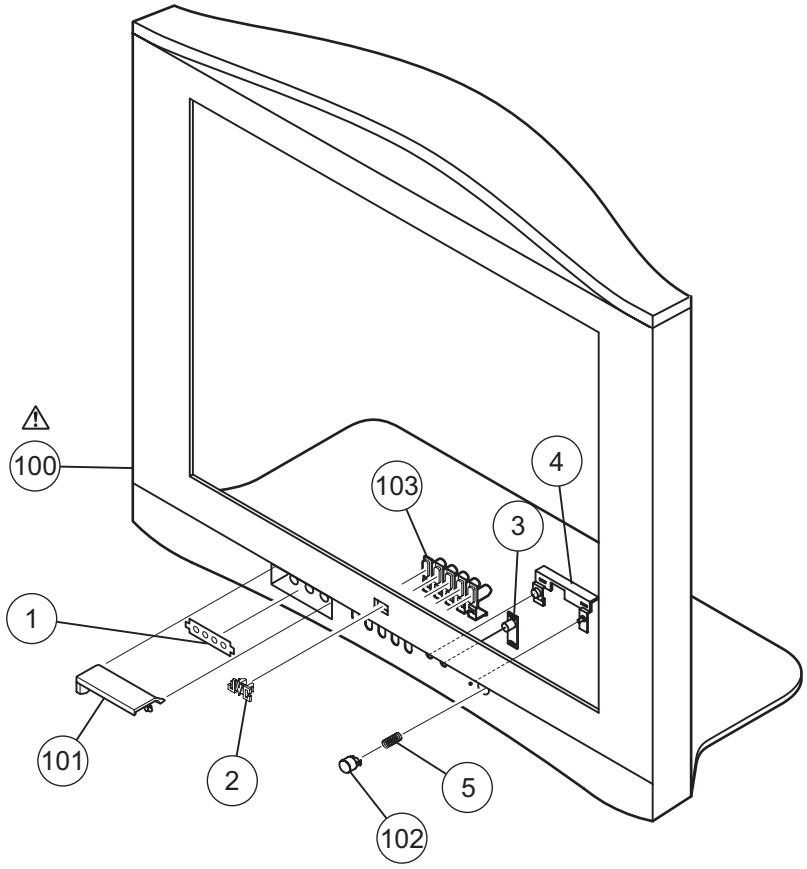

EXPLODED VIEW PARTS LIST -3

⚠	Ref.No.	Part No.	Part Name	Description	Local
⚠	V01	A60LVY196X	CRT		
⚠	DY01	QQD0078-002	DEF YOKE		
⚠	L01	QQW0119-001	DEG COIL		
⚠	T522	QQH0187-001	FB TRANSF		
	11	QYSBSFG4016ZA	TAP SCREW	M4 x 16mm(x11)	
	12	QYSBSF3010ZA	TAP SCREW	M3 x 10mm(x4)	
⚠	13	GG10249-012A-H	REAR COVER		AV-25MT35/P
⚠	13	GG10249-011A-H	REAR COVER		AV-25MT15/P,AV-25VA15/P
⚠	14	QMPR380-165-K2	POWER CORD	1.65m BLACK	
⚠	15	CM47005-A01-H	POWER CORD CLAMP		
	16	GG30119-001B-H	SUB PCB HOLDER		AV-25MT35/P,AV-25MT15/P
	17	QAL0608-001	PC MAGNET		
	18	QAL0627-001	DY WEDGE	(x3)	
	19	A48457-3-H	SPRING		
	20	WJY0029-001A-E	BRAIDED ASS'Y		
	21	WJY0013-003A-E	BRAIDED ASS'Y	(x2)	
	22	CM36623-003-H	CHASSIS RAIL	(x2)	
	23	GG40046-001A-H	TAP SCREW	(x4)	
	24	LC40226-005A-H	SPACER	(x4)	
	25	GG20057-002A-H	SPEAKER HOLDER	(x4)	AV-25MT35/P,AV-25MT15/P
	25	GG20057-001A-H	SP HOLDER	(x4)	AV-25VA15/P
	26	QAS0139-001	SPEAKER	(x2) SP01,SP02	
⚠	27	GG20024-001B-H	RATING LABEL		
⚠	30	SCW-1750A-H2	MAIN PWB		AV-25MT35/P
⚠	30	SCW-1721A-H2	MAIN PWB		AV-25MT15/P
⚠	30	SCW-1731A-H2	MAIN PWB		AV-25VA15/P

EXPLODED VIEW -3

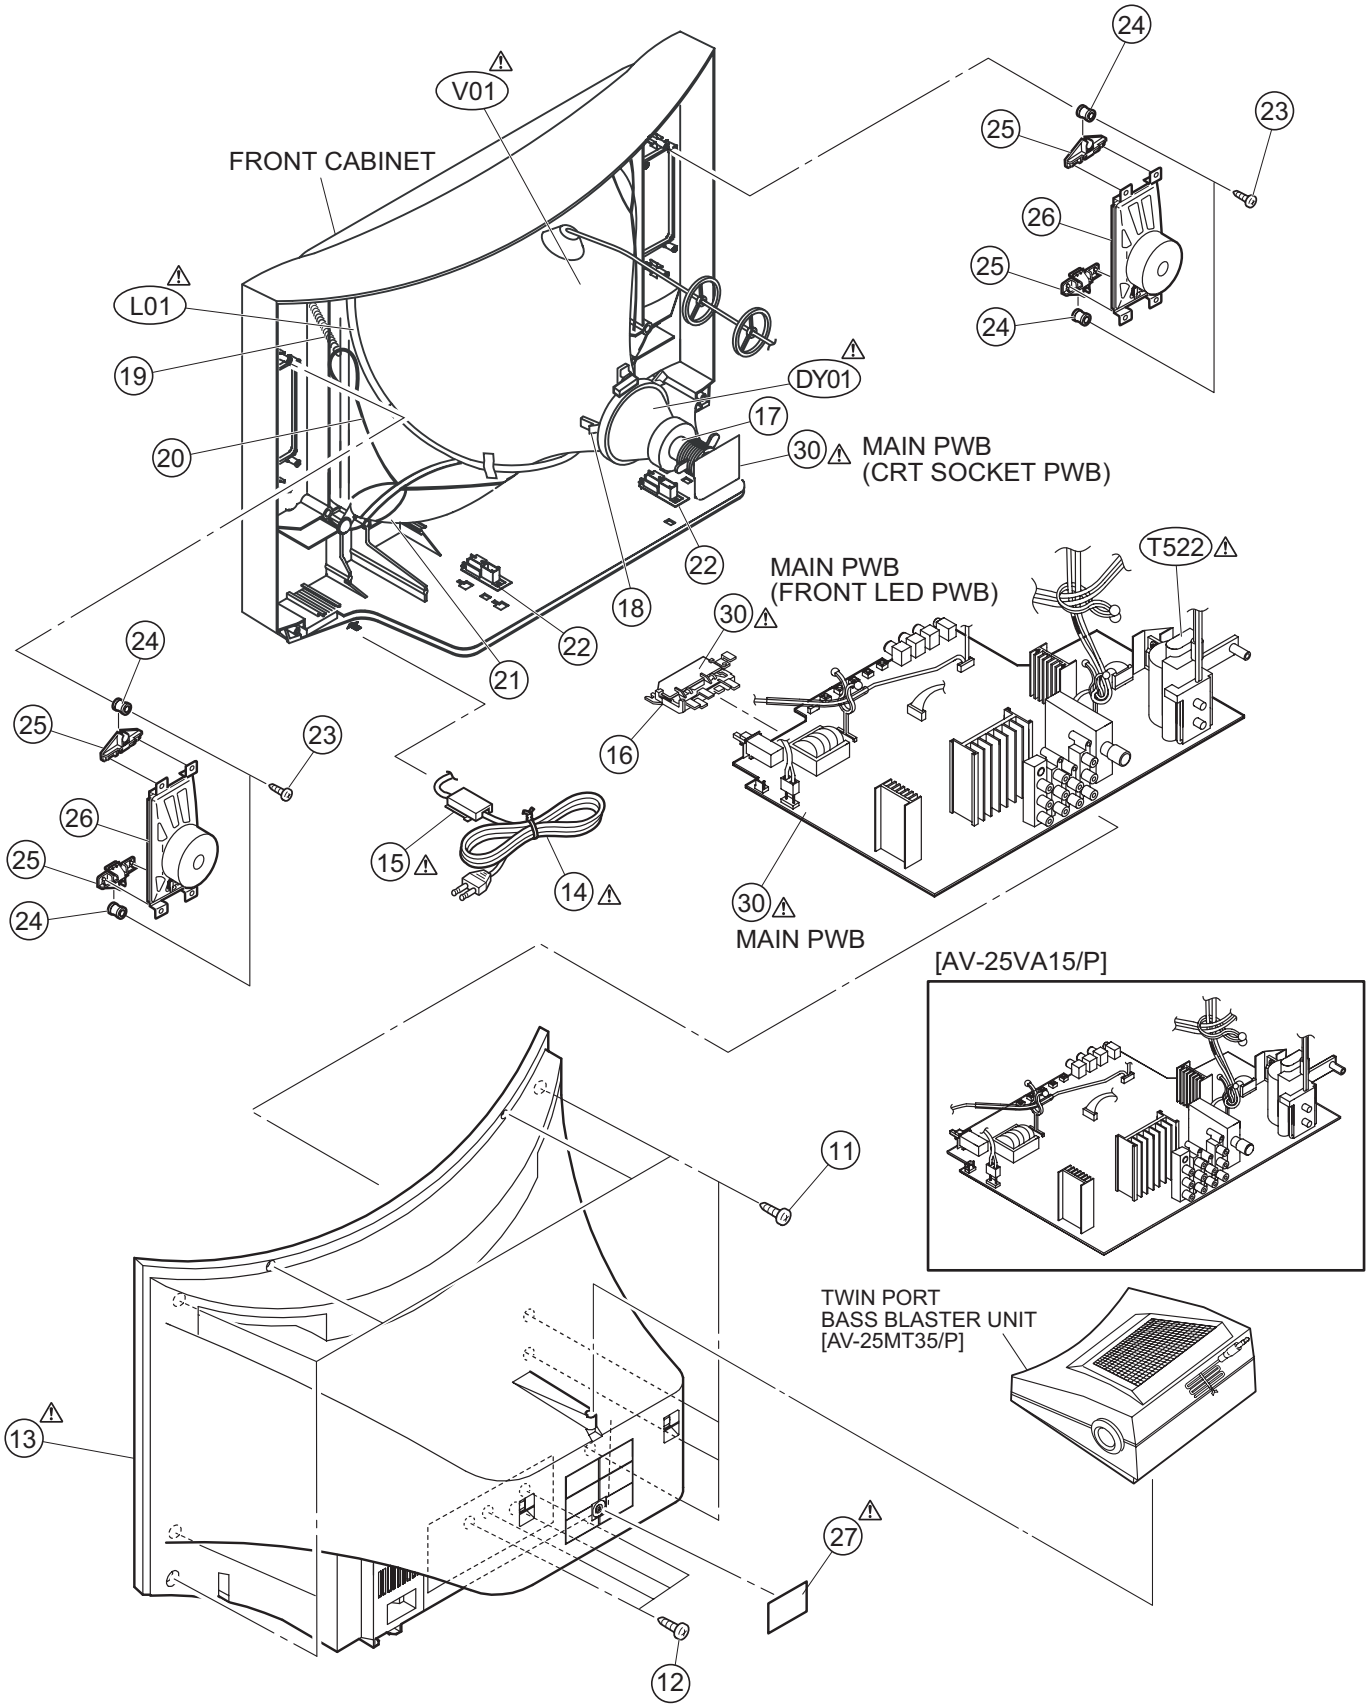

EXPLODED VIEW PARTS LIST -4 [AV-25MT35/P]

⚠	Ref.No.	Part No.	Part Name	Description	Local
	50	LC40352-001A-H	RUBBER SHEET	(x4)	
	51	QYSBSFG4016ZA	TAP SCREW	M4 x 16mm(x13)	
	52	GG10141-001C-H	BASS BOTTOM		
	53	LC41211-001A	SOUND ABSORBER		
	54	QYSBSFG4016ZA	TAP SCREW	M4 x 16mm(x4)	
	55	QAS0118-001	SPEAKER	SP03	
	56	WJJ0266-002A-E	E-SIC WIRE C-C		
	57	GG30022-001A-H	BASS DUCT R	(x2)	
	58	GG10140-001C-H	BASS TOP		

EXPLODED VIEW -4

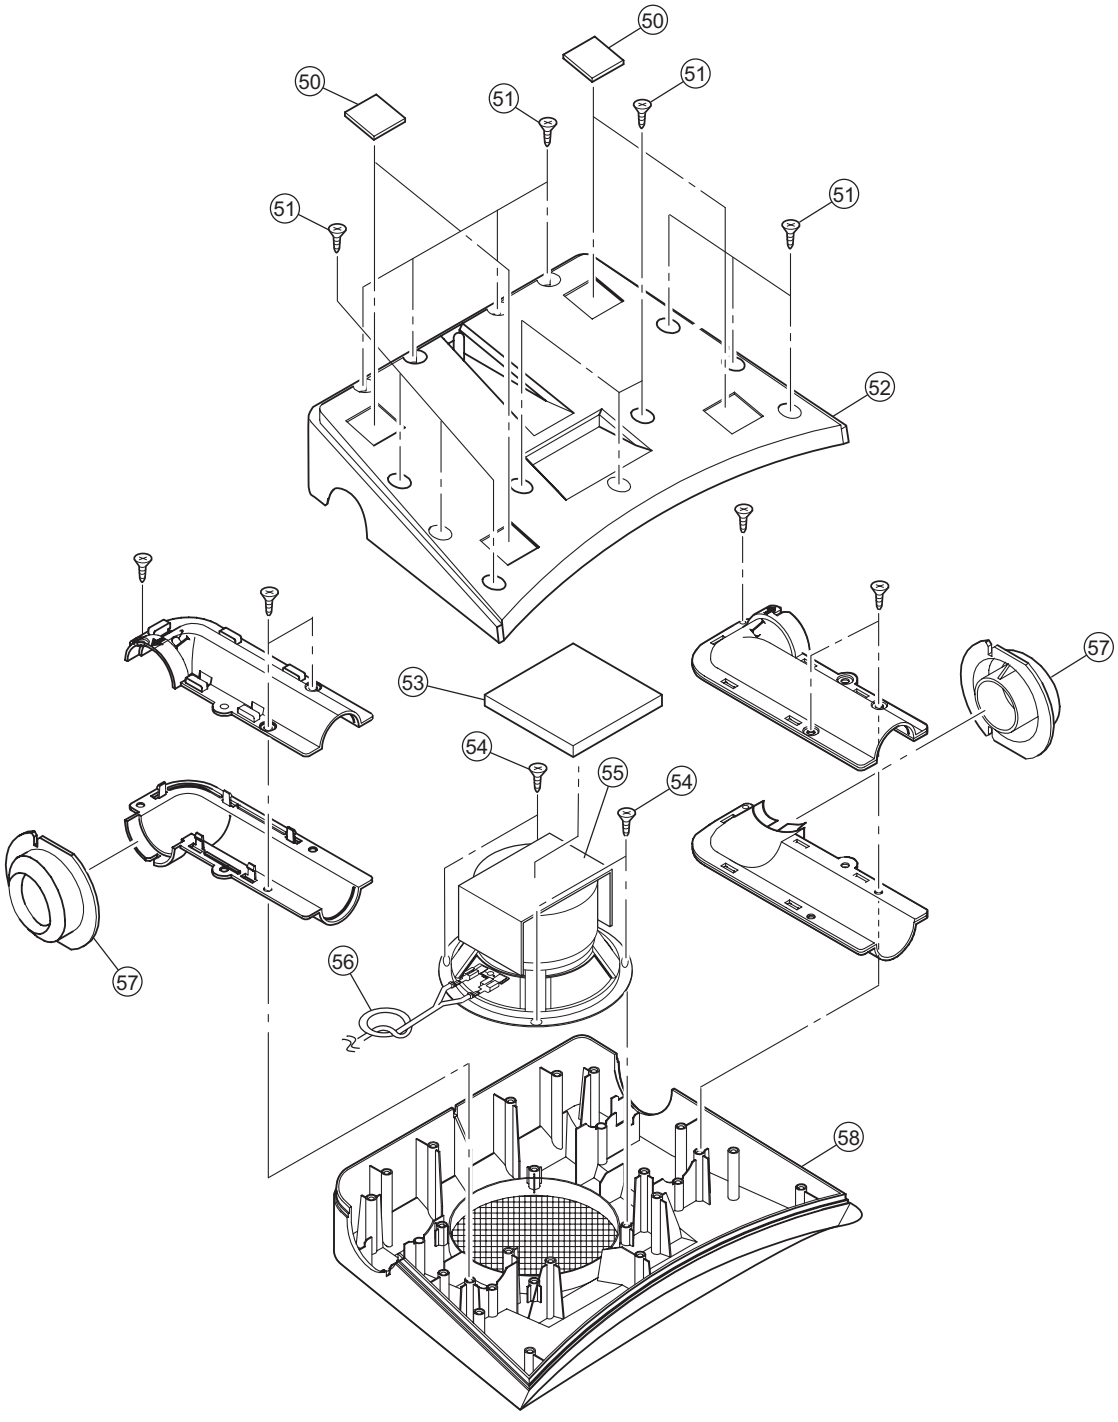

PRINTED WIRING BOARD PARTS LIST [AV-25MT35/P]

MAIN P.W. BOARD ASS'Y (SCW-1750A-H2)

⚠Ref No.	Part No.	Part Name	Description	Local
IC302	S9648	PHOTO CONDUCTOR		
IC351	TDA6107AJF/N1	IC		
IC401	LA78040N	IC		
IC601	AN7585	IC		
IC651	RC4558D-X	IC		
IC701	TDA12021-NTSC	IC(MCU)	(SERVICE)	
IC702	AT24C16-25MT35P	IC	(SERVICE)	
IC801	RPM7238-H5	IR DETECT UNIT		
IC901	ICE1QS01	IC		
IC951	SE135N	IC		
IC972	BA33BC0T	REGULATOR IC		
IC973	PQ120RDA1SZ	IC		
IC975	PQ050RDA1SZ	IC		
Q101	2SC5397/CD/-T	TRANSISTOR		
Q341	2SA1530A/QR/-X	TRANSISTOR		
Q421	2SC3928A/QR/-X	TRANSISTOR		
Q422	2SC3928A/QR/-X	TRANSISTOR		
Q461	RDN050N20	POWER MOS FET		
Q521	2SC2655/Y/-T	TRANSISTOR		
⚠Q522	TT2142-YD	TRANSISTOR		
Q571	2SA1208/ST/Z1-T	TRANSISTOR		
Q572	UN2226-X	DIGI TRANSISTOR		
Q601	2SA1530A/QR/-X	TRANSISTOR		
Q602	2SA1530A/QR/-X	TRANSISTOR		
Q603	UN2226-X	DIGI TRANSISTOR		
Q604	UN2226-X	DIGI TRANSISTOR		
Q605	UN2226-X	DIGI TRANSISTOR		
Q606	UN2226-X	DIGI TRANSISTOR		
Q607	2SC3928A/QR/-X	TRANSISTOR		
Q608	2SC3928A/QR/-X	TRANSISTOR		
Q609	UN2226-X	DIGI TRANSISTOR		
Q610	UN2226-X	DIGI TRANSISTOR		
Q611	UN2226-X	DIGI TRANSISTOR		
Q612	2SC3928A/QR/-X	TRANSISTOR		
Q704	2SC3928A/QR/-X	TRANSISTOR		
Q705	SSM3K02F-X	MOS FET		
Q706	SSM3K02F-X	MOS FET		
Q707	2SC3928A/QR/-X	TRANSISTOR		
Q708	2SA1530A/QR/-X	TRANSISTOR		
Q791	2SC3928A/QR/-X	TRANSISTOR		
Q801	KTA1267/YG/-T	TRANSISTOR		
Q803	UN2226-X	DIGI TRANSISTOR		
Q804	UN2226-X	DIGI TRANSISTOR		
Q805	2SA1530A/QR/-X	TRANSISTOR		
Q901	STP13NK60ZFP	POWER MOS FET		
Q955	2SC3928A/QR/-X	TRANSISTOR		
Q981	2SA562TM/Y/-T	TRANSISTOR		
Q982	2SC3928A/QR/-X	TRANSISTOR		
Q983	2SA562TM/Y/-T	TRANSISTOR		
Q984	2SC3928A/QR/-X	TRANSISTOR		
D341	MA111-X	SI DIODE		
D342	MA111-X	SI DIODE		
D343	MA111-X	SI DIODE		
D345	MA111-X	SI DIODE		
D350	MA8075/M/-X	Z DIODE		
D354	FR105GT-T3	SI DIODE		
D355	FR105GT-T3	SI DIODE		
D356	FR105GT-T3	SI DIODE		
D423	1N4003SG-T2	SI DIODE		
D424	1SR35-400A-T2	SI DIODE		
D520	MA111-X	SI DIODE		
D521	RH3G-F1	SI DIODE		
D522	RU4AM-LFT2	SI DIODE		
D523	FR105GT-T3	SI DIODE		
D530	FR105GT-T3	SI DIODE		
D551	FR105GT-T3	SI DIODE		
D552	FR105GT-T3	SI DIODE		
D554	MA8051/L/-X	Z DIODE		
D571	MA8075/H/-X	Z DIODE		
D581	FR105GT-T3	SI DIODE		
D602	MA111-X	SI DIODE		
D603	MA111-X	SI DIODE		
D606	MA8300/H/-X	Z DIODE		
D607	MA111-X	SI DIODE		
D608	MA111-X	SI DIODE		
D609	MA111-X	SI DIODE		
D610	MA111-X	SI DIODE		
D651	MA8062/M/-X	Z DIODE		
D701	MA111-X	SI DIODE		
D702	MA8091/H/-X	Z DIODE		
D703	MA8091/H/-X	Z DIODE		
D704	MA8091/H/-X	Z DIODE		
D706	MA8036-X	Z DIODE		
D707	MA111-X	SI DIODE		
D708	MA111-X	SI DIODE		
D709	MA111-X	SI DIODE		
D710	MA8091/H/-X	Z DIODE		
D711	MA111-X	SI DIODE		
D712	MA111-X	SI DIODE		
D713	MA8039/H/-X	Z DIODE		
D714	MA8030/H/-X	Z DIODE		
D751	MA8091/H/-X	Z DIODE		
D753	MA8091/H/-X	Z DIODE		
D808	LH22440-T16	LED	POWER(RED)	
D810	MA8091/H/-X	Z DIODE		
D811	MA8091/H/-X	Z DIODE		
D812	MA8091/H/-X	Z DIODE		
D813	MA8091/H/-X	Z DIODE		
D814	MA8091/H/-X	Z DIODE		
D817	MA8091/H/-X	Z DIODE		
D901	GSIB460-S1	BRIDGE DIODE		
D921	FR105GT-T3	SI DIODE		
D924	1SR35-400A-T2	SI DIODE		
D925	1SR35-400A-T2	SI DIODE		
D926	MA8180/M/-X	Z DIODE		
D928	MA8180/M/-X	Z DIODE		
D950	MTZJ27B-T2	Z DIODE		
D951	RU4AM-LFT2	SI DIODE		
D952	FR105GT-T3	SI DIODE		
D953	FR105GT-T3	SI DIODE		
D954	FR105GT-T3	SI DIODE		
D955	FMX-G12S	SI DIODE		
D956	MA111-X	SI DIODE		
D957	MA111-X	SI DIODE		
D958	1SR35-400A-T2	SI DIODE		
D962	MA8330/M/-X	Z DIODE		
D970	MA8082/M/-X	Z DIODE		
D971	MA111-X	SI DIODE		
D972	MA111-X	SI DIODE		
D973	MA111-X	SI DIODE		
D975	MA111-X	SI DIODE		
D981	UDZS2.0B-X	Z DIODE		
D982	UDZS2.0B-X	Z DIODE		
C001	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C002	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C003	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C004	QETN1CM-477Z	E CAPACITOR	470uF 16V M	
C005	NCB31HK-222X	C CAPACITOR	2200pF 50V K	
C006	QETN1CM-336Z	E CAPACITOR	33uF 16V M	
C101	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C102	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C103	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C104	QETN1EM-476Z	E CAPACITOR	47uF 25V M	
C106	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C109	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
C110	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C111	QETN1CM-227Z	E CAPACITOR	220uF 16V M	
C112	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
C317	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C341	QETN1CM-227Z	E CAPACITOR	220uF 16V M	
C351	NDC31HJ-102X	C CAPACITOR	1000pF 50V J	
C352	QETN2EM-475Z	E CAPACITOR	4.7uF 250V M	
C353	QFKC2EK-104Z	MM CAPACITOR	0.1uF 250V K	
C358	QCZ0364-152	C CAPACITOR	1500pF 2kV K	
C422	QCS32HJ-180Z	C CAPACITOR	18pF 500V J	
C423	NCB31HK-682X	C CAPACITOR	6800pF 50V K	
C424	QFLC2AJ-683Z	M CAPACITOR	0.068uF 100V J	
C427	QETM1VM-108	E CAPACITOR	1000uF 35V M	
C428	QEHR1VM-227Z	E CAPACITOR	220uF 35V M	
C430	QFLC2AJ-563Z	M CAPACITOR	0.056uF 100V J	
C431	QFVF1HJ-184Z	MF CAPACITOR	0.18uF 50V J	
C435	NCF21HZ-334X	C CAPACITOR	0.33uF 50V Z	
C436	NCF21HZ-334X	C CAPACITOR	0.33uF 50V Z	
C471	QETN1HM-226Z	E CAPACITOR	22uF 50V M	
C520	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C521	QCB31HK-332Z	C CAPACITOR	3300pF 50V K	
C522	QFLC1HJ-223Z	M CAPACITOR	0.022uF 50V J	
C523	QETN1VM-476Z	E CAPACITOR	47uF 35V M	
⚠C524	QFZ0196-202	MPP CAPACITOR	2000pF 1.5kV H	
C525	QFZ0196-113	MPP CAPACITOR	0.011uF 1.5kV H	
C526	QFZ0196-202	MPP CAPACITOR	2000pF 1.5kV H	
C527	QFZ0197-184	MPP CAPACITOR	0.18uF 250V J	
C528	QFP32GJ-223	PP CAPACITOR	0.022uF 400V J	

⚠Ref No.	Part No.	Part Name	Description Local
C529	QENC2AM-225Z	BP E CAPACITOR	2.2uF 100V M
C530	QCB32HK-561Z	C CAPACITOR	560pF 500V K
C531	QEZ0195-475Z	BP E CAPACITOR	4.7uF 50V M
C532	QETN2EM-106Z	E CAPACITOR	10uF 250V M
C551	QCB32HK-561Z	C CAPACITOR	560pF 500V K
C552	QCB32HK-561Z	C CAPACITOR	560pF 500V K
C553	QEHR1EM-108Z	E CAPACITOR	1000uF 25V M
C554	QEHR1EM-108Z	E CAPACITOR	1000uF 25V M
C555	QFLC2AJ-103Z	M CAPACITOR	0.01uF 100V J
C571	QETM2CM-227	E CAPACITOR	220uF 160V M
C572	QETN1CM-107Z	E CAPACITOR	100uF 16V M
C573	QETN1EM-476Z	E CAPACITOR	47uF 25V M
C581	QFVF1HJ-104Z	MF CAPACITOR	0.1uF 50V J
C582	QFZ0197-224	MPP CAPACITOR	0.22uF 250V J
C601	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C602	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C603	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C604	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C605	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C606	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C607	QETN1CM-227Z	E CAPACITOR	220uF 16V M
C608	QETN1CM-227Z	E CAPACITOR	220uF 16V M
C609	QETN1CM-107Z	E CAPACITOR	100uF 16V M
C610	QETN1CM-337Z	E CAPACITOR	330uF 16V M
C611	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C612	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C613	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C614	QETM1VM-228	E CAPACITOR	2200uF 35V M
C615	QETN1EM-108Z	E CAPACITOR	1000uF 25V M
C616	QETN1EM-108Z	E CAPACITOR	1000uF 25V M
C617	NCB21CK-105X	C CAPACITOR	1uF 16V K
C651	QETN1CM-476Z	E CAPACITOR	47uF 16V M
C652	NCB31HK-473X	C CAPACITOR	0.047uF 50V K
C653	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C654	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C655	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C656	QETN1HM-476Z	E CAPACITOR	47uF 50V M
C657	QENC1HM-106Z	BP E CAPACITOR	10uF 50V M
C658	QENC1HM-106Z	BP E CAPACITOR	10uF 50V M
C659	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C660	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C661	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C662	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C665	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C701	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C702	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C703	QETN1CM-477Z	E CAPACITOR	470uF 16V M
C704	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C705	NDC31HJ-7R0X	C CAPACITOR	7pF 50V J
C706	NDC31HJ-7R0X	C CAPACITOR	7pF 50V J
C707	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C708	QETN1CM-107Z	E CAPACITOR	100uF 16V M
C709	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C710	NCB31HK-682X	C CAPACITOR	6800pF 50V K
C711	QETN1HM-225Z	E CAPACITOR	2.2uF 50V M
C712	QFVF1HJ-224Z	MF CAPACITOR	0.22uF 50V J
C713	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C714	NCB31HK-223X	C CAPACITOR	0.022uF 50V K
C715	NCB31HK-102X	C CAPACITOR	1000pF 50V K
C716	NCB31HK-102X	C CAPACITOR	1000pF 50V K
C718	QFVF1HJ-154Z	MF CAPACITOR	0.15uF 50V J
C719	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C720	NCB31HK-102X	C CAPACITOR	1000pF 50V K
C723	NCB31CK-105X	C CAPACITOR	1uF 16V K
C724	NCB31CK-105X	C CAPACITOR	1uF 16V K
C725	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C726	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C727	NCB31HK-332X	C CAPACITOR	3300pF 50V K
C728	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C729	QETN1HM-225Z	E CAPACITOR	2.2uF 50V M
C730	QETN1HM-226Z	E CAPACITOR	22uF 50V M
C731	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C732	QETN1HM-225Z	E CAPACITOR	2.2uF 50V M
C733	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C734	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C735	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C736	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C737	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C738	NCB31CK-105X	C CAPACITOR	1uF 16V K
C739	NCB31CK-105X	C CAPACITOR	1uF 16V K
C740	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C741	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C742	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C743	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C744	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C745	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C746	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C747	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C748	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C749	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C750	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C751	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C752	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C753	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C754	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C755	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C756	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C757	NDC31HJ-561X	C CAPACITOR	560pF 50V J
C758	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C759	QETN1CM-107Z	E CAPACITOR	100uF 16V M
C760	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C761	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C762	QETN1CM-107Z	E CAPACITOR	100uF 16V M
C763	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C764	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C765	QETN1CM-107Z	E CAPACITOR	100uF 16V M
C766	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C767	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C768	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C770	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C771	QETN1HM-226Z	E CAPACITOR	22uF 50V M
C772	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C773	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C775	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C776	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C777	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C778	QETN1CM-476Z	E CAPACITOR	47uF 16V M
C779	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C780	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C781	NCB31CK-105X	C CAPACITOR	1uF 16V K
C782	NCB31CK-105X	C CAPACITOR	1uF 16V K
C783	QETN1HM-105Z	E CAPACITOR	1uF 50V M
C785	NCB30JK-225X	C CAPACITOR	2.2uF 6.3V K
C790	NDC31HJ-270X	C CAPACITOR	27pF 50V J
C792	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C793	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C802	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C803	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C804	QETN1CM-477Z	E CAPACITOR	470uF 16V M
C806	QETN1CM-107Z	E CAPACITOR	100uF 16V M
C807	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C821	NCB31HK-152X	C CAPACITOR	1500pF 50V K
C822	NCB31HK-152X	C CAPACITOR	1500pF 50V K
C823	NCB31HK-152X	C CAPACITOR	1500pF 50V K
C824	NCB31HK-152X	C CAPACITOR	1500pF 50V K
C825	NCB31HK-152X	C CAPACITOR	1500pF 50V K
C826	NCB31HK-152X	C CAPACITOR	1500pF 50V K
⚠C901	QFZ9072-224	MM CAPACITOR	0.22uF AC250V K
⚠C902	QFZ9072-224	MM CAPACITOR	0.22uF AC250V K
⚠C903	QCZ9015-102Z	C CAPACITOR	1000pF AC250V Z
⚠C904	QCZ9015-102Z	C CAPACITOR	1000pF AC250V Z
⚠C905	QCZ9015-102Z	C CAPACITOR	1000pF AC250V Z
C906	QEZ0649-337	E CAPACITOR	330uF 400V M
C908	QRL029J-822	OMF RESISTOR	8.2kΩ 2W J
⚠C910	QFZ9072-224	MM CAPACITOR	0.22uF AC250V K
C915	QCB32HK-103	C CAPACITOR	0.01uF 500V K
C916	QCZ0122-561	C CAPACITOR	560pF 2kV K
C921	QCZ0122-391	C CAPACITOR	390pF 2kV K
C922	NDC31HJ-680X	C CAPACITOR	68pF 50V J
C923	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C924	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C927	QETN1HM-476Z	E CAPACITOR	47uF 50V M
C930	NDC31HJ-821X	C CAPACITOR	820pF 50V J
C952	QCB32HK-471Z	C CAPACITOR	470pF 500V K
C953	QCB32HK-471Z	C CAPACITOR	470pF 500V K
C954	QCB32HK-471Z	C CAPACITOR	470pF 500V K
C955	QCB32HK-471Z	C CAPACITOR	470pF 500V K
C956	QEZ0203-227	E CAPACITOR	220uF 160V M
C958	QETN1EM-108Z	E CAPACITOR	1000uF 25V M
C959	QETN1VM-107Z	E CAPACITOR	100uF 35V M
C960	QETM1VM-228	E CAPACITOR	2200uF 35V M
C962	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
C963	QCZ0364-102	C CAPACITOR	1000pF 2kV K
C965	QETN1AM-228Z	E CAPACITOR	2200uF 10V M
C966	QETN1CM-107Z	E CAPACITOR	100uF 16V M
C967	QETN1CM-476Z	E CAPACITOR	47uF 16V M
C969	QETN1CM-107Z	E CAPACITOR	100uF 16V M
C975	QETN1AM-228Z	E CAPACITOR	2200uF 10V M
C977	QETN1AM-477Z	E CAPACITOR	470uF 10V M
C979	QETN1EM-107Z	E CAPACITOR	100uF 25V M
C980	QETN1CM-107Z	E CAPACITOR	100uF 16V M
C984	QETN1HM-336Z	E CAPACITOR	33uF 50V M
⚠C991	QCZ9079-102	C CAPACITOR	1000pF AC250V M
⚠C992	QCZ9079-102	C CAPACITOR	1000pF AC250V M

⚠Ref No.	Part No.	Part Name	Description Local
⚠C993	QCZ9079-102	C CAPACITOR	1000pF AC250V M
C994	QETN1HM-335Z	E CAPACITOR	3.3uF 50V M
C995	QETN1CM-477Z	E CAPACITOR	470uF 16V M
R001	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R002	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R003	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J
R004	NRSA63J-273X	MG RESISTOR	27kΩ 1/16W J
R005	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J
R101	NRSA63J-680X	MG RESISTOR	68Ω 1/16W J
R102	NRSA63J-822X	MG RESISTOR	8.2kΩ 1/16W J
R103	NRSA63J-182X	MG RESISTOR	1.8kΩ 1/16W J
R104	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R105	NRSA63J-220X	MG RESISTOR	22Ω 1/16W J
R106	NRSA63J-270X	MG RESISTOR	27Ω 1/16W J
R315	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R316	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R317	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R324	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R325	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R327	NRSA63J-393X	MG RESISTOR	39kΩ 1/16W J
R328	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R344	NRSA63J-220X	MG RESISTOR	22Ω 1/16W J
R351	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R352	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J
R353	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J
R354	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J
R355	QRE121J-222Y	C RESISTOR	2.2kΩ 1/2W J
R356	QRE121J-222Y	C RESISTOR	2.2kΩ 1/2W J
R357	QRE121J-222Y	C RESISTOR	2.2kΩ 1/2W J
R358	QRZ0107-152Z	C RESISTOR	1.5kΩ 1/2W K
R359	QRZ0107-152Z	C RESISTOR	1.5kΩ 1/2W K
R360	QRZ0107-152Z	C RESISTOR	1.5kΩ 1/2W K
R369	QRE121J-104Y	C RESISTOR	100kΩ 1/2W J
R411	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R412	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R421	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R422	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R426	NRSA63J-123X	MG RESISTOR	12kΩ 1/16W J
R427	NRSA63J-682X	MG RESISTOR	6.8kΩ 1/16W J
R430	NRSA63J-123X	MG RESISTOR	12kΩ 1/16W J
R432	QRX01GJ-2R7	MF RESISTOR	2.7Ω 1W J
R433	QRE121J-5R6Y	C RESISTOR	5.6Ω 1/2W J
R434	NRSA63J-682X	MG RESISTOR	6.8kΩ 1/16W J
R440	QRG01GJ-221	OMF RESISTOR	220Ω 1W J
R448	QRE121J-1R0Y	C RESISTOR	1Ω 1/2W J
R460	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J
R461	QRE121J-823Y	C RESISTOR	82kΩ 1/2W J
R462	QRL039J-180	OMF RESISTOR	18Ω 3W J
R471	NRSA63J-274X	MG RESISTOR	270kΩ 1/16W J
R472	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R473	NRSA63J-683X	MG RESISTOR	68kΩ 1/16W J
R474	NRSA63J-224X	MG RESISTOR	220kΩ 1/16W J
R520	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R521	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R522	QRE121J-220Y	C RESISTOR	22Ω 1/2W J
R523	QRL029J-271	OMF RESISTOR	270Ω 2W J
R524	QRL039J-181	OMF RESISTOR	180Ω 3W J
R527	QRL039J-393	OMF RESISTOR	39kΩ 3W J
R528	QRE121J-471Y	C RESISTOR	470Ω 1/2W J
⚠R530	QRZ9017-270	FUSI RESISTOR	27Ω 1/4W J
⚠R533	QRZ9017-4R7	FUSI RESISTOR	4.7Ω 1/4W J
R551	QRX029J-R47	MF RESISTOR	0.47Ω 2W J
R552	QRX029J-R47	MF RESISTOR	0.47Ω 2W J
R554	NRSA63J-182X	MG RESISTOR	1.8kΩ 1/16W J
R569	QRZ0221-3R9	UNF RESISTOR	3.9Ω 7W K
R572	QRE121J-472Y	C RESISTOR	4.7kΩ 1/2W J
R573	NRSA63J-821X	MG RESISTOR	820Ω 1/16W J
R574	QRE121J-183Y	C RESISTOR	18kΩ 1/2W J
R575	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R581	QRE121J-822Y	C RESISTOR	8.2kΩ 1/2W J
R582	QRE121J-124Y	C RESISTOR	120kΩ 1/2W J
R583	QRE121J-184Y	C RESISTOR	180kΩ 1/2W J
R601	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R602	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R604	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R605	NRSA63J-822X	MG RESISTOR	8.2kΩ 1/16W J
R606	QRE121J-2R2Y	C RESISTOR	2.2Ω 1/2W J
R607	QRE121J-2R2Y	C RESISTOR	2.2Ω 1/2W J
R609	NRSA63J-273X	MG RESISTOR	27kΩ 1/16W J
R610	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J
R611	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R612	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J
R613	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J
R614	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J
R615	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J
R617	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R618	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R619	NRSA63J-822X	MG RESISTOR	8.2kΩ 1/16W J
R620	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R621	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R622	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R623	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J
R624	NRSA63J-683X	MG RESISTOR	68kΩ 1/16W J
R625	QRE121J-2R2Y	C RESISTOR	2.2Ω 1/2W J
R626	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R629	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R630	QRE121J-271Y	C RESISTOR	270Ω 1/2W J
R631	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R632	QRE121J-271Y	C RESISTOR	270Ω 1/2W J
R633	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R634	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R635	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R636	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R637	NRSA63J-562X	MG RESISTOR	5.6kΩ 1/16W J
R638	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R639	NRSA63J-562X	MG RESISTOR	5.6kΩ 1/16W J
R640	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R649	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R651	NRSA63J-122X	MG RESISTOR	1.2kΩ 1/16W J
R653	NRSA63J-823X	MG RESISTOR	82kΩ 1/16W J
R654	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J
R655	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J
R656	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J
R657	NRSA63J-562X	MG RESISTOR	5.6kΩ 1/16W J
R658	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R659	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R662	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R663	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J
R664	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J
R701	NRSA63J-123X	MG RESISTOR	12kΩ 1/16W J
R702	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R703	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R704	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R705	NRSA63J-393X	MG RESISTOR	39kΩ 1/16W J
R706	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R707	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J
R708	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R709	NRSA63J-105X	MG RESISTOR	1MΩ 1/16W J
R711	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R712	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J
R713	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R714	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J
R715	NRSA63J-391X	MG RESISTOR	390Ω 1/16W J
R716	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R717	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J
R718	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R719	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J
R720	NRSA63J-152X	MG RESISTOR	1.5kΩ 1/16W J
R721	NRSA63J-152X	MG RESISTOR	1.5kΩ 1/16W J
R726	NRSA63J-273X	MG RESISTOR	27kΩ 1/16W J
R727	NRSA63J-561X	MG RESISTOR	560Ω 1/16W J
R728	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R730	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R731	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R732	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R733	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R734	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R735	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R736	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R737	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R738	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R739	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R740	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J
R741	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R742	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R743	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J
R744	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R745	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J
R747	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R748	NRSA63J-272X	MG RESISTOR	2.7kΩ 1/16W J
R749	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R750	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R751	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R752	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R753	NRSA63J-122X	MG RESISTOR	1.2kΩ 1/16W J
R754	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R755	NRSA63J-122X	MG RESISTOR	1.2kΩ 1/16W J
R756	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R757	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R758	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J
R759	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J
R760	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R761	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J

⚠Ref No.	Part No.	Part Name	Description Local
R762	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R763	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R764	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R765	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R768	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R771	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R772	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R773	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J
R774	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R775	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J
R776	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J
R777	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R782	NRSA63J-122X	MG RESISTOR	1.2kΩ 1/16W J
R783	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R785	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R786	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J
R787	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R788	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R790	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R792	QRE121J-330Y	C RESISTOR	33Ω 1/2W J
R793	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R794	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R795	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J
R801	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J
R802	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R803	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R804	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J
R805	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J
R806	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J
R807	QRE121J-101Y	C RESISTOR	100Ω 1/2W J
R809	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R810	NRSA63J-391X	MG RESISTOR	390Ω 1/16W J
R811	NRSA63J-823X	MG RESISTOR	82kΩ 1/16W J
R812	NRSA63J-391X	MG RESISTOR	390Ω 1/16W J
R813	NRSA63J-823X	MG RESISTOR	82kΩ 1/16W J
R814	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J
R815	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J
R816	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J
R818	NRSA63J-181X	MG RESISTOR	180Ω 1/16W J
R819	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R820	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J
R821	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J
R822	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R823	QRE121J-470Y	C RESISTOR	47Ω 1/2W J
R824	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J
R901	QRF154K-2R2	UNF WW RESISTOR	2.2Ω 15W K
R907	QRL029J-123	OMF RESISTOR	12kΩ 2W J
R922	QRL039J-473	OMF RESISTOR	47kΩ 3W J
R923	NRSA63J-820X	MG RESISTOR	82Ω 1/16W J
R924	QRE121J-224Y	C RESISTOR	220kΩ 1/2W J
R925	QRE121J-334Y	C RESISTOR	330kΩ 1/2W J
R927	NRSA63J-470X	MG RESISTOR	47Ω 1/16W J
R930	NRSA63J-183X	MG RESISTOR	18kΩ 1/16W J
R931	NRSA63J-563X	MG RESISTOR	56kΩ 1/16W J
R933	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R934	NRSA63J-334X	MG RESISTOR	330kΩ 1/16W J
R935	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J
R936	QRZ9017-2R2	FUSI RESISTOR	2.2Ω 1/4W J
R951	QRE121J-822Y	C RESISTOR	8.2kΩ 1/2W J
R952	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R961	NRSA63J-182X	MG RESISTOR	1.8kΩ 1/16W J
R962	QRL029J-223	OMF RESISTOR	22kΩ 2W J
R963	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J
R964	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J
R970	QRE121J-182Y	C RESISTOR	1.8kΩ 1/2W J
R976	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R977	QRL039J-120	OMF RESISTOR	12Ω 3W J
R978	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R981	QRE121J-3R9Y	C RESISTOR	3.9Ω 1/2W J
R982	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J
R983	QRE121J-3R9Y	C RESISTOR	3.9Ω 1/2W J
R984	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J
R985	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R986	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
⚠R991	QRZ9046-825Z	C RESISTOR	8.2MΩ 1/2W K
L002	QQL244J-4R7Z	PEAKING COIL	4.7uH J
L003	QQL244J-4R7Z	PEAKING COIL	4.7uH J
L101	QQL244K-1R0Z	PEAKING COIL	1uH K
L351	QQL244J-5R6Z	COIL	5.6uH J
L521	QQLZ036-821	COIL	820uH K
L522	QQR1137-005	LINEARITY COIL	
L530	QQL244J-100Z	COIL	10uH J
L551	QQLZ026-360	COIL	36uH ±7%
L651	QQL244J-4R7Z	PEAKING COIL	4.7uH J
L701	NQR0199-004X	FERRITE BEADS	
L702	NQR0199-004X	FERRITE BEADS	
L703	NQR0199-004X	FERRITE BEADS	
L704	NQR0199-004X	FERRITE BEADS	
L705	NQR0199-004X	FERRITE BEADS	
L706	NQR0199-004X	FERRITE BEADS	
L707	NQR0199-004X	FERRITE BEADS	
L708	NQR0199-004X	FERRITE BEADS	
L709	NQR0199-004X	FERRITE BEADS	
L710	NQR0199-004X	FERRITE BEADS	
L711	NQR0199-004X	FERRITE BEADS	
L712	NQR0199-004X	FERRITE BEADS	
L713	NQR0199-004X	FERRITE BEADS	
L714	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J
L715	NQR0199-004X	FERRITE BEADS	
L716	NQR0199-004X	FERRITE BEADS	
L717	NQR0199-004X	FERRITE BEADS	
L718	NQR0199-004X	FERRITE BEADS	
L951	QQLZ026-460	COIL	46uH ±7%
T521	QQR1229-001	DRIVE TRANSF	
⚠T921	QQS0345-001	SW TRANSF	
⚠PC901	PS2581AL1/QW/	PHOTO COUPLER	
CF101	QAX0349-001	C TRAP	47.25MHz
⚠CP650	ICP-N50-T	IC PROTECTOR	2.0A
⚠CP952	ICP-N38-T	IC PROTECTOR	1.5A
⚠CP953	ICP-N38-T	IC PROTECTOR	1.5A
⚠CP954	ICP-N38-T	IC PROTECTOR	1.5A
⚠CP955	ICP-N75-T	IC PROTECTOR	2.7A
⚠F901	QMF51E2-4R0-S	FUSE	4A AC250V
J801	QNZ0454-002	PIN JACK	VIDEO1/S-VIDEO
J802	QNN0349-002	PIN JACK	VIDEO2/COMP
J803	QNN0348-001	PIN JACK	VIDEO2/COMP
J804	QNN0349-001	PIN JACK	VIDEO OUT
J805	QNS0100-001	3.5 JACK	BASS SPEAKER OUT
J806	QNN0281-003	PIN JACK	VIDEO3(FRONT)/L3
J807	QNN0281-002	PIN JACK	VIDEO3(FRONT)/R3
J808	QNN0282-001	PIN JACK	VIDEO3(FRONT)/V3
J809	QNS0155-001	3.5 JACK	HEADPHONE
K101	QQR1114-001Z	FERRITE BEADS	
K104	QQR1114-001Z	FERRITE BEADS	
K356	QQR0601-001Z	COIL	
K901	QQR1114-001Z	FERRITE BEADS	
K951	QQR1114-001Z	FERRITE BEADS	
K952	QQR1113-001Z	FERRITE BEADS	
K953	QQR1113-001Z	FERRITE BEADS	
K954	QQR1113-001Z	FERRITE BEADS	
K955	QQR1113-001Z	FERRITE BEADS	
LC801	QQR1199-002	EMI FILTER	
LC802	QQR1199-002	EMI FILTER	
LC803	QQR1199-002	EMI FILTER	
LC804	QQR1199-002	EMI FILTER	
LC805	QQR1199-002	EMI FILTER	
⚠LF901	QQR0673-004	LINE FILTER	
⚠LF902	QQR1635-001	LINE FILTER	
⚠RY901	QSK0061-002	RELAY	
S801	QSW0619-003Z	TACT SWITCH	MENU
S802	QSW0619-003Z	TACT SWITCH	CH-
S803	QSW0619-003Z	TACT SWITCH	CH+
S804	QSW0619-003Z	TACT SWITCH	VOL-
S805	QSW0619-003Z	TACT SWITCH	VOL+
⚠S901	QSW0750-001	PUSH SWITCH	POWER
SF102	QAX0723-001	SAW FILTER	
⚠SK351	QNZ0536-001	CRT SOCKET	
⚠TH901	QAD0134-4R5	P THERMISTOR	4.5Ω
TU001	QAU0353-002	TUNER	
⚠VA901	QAF0060-621	VARISTOR	620V
X701	QAX0799-001Z	CRYSTAL	
	GG30118-001A-H	LED HOLDER	
	GG30138-001A-H	EE HOLDER	

PRINTED WIRING BOARD PARTS LIST [AV-25MT15/P]

MAIN P.W. BOARD ASS'Y (SCW-1721A-H2)

⚠Ref No.	Part No.	Part Name	Description	Local
IC302	S9648	PHOTO CONDUCTOR		
IC351	TDA6107AJF/N1	IC		
IC401	LA78040N	IC		
IC601	AN5277	IC		
IC701	TDA12021-NTSC	IC(MCU)	(SERVICE)	
IC702	AT24C16-25MT35P	IC	(SERVICE)	
IC801	RPM7238-H5	IR DETECT UNIT		
IC901	ICE1QS01	IC		
IC951	SE135N	IC		
IC972	BA33BC0T	REGULATOR IC		
IC973	PQ120RDA1SZ	IC		
IC975	PQ050RDA1SZ	IC		
Q101	2SC5397/CD/-T	TRANSISTOR		
Q341	2SA1530A/QR/-X	TRANSISTOR		
Q421	2SC3928A/QR/-X	TRANSISTOR		
Q422	2SC3928A/QR/-X	TRANSISTOR		
Q461	RDN050N20	POWER MOS FET		
Q521	2SC2655/Y/-T	TRANSISTOR		
⚠Q522	TT2142-YD	TRANSISTOR		
Q571	2SA1208/ST/Z1-T	TRANSISTOR		
Q572	UN2226-X	DIGI TRANSISTOR		
Q601	2SA1530A/QR/-X	TRANSISTOR		
Q602	2SA1530A/QR/-X	TRANSISTOR		
Q603	UN2226-X	DIGI TRANSISTOR		
Q605	UN2226-X	DIGI TRANSISTOR		
Q607	2SC3928A/QR/-X	TRANSISTOR		
Q608	2SC3928A/QR/-X	TRANSISTOR		
Q609	UN2226-X	DIGI TRANSISTOR		
Q611	UN2226-X	DIGI TRANSISTOR		
Q612	2SC3928A/QR/-X	TRANSISTOR		
Q704	2SC3928A/QR/-X	TRANSISTOR		
Q705	SSM3K02F-X	MOS FET		
Q706	SSM3K02F-X	MOS FET		
Q707	2SC3928A/QR/-X	TRANSISTOR		
Q708	2SA1530A/QR/-X	TRANSISTOR		
Q791	2SC3928A/QR/-X	TRANSISTOR		
Q801	KTA1267/YG/-T	TRANSISTOR		
Q803	UN2226-X	DIGI TRANSISTOR		
Q804	UN2226-X	DIGI TRANSISTOR		
Q805	2SA1530A/QR/-X	TRANSISTOR		
Q901	STP13NK60ZFP	POWER MOS FET		
Q955	2SC3928A/QR/-X	TRANSISTOR		
Q981	2SA562TM/Y/-T	TRANSISTOR		
Q982	2SC3928A/QR/-X	TRANSISTOR		
Q983	2SA562TM/Y/-T	TRANSISTOR		
Q984	2SC3928A/QR/-X	TRANSISTOR		
D341	MA111-X	SI DIODE		
D342	MA111-X	SI DIODE		
D343	MA111-X	SI DIODE		
D345	MA111-X	SI DIODE		
D350	MA8075/M/-X	Z DIODE		
D354	FR105GT-T3	SI DIODE		
D355	FR105GT-T3	SI DIODE		
D356	FR105GT-T3	SI DIODE		
D423	1N4003SG-T2	SI DIODE		
D424	1SR35-400A-T2	SI DIODE		
D520	MA111-X	SI DIODE		
D521	RH3G-F1	SI DIODE		
D522	RU4AM-LFT2	SI DIODE		
D523	FR105GT-T3	SI DIODE		
D530	FR105GT-T3	SI DIODE		
D551	FR105GT-T3	SI DIODE		
D552	FR105GT-T3	SI DIODE		
D554	MA8051/L/-X	Z DIODE		
D571	MA8075/H/-X	Z DIODE		
D581	FR105GT-T3	SI DIODE		
D603	MA111-X	SI DIODE		
D607	MA111-X	SI DIODE		
D610	MA111-X	SI DIODE		
D701	MA111-X	SI DIODE		
D702	MA8091/H/-X	Z DIODE		
D703	MA8091/H/-X	Z DIODE		
D704	MA8091/H/-X	Z DIODE		
D706	MA8036-X	Z DIODE		
D707	MA111-X	SI DIODE		
D708	MA111-X	SI DIODE		
D709	MA111-X	SI DIODE		
D710	MA8091/H/-X	Z DIODE		
D711	MA111-X	SI DIODE		
D712	MA111-X	SI DIODE		
D713	MA8039/H/-X	Z DIODE		
D714	MA8030/H/-X	Z DIODE		
D751	MA8091/H/-X	Z DIODE		
D753	MA8091/H/-X	Z DIODE		
D808	LH22440-T16	LED	POWER(RED)	
D810	MA8091/H/-X	Z DIODE		
D811	MA8091/H/-X	Z DIODE		
D812	MA8091/H/-X	Z DIODE		
D813	MA8091/H/-X	Z DIODE		
D814	MA8091/H/-X	Z DIODE		
D817	MA8091/H/-X	Z DIODE		
D901	GSIB460-S1	BRIDGE DIODE		
D921	FR105GT-T3	SI DIODE		
D924	1SR35-400A-T2	SI DIODE		
D925	1SR35-400A-T2	SI DIODE		
D926	MA8180/M/-X	Z DIODE		
D928	MA8180/M/-X	Z DIODE		
D950	MTZJ27B-T2	Z DIODE		
D951	RU4AM-LFT2	SI DIODE		
D952	FR105GT-T3	SI DIODE		
D953	FR105GT-T3	SI DIODE		
D954	FR105GT-T3	SI DIODE		
D955	FMX-G12S	SI DIODE		
D956	MA111-X	SI DIODE		
D957	MA111-X	SI DIODE		
D958	1SR35-400A-T2	SI DIODE		
D962	MA8330/M/-X	Z DIODE		
D970	MA8082/M/-X	Z DIODE		
D971	MA111-X	SI DIODE		
D972	MA111-X	SI DIODE		
D973	MA111-X	SI DIODE		
D975	MA111-X	SI DIODE		
D981	UDZS2.0B-X	Z DIODE		
D982	UDZS2.0B-X	Z DIODE		
C001	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C002	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C003	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C004	QETN1CM-477Z	E CAPACITOR	470uF 16V M	
C005	NCB31HK-222X	C CAPACITOR	2200pF 50V K	
C006	QETN1CM-336Z	E CAPACITOR	33uF 16V M	
C101	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C102	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C103	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C104	QETN1EM-476Z	E CAPACITOR	47uF 25V M	
C106	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C109	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
C110	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C111	QETN1CM-227Z	E CAPACITOR	220uF 16V M	
C112	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
C317	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C341	QETN1CM-227Z	E CAPACITOR	220uF 16V M	
C351	NDC31HJ-102X	C CAPACITOR	1000pF 50V J	
C352	QETN2EM-475Z	E CAPACITOR	4.7uF 250V M	
C353	QFKC2EK-104Z	MM CAPACITOR	0.1uF 250V K	
C358	QCZ0364-152	C CAPACITOR	1500pF 2kV K	
C422	QCS32HJ-180Z	C CAPACITOR	18pF 500V J	
C423	NCB31HK-682X	C CAPACITOR	6800pF 50V K	
C424	QFLC2AJ-683Z	M CAPACITOR	0.068uF 100V J	
C427	QETM1VM-108	E CAPACITOR	1000uF 35V M	
C428	QEHR1VM-227Z	E CAPACITOR	220uF 35V M	
C430	QFLC2AJ-563Z	M CAPACITOR	0.056uF 100V J	
C431	QFVF1HJ-184Z	MF CAPACITOR	0.18uF 50V J	
C435	NCF21HZ-334X	C CAPACITOR	0.33uF 50V Z	
C436	NCF21HZ-334X	C CAPACITOR	0.33uF 50V Z	
C471	QETN1HM-226Z	E CAPACITOR	22uF 50V M	
C520	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C521	QCB31HK-332Z	C CAPACITOR	3300pF 50V K	
C522	QFLC1HJ-223Z	M CAPACITOR	0.022uF 50V J	
C523	QETN1VM-476Z	E CAPACITOR	47uF 35V M	
⚠C524	QFZ0196-202	MPP CAPACITOR	2000pF 1.5kV H	
C525	QFZ0196-113	MPP CAPACITOR	0.011uF 1.5kV H	
C526	QFZ0196-202	MPP CAPACITOR	2000pF 1.5kV H	
C527	QFZ0197-184	MPP CAPACITOR	0.18uF 250V J	
C528	QFP32GJ-223	PP CAPACITOR	0.022uF 400V J	
C529	QENC2AM-225Z	BP E CAPACITOR	2.2uF 100V M	
C530	QCB32HK-561Z	C CAPACITOR	560pF 500V K	
C531	QEZ0195-475Z	BP E CAPACITOR	4.7uF 50V M	
C532	QETN2EM-106Z	E CAPACITOR	10uF 250V M	
C551	QCB32HK-561Z	C CAPACITOR	560pF 500V K	
C552	QCB32HK-561Z	C CAPACITOR	560pF 500V K	
C553	QEHR1EM-108Z	E CAPACITOR	1000uF 25V M	
C554	QEHR1EM-108Z	E CAPACITOR	1000uF 25V M	
C555	QFLC2AJ-103Z	M CAPACITOR	0.01uF 100V J	

⚠Ref No.	Part No.	Part Name	Description Local
C571	QETM2CM-227	E CAPACITOR	220uF 160V M
C572	QETN1CM-107Z	E CAPACITOR	100uF 16V M
C573	QETN1EM-476Z	E CAPACITOR	47uF 25V M
C581	QFVF1HJ-104Z	MF CAPACITOR	0.1uF 50V J
C582	QFZ0197-224	MPP CAPACITOR	0.22uF 250V J
C601	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C602	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C603	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C604	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C605	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C606	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C607	QETN1CM-227Z	E CAPACITOR	220uF 16V M
C608	QETN1CM-227Z	E CAPACITOR	220uF 16V M
C609	QETN1HM-336Z	E CAPACITOR	33uF 50V M
C610	QETN1CM-227Z	E CAPACITOR	220uF 16V M
C613	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C615	QETN1EM-108Z	E CAPACITOR	1000uF 25V M
C616	QETN1EM-108Z	E CAPACITOR	1000uF 25V M
C656	QETN1HM-107Z	E CAPACITOR	100uF 50V M
C661	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C662	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C701	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C702	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C703	QETN1CM-477Z	E CAPACITOR	470uF 16V M
C704	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C705	NDC31HJ-7R0X	C CAPACITOR	7pF 50V J
C706	NDC31HJ-7R0X	C CAPACITOR	7pF 50V J
C707	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C708	QETN1CM-107Z	E CAPACITOR	100uF 16V M
C709	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C710	NCB31HK-682X	C CAPACITOR	6800pF 50V K
C711	QETN1HM-225Z	E CAPACITOR	2.2uF 50V M
C712	QFVF1HJ-224Z	MF CAPACITOR	0.22uF 50V J
C713	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C714	NCB31HK-223X	C CAPACITOR	0.022uF 50V K
C715	NCB31HK-102X	C CAPACITOR	1000pF 50V K
C716	NCB31HK-102X	C CAPACITOR	1000pF 50V K
C718	QFVF1HJ-154Z	MF CAPACITOR	0.15uF 50V J
C719	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C720	NCB31HK-102X	C CAPACITOR	1000pF 50V K
C723	NCB31CK-105X	C CAPACITOR	1uF 16V K
C724	NCB31CK-105X	C CAPACITOR	1uF 16V K
C725	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C726	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C727	NCB31HK-332X	C CAPACITOR	3300pF 50V K
C728	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C729	QETN1HM-225Z	E CAPACITOR	2.2uF 50V M
C730	QETN1HM-226Z	E CAPACITOR	22uF 50V M
C731	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C732	QETN1HM-225Z	E CAPACITOR	2.2uF 50V M
C733	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C734	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C735	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C736	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C737	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C738	NCB31CK-105X	C CAPACITOR	1uF 16V K
C739	NCB31CK-105X	C CAPACITOR	1uF 16V K
C740	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C741	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C742	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C743	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C744	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C745	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C746	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C747	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C748	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C749	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C750	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C751	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C752	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C753	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C754	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C755	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C756	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C757	NDC31HJ-561X	C CAPACITOR	560pF 50V J
C758	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C759	QETN1CM-107Z	E CAPACITOR	100uF 16V M
C760	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C761	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C762	QETN1CM-107Z	E CAPACITOR	100uF 16V M
C763	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C764	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C765	QETN1CM-107Z	E CAPACITOR	100uF 16V M
C766	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C767	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C768	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C770	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C771	QETN1HM-226Z	E CAPACITOR	22uF 50V M
C772	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C773	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C775	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C776	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C777	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C778	QETN1CM-476Z	E CAPACITOR	47uF 16V M
C779	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C780	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C781	NCB31CK-105X	C CAPACITOR	1uF 16V K
C782	NCB31CK-105X	C CAPACITOR	1uF 16V K
C783	QETN1HM-105Z	E CAPACITOR	1uF 50V M
C785	NCB30JK-225X	C CAPACITOR	2.2uF 6.3V K
C790	NDC31HJ-270X	C CAPACITOR	27pF 50V J
C792	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C793	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C802	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C803	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C804	QETN1CM-477Z	E CAPACITOR	470uF 16V M
C806	QETN1CM-107Z	E CAPACITOR	100uF 16V M
C807	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C821	NCB31HK-152X	C CAPACITOR	1500pF 50V K
C822	NCB31HK-152X	C CAPACITOR	1500pF 50V K
C823	NCB31HK-152X	C CAPACITOR	1500pF 50V K
C824	NCB31HK-152X	C CAPACITOR	1500pF 50V K
C825	NCB31HK-152X	C CAPACITOR	1500pF 50V K
C826	NCB31HK-152X	C CAPACITOR	1500pF 50V K
⚠C901	QFZ9072-224	MM CAPACITOR	0.22uF AC250V K
⚠C902	QFZ9072-224	MM CAPACITOR	0.22uF AC250V K
⚠C903	QCZ9015-102Z	C CAPACITOR	1000pF AC250V Z
⚠C904	QCZ9015-102Z	C CAPACITOR	1000pF AC250V Z
⚠C905	QCZ9015-102Z	C CAPACITOR	1000pF AC250V Z
C906	QEZ0649-337	E CAPACITOR	330uF 400V M
C908	QRL029J-822	OMF RESISTOR	8.2kΩ 2W J
⚠C910	QFZ9072-224	MM CAPACITOR	0.22uF AC250V K
C915	QCB32HK-103	C CAPACITOR	0.01uF 500V K
C916	QCZ0122-561	C CAPACITOR	560pF 2kV K
C921	QCZ0122-391	C CAPACITOR	390pF 2kV K
C922	NDC31HJ-820X	C CAPACITOR	82pF 50V J
C923	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C924	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C927	QETN1HM-476Z	E CAPACITOR	47uF 50V M
C930	NDC31HJ-821X	C CAPACITOR	820pF 50V J
C952	QCB32HK-471Z	C CAPACITOR	470pF 500V K
C953	QCB32HK-471Z	C CAPACITOR	470pF 500V K
C954	QCB32HK-471Z	C CAPACITOR	470pF 500V K
C955	QCB32HK-471Z	C CAPACITOR	470pF 500V K
C956	QEZ0203-227	E CAPACITOR	220uF 160V M
C958	QETN1EM-108Z	E CAPACITOR	1000uF 25V M
C959	QETN1VM-107Z	E CAPACITOR	100uF 35V M
C960	QETM1VM-228	E CAPACITOR	2200uF 35V M
C962	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
C963	QCZ0364-102	C CAPACITOR	1000pF 2kV K
C965	QETN1AM-228Z	E CAPACITOR	2200uF 10V M
C966	QETN1CM-107Z	E CAPACITOR	100uF 16V M
C967	QETN1CM-476Z	E CAPACITOR	47uF 16V M
C969	QETN1CM-107Z	E CAPACITOR	100uF 16V M
C975	QETN1AM-228Z	E CAPACITOR	2200uF 10V M
C977	QETN1AM-477Z	E CAPACITOR	470uF 10V M
C979	QETN1EM-107Z	E CAPACITOR	100uF 25V M
C980	QETN1CM-107Z	E CAPACITOR	100uF 16V M
C984	QETN1HM-336Z	E CAPACITOR	33uF 50V M
⚠C991	QCZ9079-102	C CAPACITOR	1000pF AC250V M
⚠C992	QCZ9079-102	C CAPACITOR	1000pF AC250V M
⚠C993	QCZ9079-102	C CAPACITOR	1000pF AC250V M
C994	QETN1HM-335Z	E CAPACITOR	3.3uF 50V M
C995	QETN1CM-477Z	E CAPACITOR	470uF 16V M
R001	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R002	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R003	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J
R004	NRSA63J-273X	MG RESISTOR	27kΩ 1/16W J
R005	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J
R101	NRSA63J-680X	MG RESISTOR	68Ω 1/16W J
R102	NRSA63J-822X	MG RESISTOR	8.2kΩ 1/16W J
R103	NRSA63J-182X	MG RESISTOR	1.8kΩ 1/16W J
R104	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R105	NRSA63J-220X	MG RESISTOR	22Ω 1/16W J
R106	NRSA63J-270X	MG RESISTOR	27Ω 1/16W J
R315	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R316	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R317	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R324	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R325	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R327	NRSA63J-393X	MG RESISTOR	39kΩ 1/16W J
R328	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R344	NRSA63J-220X	MG RESISTOR	22Ω 1/16W J

⚠Ref No.	Part No.	Part Name	Description Local
R351	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R352	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J
R353	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J
R354	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J
R355	QRE121J-222Y	C RESISTOR	2.2kΩ 1/2W J
R356	QRE121J-222Y	C RESISTOR	2.2kΩ 1/2W J
R357	QRE121J-222Y	C RESISTOR	2.2kΩ 1/2W J
R358	QRZ0107-152Z	C RESISTOR	1.5kΩ 1/2W K
R359	QRZ0107-152Z	C RESISTOR	1.5kΩ 1/2W K
R360	QRZ0107-152Z	C RESISTOR	1.5kΩ 1/2W K
R369	QRE121J-104Y	C RESISTOR	100kΩ 1/2W J
R411	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R412	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R421	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R422	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R426	NRSA63J-123X	MG RESISTOR	12kΩ 1/16W J
R427	NRSA63J-682X	MG RESISTOR	6.8kΩ 1/16W J
R430	NRSA63J-123X	MG RESISTOR	12kΩ 1/16W J
R432	QRX01GJ-2R7	MF RESISTOR	2.7Ω 1W J
R433	QRE121J-5R6Y	C RESISTOR	5.6Ω 1/2W J
R434	NRSA63J-682X	MG RESISTOR	6.8kΩ 1/16W J
R440	QRG01GJ-221	OMF RESISTOR	220Ω 1W J
R448	QRE121J-1R0Y	C RESISTOR	1Ω 1/2W J
R460	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J
R461	QRE121J-823Y	C RESISTOR	82kΩ 1/2W J
R462	QRL039J-180	OMF RESISTOR	18Ω 3W J
R471	NRSA63J-274X	MG RESISTOR	270kΩ 1/16W J
R472	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R473	NRSA63J-683X	MG RESISTOR	68kΩ 1/16W J
R474	NRSA63J-224X	MG RESISTOR	220kΩ 1/16W J
R520	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R521	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R522	QRE121J-220Y	C RESISTOR	22Ω 1/2W J
R523	QRL029J-271	OMF RESISTOR	270Ω 2W J
R524	QRL039J-181	OMF RESISTOR	180Ω 3W J
R527	QRL039J-393	OMF RESISTOR	39kΩ 3W J
R528	QRE121J-471Y	C RESISTOR	470Ω 1/2W J
⚠R530	QRZ9017-270	FUSI RESISTOR	27Ω 1/4W J
⚠R533	QRZ9017-4R7	FUSI RESISTOR	4.7Ω 1/4W J
R551	QRX029J-R47	MF RESISTOR	0.47Ω 2W J
R552	QRX029J-R47	MF RESISTOR	0.47Ω 2W J
R554	NRSA63J-182X	MG RESISTOR	1.8kΩ 1/16W J
R569	QRZ0221-3R9	UNF RESISTOR	3.9Ω 7W K
R572	QRE121J-472Y	C RESISTOR	4.7kΩ 1/2W J
R573	NRSA63J-821X	MG RESISTOR	820Ω 1/16W J
R574	QRE121J-183Y	C RESISTOR	18kΩ 1/2W J
R575	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R581	QRE121J-822Y	C RESISTOR	8.2kΩ 1/2W J
R582	QRE121J-124Y	C RESISTOR	120kΩ 1/2W J
R583	QRE121J-184Y	C RESISTOR	180kΩ 1/2W J
R601	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R602	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R604	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R606	QRE121J-2R2Y	C RESISTOR	2.2Ω 1/2W J
R607	QRE121J-2R2Y	C RESISTOR	2.2Ω 1/2W J
R609	NRSA63J-273X	MG RESISTOR	27kΩ 1/16W J
R610	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J
R611	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R612	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J
R614	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J
R618	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R620	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R621	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R622	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R623	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J
R624	NRSA63J-683X	MG RESISTOR	68kΩ 1/16W J
R626	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R629	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R630	QRE121J-271Y	C RESISTOR	270Ω 1/2W J
R631	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R632	QRE121J-271Y	C RESISTOR	270Ω 1/2W J
R633	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R634	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R636	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R637	NRSA63J-562X	MG RESISTOR	5.6kΩ 1/16W J
R639	NRSA63J-562X	MG RESISTOR	5.6kΩ 1/16W J
R640	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R649	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R701	NRSA63J-123X	MG RESISTOR	12kΩ 1/16W J
R702	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R703	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R704	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R705	NRSA63J-393X	MG RESISTOR	39kΩ 1/16W J
R706	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R707	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J
R708	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R709	NRSA63J-105X	MG RESISTOR	1MΩ 1/16W J

⚠Ref No.	Part No.	Part Name	Description Local
R711	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R712	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J
R713	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R714	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J
R715	NRSA63J-391X	MG RESISTOR	390Ω 1/16W J
R716	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R717	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J
R718	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R719	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J
R726	NRSA63J-273X	MG RESISTOR	27kΩ 1/16W J
R727	NRSA63J-561X	MG RESISTOR	560Ω 1/16W J
R728	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R730	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R731	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R732	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R733	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R734	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R735	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R736	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R737	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R738	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R739	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R740	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J
R741	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R742	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R743	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J
R744	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R745	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J
R747	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R748	NRSA63J-272X	MG RESISTOR	2.7kΩ 1/16W J
R749	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R750	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R751	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R752	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R753	NRSA63J-122X	MG RESISTOR	1.2kΩ 1/16W J
R754	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R755	NRSA63J-122X	MG RESISTOR	1.2kΩ 1/16W J
R756	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R757	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R758	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J
R759	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J
R760	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R761	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R762	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R763	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R764	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R765	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R768	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R771	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R772	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R773	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J
R774	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R775	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J
R776	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J
R777	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R782	NRSA63J-122X	MG RESISTOR	1.2kΩ 1/16W J
R783	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R785	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R786	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J
R787	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R788	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R790	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R792	QRE121J-330Y	C RESISTOR	33Ω 1/2W J
R793	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R794	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R795	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J
R801	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J
R802	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R803	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R804	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J
R805	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J
R806	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J
R807	QRE121J-101Y	C RESISTOR	100Ω 1/2W J
R809	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R810	NRSA63J-391X	MG RESISTOR	390Ω 1/16W J
R811	NRSA63J-823X	MG RESISTOR	82kΩ 1/16W J
R812	NRSA63J-391X	MG RESISTOR	390Ω 1/16W J
R813	NRSA63J-823X	MG RESISTOR	82kΩ 1/16W J
R814	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J
R815	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J
R816	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J
R818	NRSA63J-181X	MG RESISTOR	180Ω 1/16W J
R819	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R820	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J
R821	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J
R822	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R823	QRE121J-470Y	C RESISTOR	47Ω 1/2W J

⚠Ref No.	Part No.	Part Name	Description	Local
R824	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R901	QRF154K-2R2	UNF WW RESISTOR	2.2Ω 15W K	
R907	QRL029J-123	OMF RESISTOR	12kΩ 2W J	
R922	QRL039J-473	OMF RESISTOR	47kΩ 3W J	
R923	NRSA63J-820X	MG RESISTOR	82Ω 1/16W J	
R924	QRE121J-184Y	C RESISTOR	180kΩ 1/2W J	
R925	QRE121J-334Y	C RESISTOR	330kΩ 1/2W J	
R927	NRSA63J-470X	MG RESISTOR	47Ω 1/16W J	
R930	NRSA63J-183X	MG RESISTOR	18kΩ 1/16W J	
R931	NRSA63J-563X	MG RESISTOR	56kΩ 1/16W J	
R933	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J	
R934	NRSA63J-334X	MG RESISTOR	330kΩ 1/16W J	
R935	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J	
R936	QRZ9017-2R2	FUSI RESISTOR	2.2Ω 1/4W J	
R951	QRE121J-822Y	C RESISTOR	8.2kΩ 1/2W J	
R952	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R961	NRSA63J-182X	MG RESISTOR	1.8kΩ 1/16W J	
R962	QRL029J-223	OMF RESISTOR	22kΩ 2W J	
R963	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R964	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R965	QRT029J-1R2	MF RESISTOR	1.2Ω 2W J	
R970	QRE121J-182Y	C RESISTOR	1.8kΩ 1/2W J	
R976	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R977	QRL039J-120	OMF RESISTOR	12Ω 3W J	
R978	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R981	QRE121J-3R9Y	C RESISTOR	3.9Ω 1/2W J	
R982	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R983	QRE121J-3R9Y	C RESISTOR	3.9Ω 1/2W J	
R984	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R985	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R986	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
⚠R991	QRZ9046-825Z	C RESISTOR	8.2MΩ 1/2W K	
L002	QQL244J-4R7Z	PEAKING COIL	4.7uH J	
L003	QQL244J-4R7Z	PEAKING COIL	4.7uH J	
L101	QQL244K-1R0Z	PEAKING COIL	1uH K	
L351	QQL244J-5R6Z	COIL	5.6uH J	
L521	QQLZ036-821	COIL	820uH K	
L522	QQR1137-005	LINEARITY COIL		
L530	QQL244J-100Z	COIL	10uH J	
L551	QQLZ026-360	COIL	36uH ±7%	
L701	NQR0199-004X	FERRITE BEADS		
L702	NQR0199-004X	FERRITE BEADS		
L703	NQR0199-004X	FERRITE BEADS		
L704	NQR0199-004X	FERRITE BEADS		
L705	NQR0199-004X	FERRITE BEADS		
L706	NQR0199-004X	FERRITE BEADS		
L707	NQR0199-004X	FERRITE BEADS		
L708	NQR0199-004X	FERRITE BEADS		
L709	NQR0199-004X	FERRITE BEADS		
L710	NQR0199-004X	FERRITE BEADS		
L711	NQR0199-004X	FERRITE BEADS		
L712	NQR0199-004X	FERRITE BEADS		
L713	NQR0199-004X	FERRITE BEADS		
L714	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
L715	NQR0199-004X	FERRITE BEADS		
L716	NQR0199-004X	FERRITE BEADS		
L717	NQR0199-004X	FERRITE BEADS		
L718	NQR0199-004X	FERRITE BEADS		
L951	QQLZ026-460	COIL	46uH ±7%	
T521	QQR1229-001	DRIVE TRANSF		
⚠T921	QQS0345-001	SW TRANSF		
⚠PC901	PS2581AL1/QW/	PHOTO COUPLER		
CF101	QAX0349-001	C TRAP	47.25MHz	
⚠CP650	ICP-N25-T	IC PROTECTOR	1.0A	
⚠CP952	ICP-N38-T	IC PROTECTOR	1.5A	
⚠CP953	ICP-N38-T	IC PROTECTOR	1.5A	
⚠CP954	ICP-N38-T	IC PROTECTOR	1.5A	
⚠CP955	ICP-N75-T	IC PROTECTOR	2.7A	
⚠F901	QMF51E2-4R0-S	FUSE	4A AC250V	
J801	QNZ0454-002	PIN JACK	VIDEO1/S-VIDEO	
J802	QNN0349-002	PIN JACK	VIDEO2/COMP	
J803	QNN0348-001	PIN JACK	VIDEO2/COMP	
J804	QNN0349-001	PIN JACK	VIDEO OUT	
J806	QNN0281-003	PIN JACK	VIDEO3(FRONT)/L3	
J807	QNN0281-002	PIN JACK	VIDEO3(FRONT)/R3	
J808	QNN0282-001	PIN JACK	VIDEO3(FRONT)/V3	
J809	QNS0155-001	3.5 JACK	HEADPHONE	
K101	QQR1114-001Z	FERRITE BEADS		
K104	QQR1114-001Z	FERRITE BEADS		
K356	QQR0601-001Z	COIL		
K901	QQR1114-001Z	FERRITE BEADS		
K951	QQR1114-001Z	FERRITE BEADS		
K952	QQR1113-001Z	FERRITE BEADS		
K953	QQR1113-001Z	FERRITE BEADS		
K954	QQR1113-001Z	FERRITE BEADS		
K955	QQR1113-001Z	FERRITE BEADS		
LC801	QQR1199-002	EMI FILTER		
LC802	QQR1199-002	EMI FILTER		
LC803	QQR1199-002	EMI FILTER		
LC804	QQR1199-002	EMI FILTER		
LC805	QQR1199-002	EMI FILTER		
⚠LF901	QQR0673-004	LINE FILTER		
⚠LF902	QQR1635-001	LINE FILTER		
⚠RY901	QSK0061-002	RELAY		
S801	QSW0619-003Z	TACT SWITCH		MENU
S802	QSW0619-003Z	TACT SWITCH		CH-
S803	QSW0619-003Z	TACT SWITCH		CH+
S804	QSW0619-003Z	TACT SWITCH		VOL-
S805	QSW0619-003Z	TACT SWITCH		VOL+
⚠S901	QSW0750-001	PUSH SWITCH		POWER
SF102	QAX0723-001	SAW FILTER		
⚠SK351	QNZ0536-001	CRT SOCKET		
⚠TH901	QAD0134-4R5	P THERMISTOR		4.5Ω
TU001	QAU0353-002	TUNER		
⚠VA901	QAF0060-621	VARISTOR		620V
X701	QAX0799-001Z	CRYSTAL		
	GG30118-001A-H	LED HOLDER		
	GG30138-001A-H	EE HOLDER		

PRINTED WIRING BOARD PARTS LIST [AV-25VA15/P]

MAIN P.W. BOARD ASS'Y (SCW-1731A-H2)

⚠Ref No.	Part No.	Part Name	Description	Local
IC302	S9648	PHOTO CONDUCTOR		
IC351	TDA6107AJF/N1	IC		
IC401	LA78040N	IC		
IC601	AN5277	IC		
IC701	TDA12021-NTSC	IC(MCU)	(SERVICE)	
IC702	AT24C16-25VA15P	IC	(SERVICE)	
IC801	RPM7238-H5	IR DETECT UNIT		
IC901	ICE1QS01	IC		
IC951	SE135N	IC		
IC972	BA33BC0T	REGULATOR IC		
IC973	PQ120RDA1SZ	IC		
IC975	PQ050RDA1SZ	IC		
Q101	2SC5397/CD/-T	TRANSISTOR		
Q341	2SA1530A/QR/-X	TRANSISTOR		
Q421	2SC3928A/QR/-X	TRANSISTOR		
Q422	2SC3928A/QR/-X	TRANSISTOR		
Q461	RDN050N20	POWER MOS FET		
Q521	2SC2655/Y/-T	TRANSISTOR		
⚠Q522	TT2142-YD	TRANSISTOR		
Q571	2SA1208/ST/Z1-T	TRANSISTOR		
Q572	UN2226-X	DIGI TRANSISTOR		
Q601	2SA1530A/QR/-X	TRANSISTOR		
Q602	2SA1530A/QR/-X	TRANSISTOR		
Q603	UN2226-X	DIGI TRANSISTOR		
Q605	UN2226-X	DIGI TRANSISTOR		
Q607	2SC3928A/QR/-X	TRANSISTOR		
Q608	2SC3928A/QR/-X	TRANSISTOR		
Q609	UN2226-X	DIGI TRANSISTOR		
Q611	UN2226-X	DIGI TRANSISTOR		
Q612	2SC3928A/QR/-X	TRANSISTOR		
Q704	2SC3928A/QR/-X	TRANSISTOR		
Q705	SSM3K02F-X	MOS FET		
Q706	SSM3K02F-X	MOS FET		
Q707	2SC3928A/QR/-X	TRANSISTOR		
Q708	2SA1530A/QR/-X	TRANSISTOR		
Q791	2SC3928A/QR/-X	TRANSISTOR		
Q801	KTA1267/YG/-T	TRANSISTOR		
Q803	UN2226-X	DIGI TRANSISTOR		
Q804	UN2226-X	DIGI TRANSISTOR		
Q805	2SA1530A/QR/-X	TRANSISTOR		
Q901	STP13NK60ZFP	POWER MOS FET		
Q955	2SC3928A/QR/-X	TRANSISTOR		
Q981	2SA562TM/Y/-T	TRANSISTOR		
Q982	2SC3928A/QR/-X	TRANSISTOR		
Q983	2SA562TM/Y/-T	TRANSISTOR		
Q984	2SC3928A/QR/-X	TRANSISTOR		
D341	MA111-X	SI DIODE		
D342	MA111-X	SI DIODE		
D343	MA111-X	SI DIODE		
D345	MA111-X	SI DIODE		
D350	MA8075/M/-X	Z DIODE		
D354	FR105GT-T3	SI DIODE		
D355	FR105GT-T3	SI DIODE		
D356	FR105GT-T3	SI DIODE		
D423	1N4003SG-T2	SI DIODE		
D424	1SR35-400A-T2	SI DIODE		
D520	MA111-X	SI DIODE		
D521	RH3G-F1	SI DIODE		
D522	RU4AM-LFT2	SI DIODE		
D523	FR105GT-T3	SI DIODE		
D530	FR105GT-T3	SI DIODE		
D551	FR105GT-T3	SI DIODE		
D552	FR105GT-T3	SI DIODE		
D554	MA8051/L/-X	Z DIODE		
D571	MA8075/H/-X	Z DIODE		
D581	FR105GT-T3	SI DIODE		
D603	MA111-X	SI DIODE		
D607	MA111-X	SI DIODE		
D610	MA111-X	SI DIODE		
D701	MA111-X	SI DIODE		
D702	MA8091/H/-X	Z DIODE		
D703	MA8091/H/-X	Z DIODE		
D704	MA8091/H/-X	Z DIODE		
D706	MA8036-X	Z DIODE		
D707	MA111-X	SI DIODE		
D708	MA111-X	SI DIODE		
D709	MA111-X	SI DIODE		
D710	MA8091/H/-X	Z DIODE		
D711	MA111-X	SI DIODE		
D712	MA111-X	SI DIODE		
D713	MA8039/H/-X	Z DIODE		
D714	MA8030/H/-X	Z DIODE		
D751	MA8091/H/-X	Z DIODE		
D753	MA8091/H/-X	Z DIODE		
D808	LH22440-T16	LED	POWER(RED)	
D810	MA8091/H/-X	Z DIODE		
D811	MA8091/H/-X	Z DIODE		
D812	MA8091/H/-X	Z DIODE		
D813	MA8091/H/-X	Z DIODE		
D814	MA8091/H/-X	Z DIODE		
D817	MA8091/H/-X	Z DIODE		
D901	GSIB460-S1	BRIDGE DIODE		
D921	FR105GT-T3	SI DIODE		
D924	1SR35-400A-T2	SI DIODE		
D925	1SR35-400A-T2	SI DIODE		
D926	MA8180/M/-X	Z DIODE		
D928	MA8180/M/-X	Z DIODE		
D950	MTZJ27B-T2	Z DIODE		
D951	RU4AM-LFT2	SI DIODE		
D952	FR105GT-T3	SI DIODE		
D953	FR105GT-T3	SI DIODE		
D954	FR105GT-T3	SI DIODE		
D955	FMX-G12S	SI DIODE		
D956	MA111-X	SI DIODE		
D957	MA111-X	SI DIODE		
D958	1SR35-400A-T2	SI DIODE		
D962	MA8330/M/-X	Z DIODE		
D970	MA8082/M/-X	Z DIODE		
D971	MA111-X	SI DIODE		
D972	MA111-X	SI DIODE		
D973	MA111-X	SI DIODE		
D975	MA111-X	SI DIODE		
D981	UDZS2.0B-X	Z DIODE		
D982	UDZS2.0B-X	Z DIODE		
C001	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C002	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C003	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C004	QETN1CM-477Z	E CAPACITOR	470uF 16V M	
C005	NCB31HK-222X	C CAPACITOR	2200pF 50V K	
C006	QETN1CM-336Z	E CAPACITOR	33uF 16V M	
C101	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C102	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C103	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C104	QETN1EM-476Z	E CAPACITOR	47uF 25V M	
C106	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C109	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
C110	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C111	QETN1CM-227Z	E CAPACITOR	220uF 16V M	
C112	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
C317	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C341	QETN1CM-227Z	E CAPACITOR	220uF 16V M	
C351	NDC31HJ-102X	C CAPACITOR	1000pF 50V J	
C352	QETN2EM-475Z	E CAPACITOR	4.7uF 250V M	
C353	QFKC2EK-104Z	MM CAPACITOR	0.1uF 250V K	
C358	QCZ0364-152	C CAPACITOR	1500pF 2kV K	
C422	QCS32HJ-180Z	C CAPACITOR	18pF 500V J	
C423	NCB31HK-682X	C CAPACITOR	6800pF 50V K	
C424	QFLC2AJ-683Z	M CAPACITOR	0.068uF 100V J	
C427	QETM1VM-108	E CAPACITOR	1000uF 35V M	
C428	QEHR1VM-227Z	E CAPACITOR	220uF 35V M	
C430	QFLC2AJ-563Z	M CAPACITOR	0.056uF 100V J	
C431	QFVF1HJ-184Z	MF CAPACITOR	0.18uF 50V J	
C435	NCF21HZ-334X	C CAPACITOR	0.33uF 50V Z	
C436	NCF21HZ-334X	C CAPACITOR	0.33uF 50V Z	
C471	QETN1HM-226Z	E CAPACITOR	22uF 50V M	
C520	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C521	QCB31HK-332Z	C CAPACITOR	3300pF 50V K	
C522	QFLC1HJ-223Z	M CAPACITOR	0.022uF 50V J	
C523	QETN1VM-476Z	E CAPACITOR	47uF 35V M	
⚠C524	QFZ0196-202	MPP CAPACITOR	2000pF 1.5kV H	
C525	QFZ0196-113	MPP CAPACITOR	0.011uF 1.5kV H	
C526	QFZ0196-202	MPP CAPACITOR	2000pF 1.5kV H	
C527	QFZ0197-184	MPP CAPACITOR	0.18uF 250V J	
C528	QFP32GJ-223	PP CAPACITOR	0.022uF 400V J	
C529	QENC2AM-225Z	BP E CAPACITOR	2.2uF 100V M	
C530	QCB32HK-561Z	C CAPACITOR	560pF 500V K	
C531	QEZ0195-475Z	BP E CAPACITOR	4.7uF 50V M	
C532	QETN2EM-106Z	E CAPACITOR	10uF 250V M	
C551	QCB32HK-561Z	C CAPACITOR	560pF 500V K	
C552	QCB32HK-561Z	C CAPACITOR	560pF 500V K	
C553	QEHR1EM-108Z	E CAPACITOR	1000uF 25V M	
C554	QEHR1EM-108Z	E CAPACITOR	1000uF 25V M	
C555	QFLC2AJ-103Z	M CAPACITOR	0.01uF 100V J	

⚠Ref No.	Part No.	Part Name	Description Local
C571	QETM2CM-227	E CAPACITOR	220uF 160V M
C572	QETN1CM-107Z	E CAPACITOR	100uF 16V M
C573	QETN1EM-476Z	E CAPACITOR	47uF 25V M
C581	QFVF1HJ-104Z	MF CAPACITOR	0.1uF 50V J
C582	QFZ0197-224	MPP CAPACITOR	0.22uF 250V J
C601	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C602	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C603	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C604	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C605	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C606	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C607	QETN1CM-227Z	E CAPACITOR	220uF 16V M
C608	QETN1CM-227Z	E CAPACITOR	220uF 16V M
C609	QETN1HM-336Z	E CAPACITOR	33uF 50V M
C610	QETN1CM-227Z	E CAPACITOR	220uF 16V M
C613	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C615	QETN1EM-108Z	E CAPACITOR	1000uF 25V M
C616	QETN1EM-108Z	E CAPACITOR	1000uF 25V M
C656	QETN1HM-107Z	E CAPACITOR	100uF 50V M
C661	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C662	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C701	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C702	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C703	QETN1CM-477Z	E CAPACITOR	470uF 16V M
C704	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C705	NDC31HJ-7R0X	C CAPACITOR	7pF 50V J
C706	NDC31HJ-7R0X	C CAPACITOR	7pF 50V J
C707	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C708	QETN1CM-107Z	E CAPACITOR	100uF 16V M
C709	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C710	NCB31HK-682X	C CAPACITOR	6800pF 50V K
C711	QETN1HM-225Z	E CAPACITOR	2.2uF 50V M
C712	QFVF1HJ-224Z	MF CAPACITOR	0.22uF 50V J
C713	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C714	NCB31HK-223X	C CAPACITOR	0.022uF 50V K
C715	NCB31HK-102X	C CAPACITOR	1000pF 50V K
C716	NCB31HK-102X	C CAPACITOR	1000pF 50V K
C718	QFVF1HJ-154Z	MF CAPACITOR	0.15uF 50V J
C719	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C720	NCB31HK-102X	C CAPACITOR	1000pF 50V K
C723	NCB31CK-105X	C CAPACITOR	1uF 16V K
C724	NCB31CK-105X	C CAPACITOR	1uF 16V K
C725	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C726	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C727	NCB31HK-332X	C CAPACITOR	3300pF 50V K
C728	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C729	QETN1HM-225Z	E CAPACITOR	2.2uF 50V M
C730	QETN1HM-226Z	E CAPACITOR	22uF 50V M
C731	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C732	QETN1HM-225Z	E CAPACITOR	2.2uF 50V M
C733	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C734	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C735	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C736	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C737	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C738	NCB31CK-105X	C CAPACITOR	1uF 16V K
C739	NCB31CK-105X	C CAPACITOR	1uF 16V K
C740	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C741	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C742	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C743	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C744	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C745	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C746	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C747	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C748	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C749	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C750	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C751	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C752	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C753	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C754	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C755	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C756	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C757	NDC31HJ-561X	C CAPACITOR	560pF 50V J
C758	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C759	QETN1CM-107Z	E CAPACITOR	100uF 16V M
C760	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C761	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C762	QETN1CM-107Z	E CAPACITOR	100uF 16V M
C763	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C764	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C765	QETN1CM-107Z	E CAPACITOR	100uF 16V M
C766	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C767	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C768	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C770	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C771	QETN1HM-226Z	E CAPACITOR	22uF 50V M
C772	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C773	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C775	NCB31CK-224X	C CAPACITOR	0.22uF 16V K
C776	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C777	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C778	QETN1CM-476Z	E CAPACITOR	47uF 16V M
C779	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C780	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C781	NCB31CK-105X	C CAPACITOR	1uF 16V K
C782	NCB31CK-105X	C CAPACITOR	1uF 16V K
C783	QETN1HM-105Z	E CAPACITOR	1uF 50V M
C785	NCB30JK-225X	C CAPACITOR	2.2uF 6.3V K
C790	NDC31HJ-270X	C CAPACITOR	27pF 50V J
C792	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C793	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C802	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C803	QETN1HM-106Z	E CAPACITOR	10uF 50V M
C804	QETN1CM-477Z	E CAPACITOR	470uF 16V M
C806	QETN1CM-107Z	E CAPACITOR	100uF 16V M
C807	NCB31CK-104X	C CAPACITOR	0.1uF 16V K
C821	NCB31HK-152X	C CAPACITOR	1500pF 50V K
C822	NCB31HK-152X	C CAPACITOR	1500pF 50V K
C823	NCB31HK-152X	C CAPACITOR	1500pF 50V K
C824	NCB31HK-152X	C CAPACITOR	1500pF 50V K
C825	NCB31HK-152X	C CAPACITOR	1500pF 50V K
C826	NCB31HK-152X	C CAPACITOR	1500pF 50V K
⚠C901	QFZ9072-224	MM CAPACITOR	0.22uF AC250V K
⚠C902	QFZ9072-224	MM CAPACITOR	0.22uF AC250V K
⚠C903	QCZ9015-102Z	C CAPACITOR	1000pF AC250V Z
⚠C904	QCZ9015-102Z	C CAPACITOR	1000pF AC250V Z
⚠C905	QCZ9015-102Z	C CAPACITOR	1000pF AC250V Z
C906	QEZ0649-337	E CAPACITOR	330uF 400V M
C908	QRL029J-822	OMF RESISTOR	8.2kΩ 2W J
⚠C910	QFZ9072-224	MM CAPACITOR	0.22uF AC250V K
C915	QCB32HK-103	C CAPACITOR	0.01uF 500V K
C916	QCZ0122-561	C CAPACITOR	560pF 2kV K
C921	QCZ0122-391	C CAPACITOR	390pF 2kV K
C922	NDC31HJ-820X	C CAPACITOR	82pF 50V J
C923	NCB31HK-104X	C CAPACITOR	0.1uF 50V K
C924	NCB31HK-103X	C CAPACITOR	0.01uF 50V K
C927	QETN1HM-476Z	E CAPACITOR	47uF 50V M
C930	NDC31HJ-821X	C CAPACITOR	820pF 50V J
C952	QCB32HK-471Z	C CAPACITOR	470pF 500V K
C953	QCB32HK-471Z	C CAPACITOR	470pF 500V K
C954	QCB32HK-471Z	C CAPACITOR	470pF 500V K
C955	QCB32HK-471Z	C CAPACITOR	470pF 500V K
C956	QEZ0203-227	E CAPACITOR	220uF 160V M
C958	QETN1EM-108Z	E CAPACITOR	1000uF 25V M
C959	QETN1VM-107Z	E CAPACITOR	100uF 35V M
C960	QETM1VM-228	E CAPACITOR	2200uF 35V M
C962	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
C963	QCZ0364-102	C CAPACITOR	1000pF 2kV K
C965	QETN1AM-228Z	E CAPACITOR	2200uF 10V M
C966	QETN1CM-107Z	E CAPACITOR	100uF 16V M
C967	QETN1CM-476Z	E CAPACITOR	47uF 16V M
C969	QETN1CM-107Z	E CAPACITOR	100uF 16V M
C975	QETN1AM-228Z	E CAPACITOR	2200uF 10V M
C977	QETN1AM-477Z	E CAPACITOR	470uF 10V M
C979	QETN1EM-107Z	E CAPACITOR	100uF 25V M
C980	QETN1CM-107Z	E CAPACITOR	100uF 16V M
C984	QETN1HM-336Z	E CAPACITOR	33uF 50V M
⚠C991	QCZ9079-102	C CAPACITOR	1000pF AC250V M
⚠C992	QCZ9079-102	C CAPACITOR	1000pF AC250V M
⚠C993	QCZ9079-102	C CAPACITOR	1000pF AC250V M
C994	QETN1HM-335Z	E CAPACITOR	3.3uF 50V M
C995	QETN1CM-477Z	E CAPACITOR	470uF 16V M
R001	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R002	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R003	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J
R004	NRSA63J-273X	MG RESISTOR	27kΩ 1/16W J
R005	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J
R101	NRSA63J-680X	MG RESISTOR	68Ω 1/16W J
R102	NRSA63J-822X	MG RESISTOR	8.2kΩ 1/16W J
R103	NRSA63J-182X	MG RESISTOR	1.8kΩ 1/16W J
R104	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R105	NRSA63J-220X	MG RESISTOR	22Ω 1/16W J
R106	NRSA63J-270X	MG RESISTOR	27Ω 1/16W J
R315	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R316	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R317	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R324	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R325	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R327	NRSA63J-393X	MG RESISTOR	39kΩ 1/16W J
R328	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R344	NRSA63J-220X	MG RESISTOR	22Ω 1/16W J

⚠Ref No.	Part No.	Part Name	Description Local
R351	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R352	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J
R353	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J
R354	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J
R355	QRE121J-222Y	C RESISTOR	2.2kΩ 1/2W J
R356	QRE121J-222Y	C RESISTOR	2.2kΩ 1/2W J
R357	QRE121J-222Y	C RESISTOR	2.2kΩ 1/2W J
R358	QRZ0107-152Z	C RESISTOR	1.5kΩ 1/2W K
R359	QRZ0107-152Z	C RESISTOR	1.5kΩ 1/2W K
R360	QRZ0107-152Z	C RESISTOR	1.5kΩ 1/2W K
R369	QRE121J-104Y	C RESISTOR	100kΩ 1/2W J
R411	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R412	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R421	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R422	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R426	NRSA63J-123X	MG RESISTOR	12kΩ 1/16W J
R427	NRSA63J-682X	MG RESISTOR	6.8kΩ 1/16W J
R430	NRSA63J-123X	MG RESISTOR	12kΩ 1/16W J
R432	QRX01GJ-2R7	MF RESISTOR	2.7Ω 1W J
R433	QRE121J-5R6Y	C RESISTOR	5.6Ω 1/2W J
R434	NRSA63J-682X	MG RESISTOR	6.8kΩ 1/16W J
R440	QRG01GJ-221	OMF RESISTOR	220Ω 1W J
R448	QRE121J-1R0Y	C RESISTOR	1Ω 1/2W J
R460	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J
R461	QRE121J-823Y	C RESISTOR	82kΩ 1/2W J
R462	QRL039J-180	OMF RESISTOR	18Ω 3W J
R471	NRSA63J-274X	MG RESISTOR	270kΩ 1/16W J
R472	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R473	NRSA63J-683X	MG RESISTOR	68kΩ 1/16W J
R474	NRSA63J-224X	MG RESISTOR	220kΩ 1/16W J
R520	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R521	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R522	QRE121J-220Y	C RESISTOR	22Ω 1/2W J
R523	QRL029J-271	OMF RESISTOR	270Ω 2W J
R524	QRL039J-181	OMF RESISTOR	180Ω 3W J
R527	QRL039J-393	OMF RESISTOR	39kΩ 3W J
R528	QRE121J-471Y	C RESISTOR	470Ω 1/2W J
⚠R530	QRZ9017-270	FUSI RESISTOR	27Ω 1/4W J
⚠R533	QRZ9017-4R7	FUSI RESISTOR	4.7Ω 1/4W J
R551	QRX029J-R47	MF RESISTOR	0.47Ω 2W J
R552	QRX029J-R47	MF RESISTOR	0.47Ω 2W J
R554	NRSA63J-182X	MG RESISTOR	1.8kΩ 1/16W J
R569	QRZ0221-3R9	UNF RESISTOR	3.9Ω 7W K
R572	QRE121J-472Y	C RESISTOR	4.7kΩ 1/2W J
R573	NRSA63J-821X	MG RESISTOR	820Ω 1/16W J
R574	QRE121J-183Y	C RESISTOR	18kΩ 1/2W J
R575	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R581	QRE121J-822Y	C RESISTOR	8.2kΩ 1/2W J
R582	QRE121J-124Y	C RESISTOR	120kΩ 1/2W J
R583	QRE121J-184Y	C RESISTOR	180kΩ 1/2W J
R601	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R602	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R604	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R606	QRE121J-2R2Y	C RESISTOR	2.2Ω 1/2W J
R607	QRE121J-2R2Y	C RESISTOR	2.2Ω 1/2W J
R609	NRSA63J-273X	MG RESISTOR	27kΩ 1/16W J
R610	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J
R611	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R612	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J
R614	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J
R618	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R620	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R621	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R622	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R623	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J
R624	NRSA63J-683X	MG RESISTOR	68kΩ 1/16W J
R626	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R629	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R630	QRE121J-271Y	C RESISTOR	270Ω 1/2W J
R631	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R632	QRE121J-271Y	C RESISTOR	270Ω 1/2W J
R633	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R634	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R636	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R637	NRSA63J-562X	MG RESISTOR	5.6kΩ 1/16W J
R639	NRSA63J-562X	MG RESISTOR	5.6kΩ 1/16W J
R640	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R649	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R701	NRSA63J-123X	MG RESISTOR	12kΩ 1/16W J
R702	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R703	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R704	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R705	NRSA63J-393X	MG RESISTOR	39kΩ 1/16W J
R706	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R707	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J
R708	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R709	NRSA63J-105X	MG RESISTOR	1MΩ 1/16W J

⚠Ref No.	Part No.	Part Name	Description Local
R711	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R712	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J
R713	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R714	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J
R715	NRSA63J-391X	MG RESISTOR	390Ω 1/16W J
R716	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R717	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J
R718	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R719	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J
R726	NRSA63J-273X	MG RESISTOR	27kΩ 1/16W J
R727	NRSA63J-561X	MG RESISTOR	560Ω 1/16W J
R728	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R730	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R731	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R732	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R733	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R734	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R735	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R736	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R737	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R738	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R739	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R740	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J
R741	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R742	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R743	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J
R744	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R745	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J
R747	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R748	NRSA63J-272X	MG RESISTOR	2.7kΩ 1/16W J
R749	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R750	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R751	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R752	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R753	NRSA63J-122X	MG RESISTOR	1.2kΩ 1/16W J
R754	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R755	NRSA63J-122X	MG RESISTOR	1.2kΩ 1/16W J
R756	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R757	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R758	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J
R759	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J
R760	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R761	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R762	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R763	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R764	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R765	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R768	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R771	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R772	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R773	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J
R774	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R775	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J
R776	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J
R777	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R782	NRSA63J-122X	MG RESISTOR	1.2kΩ 1/16W J
R783	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J
R785	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R786	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J
R787	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J
R788	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R790	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R792	QRE121J-330Y	C RESISTOR	33Ω 1/2W J
R793	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J
R794	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J
R795	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J
R801	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J
R802	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R803	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R804	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J
R805	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J
R806	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J
R807	QRE121J-101Y	C RESISTOR	100Ω 1/2W J
R809	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J
R810	NRSA63J-391X	MG RESISTOR	390Ω 1/16W J
R811	NRSA63J-823X	MG RESISTOR	82kΩ 1/16W J
R812	NRSA63J-391X	MG RESISTOR	390Ω 1/16W J
R813	NRSA63J-823X	MG RESISTOR	82kΩ 1/16W J
R814	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J
R815	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J
R816	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J
R818	NRSA63J-181X	MG RESISTOR	180Ω 1/16W J
R819	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J
R820	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J
R821	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J
R822	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J
R823	QRE121J-470Y	C RESISTOR	47Ω 1/2W J

⚠Ref No.	Part No.	Part Name	Description	Local
R824	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R901	QRF154K-2R2	UNF WW RESISTOR	2.2Ω 15W K	
R907	QRL029J-123	OMF RESISTOR	12kΩ 2W J	
R922	QRL039J-473	OMF RESISTOR	47kΩ 3W J	
R923	NRSA63J-820X	MG RESISTOR	82Ω 1/16W J	
R924	QRE121J-184Y	C RESISTOR	180kΩ 1/2W J	
R925	QRE121J-334Y	C RESISTOR	330kΩ 1/2W J	
R927	NRSA63J-470X	MG RESISTOR	47Ω 1/16W J	
R930	NRSA63J-183X	MG RESISTOR	18kΩ 1/16W J	
R931	NRSA63J-563X	MG RESISTOR	56kΩ 1/16W J	
R933	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J	
R934	NRSA63J-334X	MG RESISTOR	330kΩ 1/16W J	
R935	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J	
R936	QRZ9017-2R2	FUSI RESISTOR	2.2Ω 1/4W J	
R951	QRE121J-822Y	C RESISTOR	8.2kΩ 1/2W J	
R952	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R961	NRSA63J-182X	MG RESISTOR	1.8kΩ 1/16W J	
R962	QRL029J-223	OMF RESISTOR	22kΩ 2W J	
R963	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R964	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R965	QRT029J-1R2	MF RESISTOR	1.2Ω 2W J	
R970	QRE121J-182Y	C RESISTOR	1.8kΩ 1/2W J	
R976	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R977	QRL039J-120	OMF RESISTOR	12Ω 3W J	
R978	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R981	QRE121J-3R9Y	C RESISTOR	3.9Ω 1/2W J	
R982	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R983	QRE121J-3R9Y	C RESISTOR	3.9Ω 1/2W J	
R984	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R985	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R986	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
⚠R991	QRZ9046-825Z	C RESISTOR	8.2MΩ 1/2W K	
L002	QQL244J-4R7Z	PEAKING COIL	4.7uH J	
L003	QQL244J-4R7Z	PEAKING COIL	4.7uH J	
L101	QQL244K-1R0Z	PEAKING COIL	1uH K	
L351	QQL244J-5R6Z	COIL	5.6uH J	
L521	QQLZ036-821	COIL	820uH K	
L522	QQR1137-005	LINEARITY COIL		
L530	QQL244J-100Z	COIL	10uH J	
L551	QQLZ026-360	COIL	36uH ±7%	
L701	NQR0199-004X	FERRITE BEADS		
L702	NQR0199-004X	FERRITE BEADS		
L703	NQR0199-004X	FERRITE BEADS		
L704	NQR0199-004X	FERRITE BEADS		
L705	NQR0199-004X	FERRITE BEADS		
L706	NQR0199-004X	FERRITE BEADS		
L707	NQR0199-004X	FERRITE BEADS		
L708	NQR0199-004X	FERRITE BEADS		
L709	NQR0199-004X	FERRITE BEADS		
L710	NQR0199-004X	FERRITE BEADS		
L711	NQR0199-004X	FERRITE BEADS		
L712	NQR0199-004X	FERRITE BEADS		
L713	NQR0199-004X	FERRITE BEADS		
L714	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
L715	NQR0199-004X	FERRITE BEADS		
L716	NQR0199-004X	FERRITE BEADS		
L717	NQR0199-004X	FERRITE BEADS		
L718	NQR0199-004X	FERRITE BEADS		
L951	QQLZ026-460	COIL	46uH ±7%	
T521	QQR1229-001	DRIVE TRANSF		
⚠T921	QQS0345-001	SW TRANSF		
⚠PC901	PS2581AL1/QW/	PHOTO COUPLER		
CF101	QAX0349-001	C TRAP	47.25MHz	
⚠CP650	ICP-N25-T	IC PROTECTOR	1.0A	
⚠CP952	ICP-N38-T	IC PROTECTOR	1.5A	
⚠CP953	ICP-N38-T	IC PROTECTOR	1.5A	
⚠CP954	ICP-N38-T	IC PROTECTOR	1.5A	
⚠CP955	ICP-N75-T	IC PROTECTOR	2.7A	
⚠F901	QMF51E2-4R0-S	FUSE	4A AC250V	
J801	QNZ0454-002	PIN JACK	VIDEO1/S-VIDEO	
J802	QNN0349-002	PIN JACK	VIDEO2/COMP	
J803	QNN0348-001	PIN JACK	VIDEO2/COMP	
J804	QNN0349-001	PIN JACK	VIDEO OUT	
J806	QNN0281-003	PIN JACK	VIDEO3(FRONT)/L3	
J807	QNN0281-002	PIN JACK	VIDEO3(FRONT)/R3	
J808	QNN0282-001	PIN JACK	VIDEO3(FRONT)/V3	
J809	QNS0155-001	3.5 JACK	HEADPHONE	
K101	QQR1114-001Z	FERRITE BEADS		
K104	QQR1114-001Z	FERRITE BEADS		
K356	QQR0601-001Z	COIL		
K901	QQR1114-001Z	FERRITE BEADS		
K951	QQR1114-001Z	FERRITE BEADS		
K952	QQR1113-001Z	FERRITE BEADS		
K953	QQR1113-001Z	FERRITE BEADS		
K954	QQR1113-001Z	FERRITE BEADS		
K955	QQR1113-001Z	FERRITE BEADS		
LC801	QQR1199-002	EMI FILTER		
LC802	QQR1199-002	EMI FILTER		
LC803	QQR1199-002	EMI FILTER		
LC804	QQR1199-002	EMI FILTER		
LC805	QQR1199-002	EMI FILTER		
⚠LF901	QQR0673-004	LINE FILTER		
⚠LF902	QQR1635-001	LINE FILTER		
⚠RY901	QSK0061-002	RELAY		
S801	QSW0619-003Z	TACT SWITCH		MENU
S802	QSW0619-003Z	TACT SWITCH		CH-
S803	QSW0619-003Z	TACT SWITCH		CH+
S804	QSW0619-003Z	TACT SWITCH		VOL-
S805	QSW0619-003Z	TACT SWITCH		VOL+
⚠S901	QSW0750-001	PUSH SWITCH		POWER
SF102	QAX0723-001	SAW FILTER		
⚠SK351	QNZ0536-001	CRT SOCKET		
⚠TH901	QAD0134-4R5	P THERMISTOR	4.5Ω	
TU001	QAU0353-002	TUNER		
⚠VA901	QAF0060-621	VARISTOR	620V	
X701	QAX0799-001Z	CRYSTAL		
	LC30114-001C-H	LED HOLDER		
	GG30138-001A-H	EE HOLDER		

PREMOTE CONTROL UNIT PARTS LIST (RM-C1287-1H)

⚠	Ref No.	Part No.	Part Name	Description	Local
		R25-8566	BATTERY COVER		

PACKING

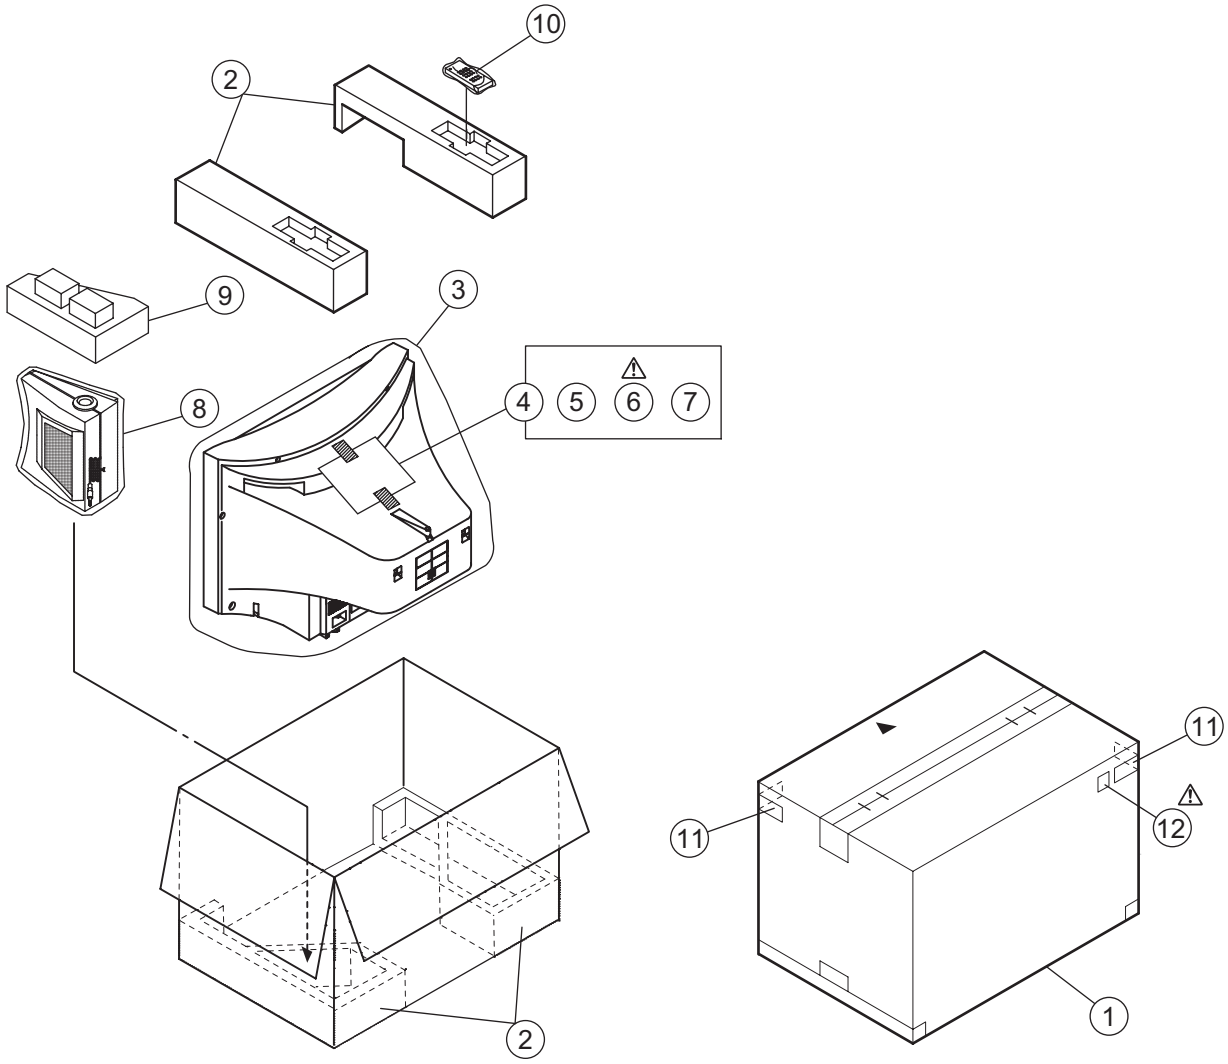

PACKING PARTS LIST

⚠	Ref.No.	Part No.	Part Name	Description	Local
	1	GG10285-003A-H	PACKING CASE		
	2	GG10347-001C-H	CUSHION ASS'Y	4pcs in 1set	AV-25MT35/P,AV-25MT15/P
	2	GG10252-001C-H	CUSHION ASS'Y	4pcs in 1set	AV-25VA15/P
	3	GG30097-004A-H	POLY BAG		
	4	GG30096-001A-H	POLY BAG		
	5	----------	BATTERY	AA/R6 (x2)	
⚠	6	GGT0072-001B-H	INST BOOK		
	7	QAM0028-001	MATCHING BOX		
	8	GG30097-007A-H	POLY BAG		AV-25MT35/P
	9	GG10372-001A-H	BASS CUSHION		AV-25MT35/P
	10	RM-C1287-1H	REMOCON UNIT		
	11	GG20070-002A-H	CORNER LABEL	(x2)	AV-25MT35/P
	11	GG20025-005A-H	CORNER LABEL	(x2)	AV-25MT15/P
	11	GG20025-005A-H	CORNER LABEL	(x2)	AV-25VA15/P
⚠	12	GG30037-001A-H	TAIWAN LABEL		AV-25MT35/P,AV-25MT15/P